

Dell Latitude E6420 and E6420 ATG Owner's Manual

Regulatory Model P15G
Regulatory Type P15G001, P15G002



หมายเหตุ ข้อควรระวัง และคำเตือน



หมายเหตุ: 'หมายเหตุ' จะระบุถึงข้อมูลที่สำคัญที่จะช่วยให้คุณใช้งานคอมพิวเตอร์ได้มีประสิทธิภาพยิ่งขึ้น



ข้อควรระวัง: 'ข้อควรระวัง' จะชี้ถึงโอกาสเกิดความเสียหายกับฮาร์ดแวร์หรือการสูญหายของข้อมูลหากไม่ปฏิบัติตามคำแนะนำ



คำเตือน: 'คำเตือน' ใช้เพื่อแจ้งอันตรายที่อาจเกิดขึ้นกับสถานที่ การบาดเจ็บหรือการเสียชีวิต

ข้อมูลในเอกสารชุดนี้อาจมีการเปลี่ยนแปลงโดยไม่ต้องแจ้งให้ทราบ

© 2011 Dell Inc. สงวนลิขสิทธิ์

ห้ามคัดลอกเอกสารข้อมูลทั้งหมดนี้ซ้ำโดยเด็ดขาดไม่ว่าด้วยวิธีการใดๆ โดยมีได้รับอนุญาตอย่างเป็นทางการเป็นลายลักษณ์อักษรจาก Dell Inc.

เครื่องหมายการค้าที่ใช้ในเอกสารนี้ : Dell™, เครื่องหมาย DELL, Dell Precision™, Precision ON™, ExpressCharge™, Latitude™, Latitude ON™, OptiPlex™, Vostro™ และ Wi-Fi Catcher™ เป็นเครื่องหมายการค้าของ Dell Inc. Intel®, Pentium®, Xeon®, Core™, Atom™, Centrino® และ Celeron® เป็นเครื่องหมายการค้าจดทะเบียนหรือเครื่องหมายการค้าของ Intel Corporation ทั้งในสหรัฐอเมริกาและประเทศอื่นๆ AMD® เป็นเครื่องหมายการค้าจดทะเบียน และ AMD Opteron™, AMD Phenom™, AMD Sempron™, AMD Athlon™, ATI Radeon™ และ ATI FirePro™ เป็นเครื่องหมายการค้าของ Advanced Micro Devices, Inc. Microsoft®, Windows®, MS-DOS®, Windows Vista® และเครื่องหมายปุ่ม Start ของ Windows Vista และ Office Outlook® เป็นเครื่องหมายการค้าหรือเครื่องหมายการค้าจดทะเบียนของ Microsoft Corporation ในสหรัฐอเมริกาและ/หรือประเทศอื่นๆ Blu-ray Disc™ เป็นเครื่องหมายการค้าของ Blu-ray Disc Association (BDA) และได้รับอนุญาตให้ใช้กับแผ่นดิสก์และเครื่องเล่น Bluetooth® เป็นเครื่องหมายการค้าจดทะเบียนของ Bluetooth® SIG, Inc. และ Dell นำมาใช้โดยได้รับอนุญาตแล้ว Wi-Fi® เป็นเครื่องหมายการค้าจดทะเบียนของ Wireless Ethernet Compatibility Alliance, Inc.

เครื่องหมายการค้าอื่นๆ และชื่อทางการค้าที่ใช้ในเอกสารนี้ จะใช้เพื่ออ้างถึงองค์กรที่เป็นเจ้าของเครื่องหมายการค้าและชื่อทางการค้านั้น หรือเพื่ออ้างถึงผลิตภัณฑ์ขององค์กรเหล่านั้น Dell Inc. ปฏิเสธความเป็นเจ้าของในทรัพย์สิน ในเครื่องหมายการค้า และชื่อทางการค้าใดๆ นอกเหนือจากของ Dell เท่านั้น

2011 – 07

Rev. A00

Contents

หมายเหตุ ข้อควรระวัง และคำเตือน.....	2
บทที่ 1: การทำงานกับส่วนประกอบภายในของคอมพิวเตอร์.....	9
การดำเนินการกับส่วนประกอบภายในของคอมพิวเตอร์.....	9
เครื่องมือที่แนะนำให้ใช้.....	10
การปิดคอมพิวเตอร์.....	10
หลังจากทำงานกับส่วนประกอบภายในของคอมพิวเตอร์.....	11
2 ATG Handle.....	13
Removing The ATG Handle.....	13
Installing The ATG Handle.....	14
3 ATG Port Cover.....	15
Removing the ATG Port Cover.....	15
Installing The ATG Port Cover.....	16
4 Modem Connector Plug.....	17
Removing the Modem Connector Plug.....	17
Installing the Modem Connector Plug.....	18
5 ExpressCard.....	19
Removing the ExpressCard.....	19
Installing the ExpressCard.....	19
บทที่ 6: แบตเตอรี่.....	21
Removing the Battery.....	21
Installing the Battery.....	22
7 Subscriber Identity Module (SIM) Card.....	23
Removing the Subscriber Identity Module (SIM) Card.....	23

Installing the Subscriber Identity Module (SIM) Card.....	24
8 Secure Digital (SD) Card.....	25
Removing the Secure Digital (SD) Card.....	25
Installing the Secure Digital (SD) Card.....	25
9 Base Cover.....	27
Removing the Base Cover.....	27
Installing the Base Cover.....	28
บทที่ 10: Hard Drive.....	29
Removing the Hard Drive.....	29
Installing the Hard Drive.....	30
บทที่ 11: Optical Drive.....	31
Removing The Optical Drive.....	31
Installing the Optical Drive.....	34
12 Memory Card.....	35
Removing the Memory Card.....	35
Installing the Memory Card.....	36
บทที่ 13: Wireless Local Area Network (WLAN) Card.....	37
Removing the Wireless Local Area Network (WLAN) Card.....	37
Installing the Wireless Local Area Network (WLAN) Card.....	39
14 Wireless Wide Area Network (WWAN) Card.....	41
Removing the Wireless Wide Area Network (WWAN) Card.....	41
Installing the Wireless Wide Area Network (WWAN) Card.....	43
บทที่ 15: Coin-Cell Battery.....	45
Removing the Coin-Cell Battery.....	45
Installing the Coin-Cell Battery.....	46

บทที่ 16: Heat Sink.....	47
Removing The Heat Sink.....	47
Installing The Heat Sink.....	49
บทที่ 17: Bluetooth Card.....	51
Removing the Bluetooth Card.....	51
Installing the Bluetooth Card.....	53
18 Keyboard Trim.....	55
Removing the Keyboard Trim.....	55
Installing the Keyboard Trim.....	56
19 Keyboard.....	57
Removing the Keyboard.....	57
Installing the Keyboard.....	60
20 Modem Card.....	61
Removing the Modem Card.....	61
Installing the Modem Card.....	63
21 Palm Rest.....	65
Removing the Palm Rest Assembly.....	65
Installing the Palm Rest Assembly.....	68
22 Smart Card Reader.....	69
Removing the Smart Card.....	69
Installing the Smart Card.....	71
23 Media Board.....	73
Removing The Media Board.....	73
Installing the Media Board.....	75
24 ExpressCard Cage.....	77
Removing the ExpressCard Cage.....	77

Installing the ExpressCard Cage.....	78
บทที่ 25: ส่วนประกอบของบอร์ดระบบ.....	79
Removing the System Board.....	79
Installing the System Board.....	84
บทที่ 26: Speaker.....	85
Removing the Speakers.....	85
Installing the Speakers.....	87
27 Modem Connector.....	89
Removing the Modem Connector.....	89
Installing the Modem Connector.....	93
บทที่ 28: Input/Output Panel.....	95
Removing the Input/Output (I/O) Board.....	95
Installing the Input/Output (I/O) Board.....	97
29 DC-In Port.....	99
Removing DC-in Port.....	99
Installing DC-In Port.....	102
30 Display Assembly.....	103
Removing the Display Assembly.....	103
Installing the Display Assembly.....	106
31 Display Hinges.....	107
Removing the Display Hinge Covers.....	107
Installing the Display Hinge Covers.....	110
32 Display Bezel.....	111
Removing the Display Bezel.....	111
Installing the Display Bezel.....	112

บทที่ 33: Display Panel	113
Removing the Display Panel.....	113
Installing the Display Panel.....	115
34 Display Bracket	117
Removing the Display Bracket.....	117
Installing the Display Bracket.....	117
บทที่ 35: Camera	119
Removing the Camera.....	119
Installing the Camera.....	120
บทที่ 36: รายละเอียดทางเทคนิค	121
Technical Specifications.....	121
บทที่ 37: System Setup	129
Setup Overview.....	129
Entering System Setup.....	129
System Setup Menu.....	129
บทที่ 38: การวินิจฉัยระบบ	141
Diagnostic LED Codes.....	141
Battery Status Lights.....	142
Device Status Lights.....	143
บทที่ 39: การติดต่อกับ Dell	145
การติดต่อกับ Dell.....	145

การทำงานกับส่วนประกอบภายในของคอมพิวเตอร์ 1

การดำเนินการกับส่วนประกอบภายในคอมพิวเตอร์

ปฏิบัติตามคำแนะนำต่อไปนี้เพื่อปกป้องคอมพิวเตอร์จากความเสียหาย และเพื่อความปลอดภัยของตัวเอง ขั้นตอนที่เกี่ยวข้องในเอกสารนี้แนะนำให้ดำเนินการได้จนถึงต่อไปนี้ ยกเว้นมีระบุไว้เป็นอย่างอื่น:

- คุณได้ปฏิบัติตามขั้นตอนในหัวข้อ การทำงานกับส่วนประกอบภายในคอมพิวเตอร์
- คุณได้อ่านข้อมูลด้านความปลอดภัยที่ให้มาพร้อมกับคอมพิวเตอร์ของคุณแล้ว
- ส่วนประกอบที่สามารถเปลี่ยนใหม่ หรือในกรณีของส่วนประกอบจัดซื้อแยกจะคิดค่าตามขั้นตอนการถอดโดยชื่อนำดับขั้นตอน



คำเตือน: ก่อนดำเนินการกับส่วนประกอบภายในคอมพิวเตอร์ กรุณาอ่านข้อมูลด้านความปลอดภัยที่จัดมาให้พร้อมกับคอมพิวเตอร์ก่อนในเบื้องต้น ดูรายละเอียดเพิ่มเติมด้านความปลอดภัยได้จากโฮมเพจการควบคุมมาตรฐานได้ที่ www.dell.com/regulatory_compliance



ข้อควรระวัง: การซ่อมแซมหลายส่วนสามารถดำเนินการได้โดยช่างที่ผ่านการรับรองเท่านั้น คุณสามารถแก้ไขปัญหาและซ่อมแซมเครื่องเบื้องต้นตามที่แนะนำในเอกสารกำกับผลิตภัณฑ์ หรือตามที่ให้บริการและช่วยเหลือระบบออนไลน์หรือโทรศัพท์แห่งนั้น ความเสียหายเนื่องจากการซ่อมแซมที่ไม่ได้รับการรับรองจาก **Dell** จะไม่ได้รับความคุ้มครองตามการรับประกัน อ่านและปฏิบัติตามคำแนะนำด้านความปลอดภัยที่จัดมาให้พร้อมกับผลิตภัณฑ์



ข้อควรระวัง: เพื่อป้องกันไฟฟ้าสถิต ให้คลายประจุไฟฟ้าสถิตในตัวคุณโดยการใส่สายรัดข้อมือป้องกันไฟฟ้าสถิต หรือให้สัมผัสพื้นผิวโลหะที่ไม่ทาสี เช่น ช่องต่อที่ด้านหลังของคอมพิวเตอร์ เป็นระยะ ๆ



ข้อควรระวัง: ใช้งานส่วนประกอบและการ์ดด้วยความระมัดระวัง อย่าสัมผัสที่ส่วนประกอบหรือหน้าสัมผัสของการ์ด ถือการ์ดจากขอบหรือที่หูยึดโลหะ ถือส่วนประกอบ เช่น โปรเซสเซอร์ที่ขอบ อย่าจับที่ขนาหน้าสัมผัส



ข้อควรระวัง: ในกรณีที่ต้องการปลดสายต่อ ให้ดึงที่ขั้วต่อหรือแถบดึง อย่าดึงที่สาย สายบางชนิดมีขั้วต่อพร้อมแถบล็อก หากคุณปลดสายเหล่านี้ให้กดที่แถบล็อกก่อนนำสายต่อออก ขณะดึงขั้วต่อออก ให้ดึงตามแนวที่ตั้งเพื่อไม่ให้ขั้วต่อเกิดการงอ ก่อนถอดสาย ตรวจสอบก่อนว่าขั้วต่อทั้งสองได้แนวถูกต้องแล้ว



หมายเหตุ: สีของคอมพิวเตอร์และของส่วนประกอบบางอย่างอาจไม่เหมือนกับสีที่แสดงในเอกสารนี้

เพื่อป้องกันความเสียหายที่อาจเกิดขึ้นกับคอมพิวเตอร์ ให้ปฏิบัติตามขั้นตอนต่อไปนี้ก่อนทำงานกับภายในของคอมพิวเตอร์

1. ตรวจสอบว่าพื้นผิวที่ใช้วางคอมพิวเตอร์นั้นเรียบและสะอาดเพื่อป้องกันไม่ให้ฝาครอบคอมพิวเตอร์มีรอยขีดข่วน
2. ปิดคอมพิวเตอร์ (ดูในหัวข้อ *การปิดคอมพิวเตอร์*)
3. หากคอมพิวเตอร์ต่ออยู่กับอุปกรณ์พ่วง (ชุดพ่วงอุปกรณ์เสริม) เช่น **Media Base** หรือ **Battery Slice** ให้ปลดการเชื่อมต่อ

△ ข้อควรระวัง: ปลดสายเครือข่ายโดยถอดสายออกจากคอมพิวเตอร์ก่อน แล้วจึงถอดสายจากอุปกรณ์เครือข่าย

4. ถอดสายโทรศัพท์หรือสายเครือข่ายทั้งหมดออกจากคอมพิวเตอร์
5. ถอดปลั๊กคอมพิวเตอร์และอุปกรณ์ต่าง ๆ ทั้งหมดที่ต่ออยู่กับคอมพิวเตอร์ออกจากตัวรับไฟฟ้า
6. ปิดฝาจอแสดงผลและพลิกคอมพิวเตอร์คว่ำลงบนพื้นผิวเรียบ

 **หมายเหตุ:** คุณต้องถอดแบตเตอรี่หลักออกก่อนทำการดูแลรักษาคอมพิวเตอร์ เพื่อป้องกันไม่ให้นับรูดเสียหาย

7. ถอดแบตเตอรี่หลักออก
8. พลิกคอมพิวเตอร์ขึ้น
9. เปิดจอแสดงผล
10. กดปุ่มเปิด/ปิดเครื่องเพื่อคายประจุเมมโมรี่

△ ข้อควรระวัง: เพื่อป้องกันไฟฟ้าช็อต ให้ถอดปลั๊กคอมพิวเตอร์ออกจากตัวรับทุกครั้งก่อนจะถอดฝาครอบออก

△ ข้อควรระวัง: ก่อนสัมผัสส่วนประกอบด้านในคอมพิวเตอร์ ให้ลงกราวด์ตัวเองโดยสัมผัสพื้นผิวโลหะที่ไม่มีการเคลือบผิว เช่น โลหะที่ด้านหลังคอมพิวเตอร์ ขณะปฏิบัติงาน ให้สัมผัสพื้นผิวโลหะไม่เคลือบผิวเป็นประจำเพื่อคายประจุไฟฟ้าสถิตที่อาจเป็นอันตรายต่อส่วนประกอบภายในของคอมพิวเตอร์

11. ถอด ExpressCards หรือ Smart Cards จากช่องเสียบ

เครื่องมือที่แนะนำให้ใช้


ขั้นตอนต่าง ๆ ในเอกสารนี้อาจจำเป็นต้องใช้เครื่องมือต่อไปนี้ :

- ไขควงปากแบนขนาดเล็ก
- ไขควงหัวแฉกเบอร์ 0
- ไขควงหัวแฉกเบอร์ 1
- แท่งพลาสติกขนาดเล็กสำหรับจัด
- ซีดีโปรแกรมอัปเดตเฟลช BIOS

การปิดคอมพิวเตอร์

△ ข้อควรระวัง: เพื่อป้องกันการสูญหายของข้อมูล ให้บันทึกและปิดไฟทั้งหมดที่เปิดอยู่ และออกจากโปรแกรมต่าง ๆ ก่อนที่จะปิดคอมพิวเตอร์

1. ปิดระบบปฏิบัติการ
 - สำหรับ Windows Vista :

คลิก **Start**  จากนั้นคลิกที่ลูกศรที่มุมด้านขวาล่างของเมนู **Start** ตามภาพด้านล่าง จากนั้นคลิกเลือก **Shut Down**



- สำหรับ Windows XP:

คลิก **Start** → **Turn Off Computer** → **Turn Off** คอมพิวเตอร์จะปิดทำงานหลังจากระบบปฏิบัติการปิดการทำงานเสร็จสิ้น

2. ตรวจสอบว่าคอมพิวเตอร์และอุปกรณ์ทั้งหมดที่ต่อพ่วงปิดทำงานแล้ว หากคอมพิวเตอร์และอุปกรณ์ต่อพ่วงไม่ปิดการทำงานอัตโนมัติเมื่อปิดระบบปฏิบัติการ ให้กดปุ่มเปิดปิดเครื่องค้างไว้ประมาณ 4 วินาทีเพื่อปิดการทำงาน

หลังจากทำงานกับส่วนประกอบภายในของคอมพิวเตอร์

หลังจากที่คุณดำเนินการเปลี่ยนชิ้นส่วนใด ๆ เสร็จสิ้นแล้ว ตรวจสอบว่าคุณได้ต่ออุปกรณ์ต่อพ่วง การ์ด และสายใด ๆ ให้เรียบร้อยก่อนที่จะเปิดเครื่องคอมพิวเตอร์ของคุณ



ข้อควรระวัง: เพื่อป้องกันความเสียหายต่อคอมพิวเตอร์ ให้ใช้เฉพาะแบตเตอรี่ที่ได้รับการออกแบบมาสำหรับคอมพิวเตอร์ **Dell** รุ่นนี้โดยเฉพาะ ห้ามใช้แบตเตอรี่ที่ออกแบบมาสำหรับคอมพิวเตอร์ของ **Dell** รุ่นอื่น

1. ต่ออุปกรณ์ต่อพ่วง เช่น ตัวจำลองพอร์ต, battery slice หรือ media base แล้วใส่การ์ด เช่น ExpressCard กลับเข้าที่
2. เสียบสายโทรศัพท์หรือสายเครือข่ายเข้ากับคอมพิวเตอร์



ข้อควรระวัง: สำหรับการเสียบสายเครือข่าย ให้เสียบสายเข้ากับอุปกรณ์เครือข่ายก่อน แล้วจึงเสียบสายอีกด้านเข้ากับคอมพิวเตอร์

3. ใส่แบตเตอรี่กลับเข้าที่
4. เสียบปลั๊กคอมพิวเตอร์และอุปกรณ์ต่าง ๆ ทั้งหมดที่ต่ออยู่กับคอมพิวเตอร์เข้ากับตัวรับไฟฟ้า
5. เปิดคอมพิวเตอร์

ATG Handle


2

Removing The ATG Handle

1. Follow the procedures in *Before Working On Your Computer*.
2. Remove the screws that secure the ATG handle to the computer.



3. Remove the ATG handle out of the computer.

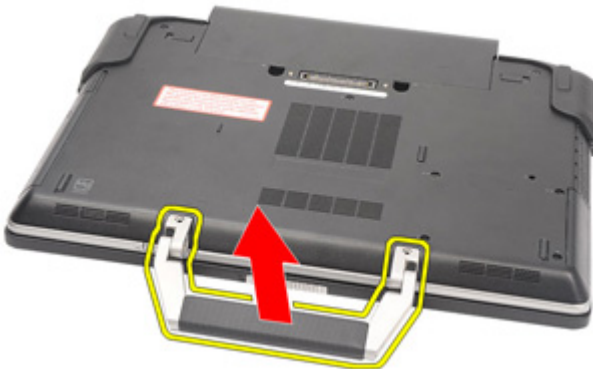

Installing The ATG Handle

1. Place the ATG handle and tighten the screws that secure it to the computer.
2. Follow the procedures in *After working inside your computer*.

ATG Port Cover

3

Removing the ATG Port Cover

1. Follow the procedures in *Before Working On Your Computer*.
2. Remove the screws on the right ATG Port Cover.



3. Remove the right ATG port cover.



4. Remove the screws on the left ATG port cover.



5. Remove the left ATG Port Cover.



Installing The ATG Port Cover


1. Place the ATG Port Covers and tighten the screws that secure it to the computer.
2. Follow the procedures in *After working inside your computer*.

Modem Connector Plug

4

Removing the Modem Connector Plug

1. Follow the procedures in *Before Working On Your Computer*.
2. Remove the *battery*.
3. Pop open the rubber cover.
4. Identify the pin hole.

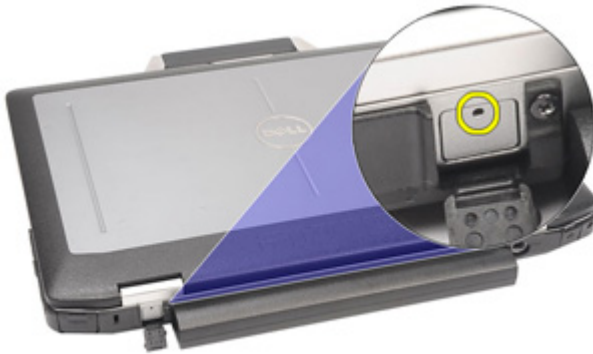

5. Insert a pin into the hole and pull the pin upwards to release the latch cover.



6. Remove the cover.



Installing the Modem Connector Plug

1. Place the modem cover.
2. Identify the pin hole and insert a pin into the hole and pull the pin to lock the cover.
3. Lock the rubber cover.
4. Install the *Battery*.
5. Follow the procedures in *After Working Inside Your Computer*.

ExpressCard

5

Removing the ExpressCard

1. Follow the procedures in *Before Working On Your Computer*.
2. Press in on the ExpressCard to release it from the computer.



3. Slide the ExpressCard out of the computer.



Installing the ExpressCard

1. Slide the ExpressCard into its slot until it clicks into place.
2. Follow the procedures in *After working inside your computer*.

Removing the Battery

1. Follow the procedures in *Before Working On Your Computer*.
2. Slide the battery latches toward the unlock position.



3. Slide the battery out of the computer and remove it.



Installing the Battery

1. Slide the battery into its slot until it clicks into place.
2. Follow the procedures in *After working inside your computer*.

Subscriber Identity Module (SIM) Card


7

Removing the Subscriber Identity Module (SIM) Card

1. Follow the procedures in *Before Working On Your Computer*.
2. Remove the *Battery*.
3. Insert the SIM card into the slot.



4. Remove the SIM card from the system.

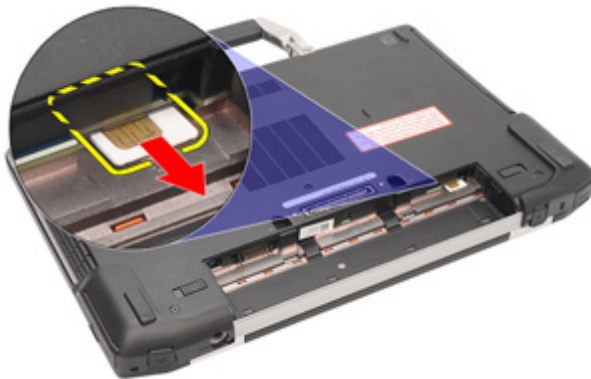

Installing the Subscriber Identity Module (SIM) Card

1. Slide the SIM card into its slot.
2. Install the *Battery*.
3. Follow the procedures in *After Working Inside Your Computer*.

Secure Digital (SD) Card

8

Removing the Secure Digital (SD) Card

1. Follow the procedures in *Before Working On Your Computer*.
2. Press in on the SD card to release the SD card from the computer.



3. Slide the SD card out of the computer.



Installing the Secure Digital (SD) Card


1. Slide the Secure Digital (SD) card into its slot until it clicks into place.
2. Follow the procedures in *After working inside your computer*.

Base Cover

9

Removing the Base Cover

1. Follow the procedures in *Before Working On Your Computer*.
2. Remove the *ATG Handle* (only for E6420 ATG systems).
3. Remove the *ATG Port Cover* (only for E6420 ATG systems).
4. Remove the *Battery*.
5. Remove the *SD Card*.
6. Remove the screws that secure the base cover to the computer.

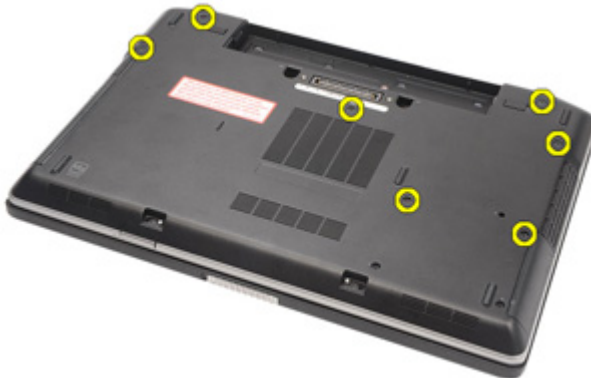

7. Lift the base cover up and away from the computer.



Installing the Base Cover

1. Place the base cover to align the screw holes correctly with the computer.
2. Tighten the screws that secure the base cover to the computer.
3. Install the *Secure Digital (SD) Card*.
4. Install the *Battery*.
5. Install the *ATG Port Cover* (only for E6420 ATG systems).
6. Install the *ATG Handle* (only for E6420 ATG systems).
7. Follow the procedures in *After Working Inside Your Computer*.

Hard Drive

10

Removing the Hard Drive

1. Follow the procedures in *Before Working On Your Computer*.
2. Remove the *Battery*.
3. Remove the screws that secure the hard drive to the computer.




4. Slide and remove the hard drive out of the computer.



5. Remove the screw that secures the hard drive caddy to the hard drive.



6. Pull and remove the hard drive caddy away from the hard drive.

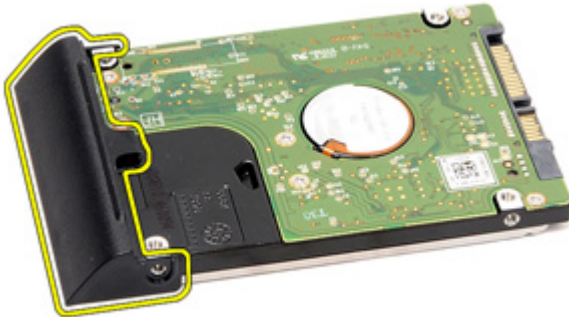

Installing the Hard Drive

1. Attach the hard drive caddy to the hard drive.
2. Tighten the screw to secure the hard-drive caddy to the hard drive.
3. Slide the hard drive into the computer.
4. Replace and tighten the screws that secure the hard drive to the computer.
5. Install the *Battery*.
6. Follow the procedures in *After working inside your computer*.

Optical Drive

Removing The Optical Drive

1. Follow the procedures in *Before Working On Your Computer*.
2. Remove the *Battery*.
3. Push in the drive latch into the slot.




4. Pull the optical drive using the drive latch.




5. Pull the optical drive door from one side to release it.



6. Pull the other side of the optical drive door to release it completely from the optical drive.

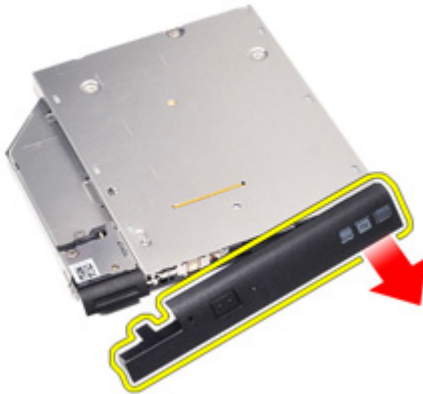

7. Remove the screw that secures the drive latch to the optical drive.

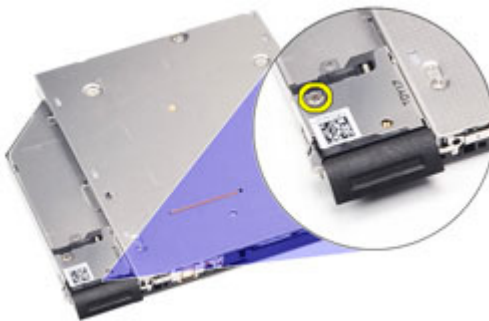

8. Remove the drive latch from the optical drive.



9. Remove the screws that secures the drive latch bracket to the optical drive.



10. Remove the drive latch bracket from the optical drive.



Installing the Optical Drive


1. Insert the drive latch bracket into the optical drive.
2. Tighten the screws that secure the drive latch bracket to the optical drive.
3. Insert the drive latch into the optical drive.
4. Tighten the screw that secures the drive latch to the optical drive.
5. Push one side of the optical drive door to insert it completely into the optical drive.
6. Pull the optical drive door from one side to insert it from the side.
7. Insert the optical drive using the drive latch.
8. Place the drive latch into the slot.
9. Install the *Battery*.
10. Follow the procedures in *After working inside your computer*.

Memory Card


12

Removing the Memory Card

1. Follow the procedures in *Before Working On Your Computer*
2. Remove the *ATG Handle* (only for E6420 ATG systems).
3. Remove the *ATG Port Cover* (only for E6420 ATG systems).
4. Remove the *battery*.
5. Remove the *Secure Digital (SD) card*.
6. Remove the *base cover*.
7. Use your fingertips to spread apart the securing clips on each end of the memory module connector until the memory module pops up.

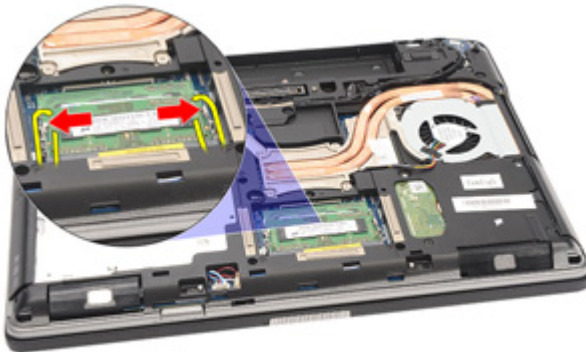

8. Remove the memory module from its connector on the system board by drawing the module from the system board at a 45-degree angle.

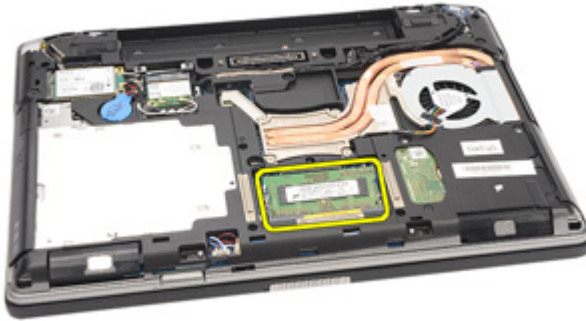

Installing the Memory Card


1. Push the memory module into the memory slot.
2. Press the clips to secure the memory module to the system board.
3. Install the *Base Cover*.
4. Install the *Secure Digital (SD) card*.
5. Install the *Battery*.
6. Install the *ATG Port Cover* (only for E6420 ATG systems).
7. Install the *ATG Handle* (only for E6420 ATG systems).
8. Follow the procedures in *After Working Inside Your Computer*.

Wireless Local Area Network (WLAN) Card


13

Removing the Wireless Local Area Network (WLAN) Card

1. Follow the procedures in *Before Working On Your Computer*.
2. Remove the *ATG Handle* (only for E6420 ATG systems).
3. Remove the *ATG Port Cover* (only for E6420 ATG systems).
4. Remove the *battery*.
5. Remove the *Secure Digital (SD) card*.
6. Remove the *base cover*.
7. Disconnect the antenna cables from the WLAN card.

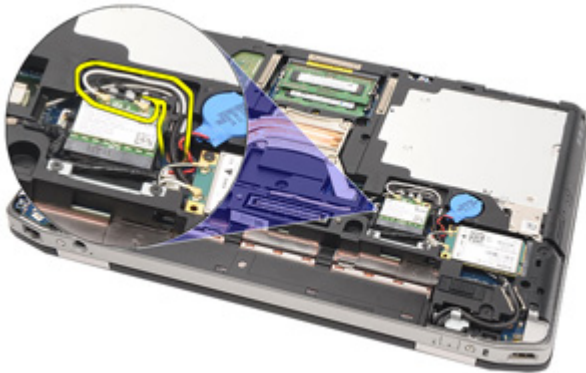

8. Remove the screw that secures the WLAN card to the computer.

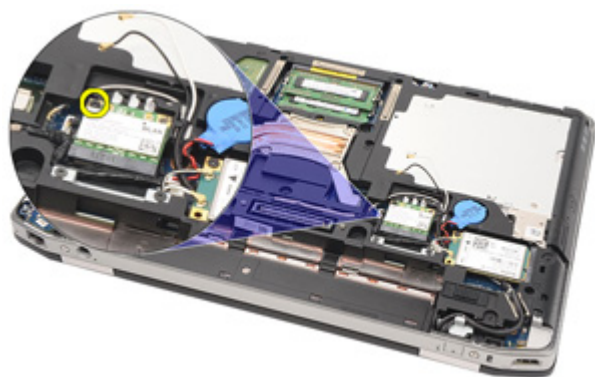

9. Slide and remove the WLAN card out from its slot on the system board.



Installing the Wireless Local Area Network (WLAN) Card


1. Insert the WLAN card into its connector at a 45-degree angle.
2. Replace and tighten the screw that secures the WLAN card to the computer.
3. Connect the antenna cables to their respective connectors marked on the WLAN card.
4. Install the *ATG Port Cover* (only for E6420 ATG systems).
5. Install the *ATG Handle* (only for E6420 ATG systems).
6. Install the *base cover*.
7. Install the *Secure Digital (SD) card*.
8. Install the *battery*.
9. Follow the procedures in *After Working Inside Your Computer*.

Wireless Wide Area Network (WWAN) Card


14

Removing the Wireless Wide Area Network (WWAN) Card


1. Follow the procedures in *Before Working On Your Computer*.
2. Remove the *ATG Handle* (only for E6420 ATG systems).
3. Remove the *ATG Port Cover* (only for E6420 ATG systems).
4. Remove the *Battery*.
5. Remove the *SD Card*.
6. Remove the *Base Cover*.
7. Disconnect the antenna cables from the WWAN card.

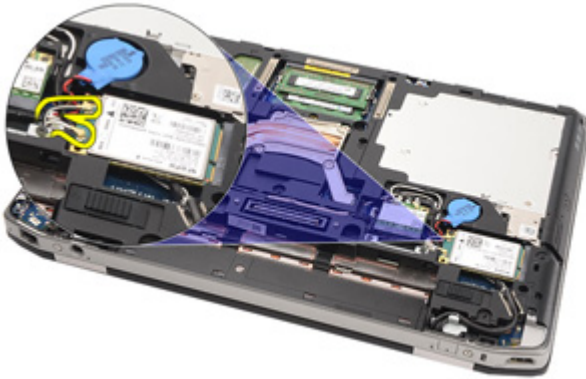

8. Remove the screw that secures the WWAN card to the computer.

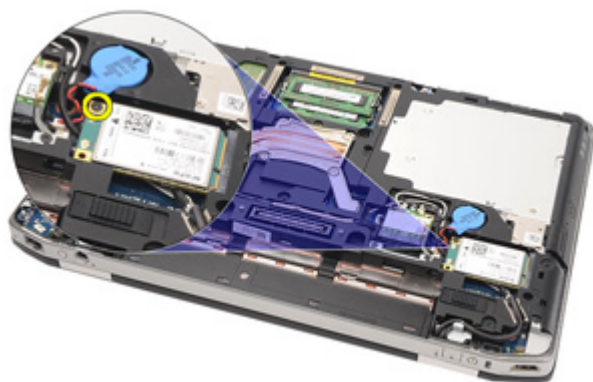

9. Slide the WWAN card from its connector and remove it from the computer.

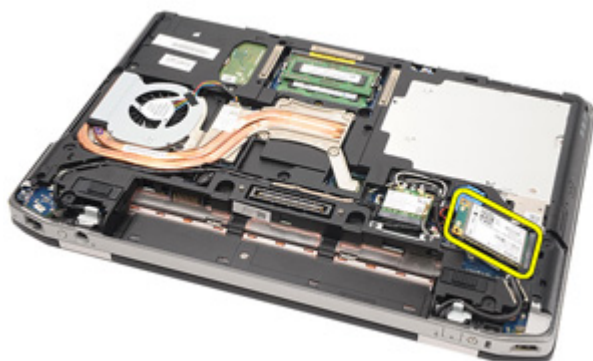

Installing the Wireless Wide Area Network (WWAN) Card


1. Insert the WWAN card into its connector at a 45-degree angle.
2. Replace and tighten the screw that secures the WWAN card to the computer.
3. Connect the antenna cables to their respective connectors marked on the WWAN card.
4. Install the *Base Cover*.
5. Install the *Secure Digital (SD) Card*.
6. Install the *Battery*.
7. Install the *ATG Port Cover* (only for E6420 ATG systems).
8. Install the *ATG Handle* (only for E6420 ATG systems).
9. Follow the procedures in *After Working Inside Your Computer*.

Coin-Cell Battery


15

Removing the Coin-Cell Battery


1. Follow the procedures in *Before Working on Your Computer*.
2. Remove the *ATG Handle* (only for E6420 ATG systems).
3. Remove the *ATG Port Cover* (only for E6420 ATG systems).
4. Remove the *Battery*.
5. Remove the *SD Card*.
6. Remove the *Base Cover*.
7. Disconnect any antennas routed over the coin cell battery.

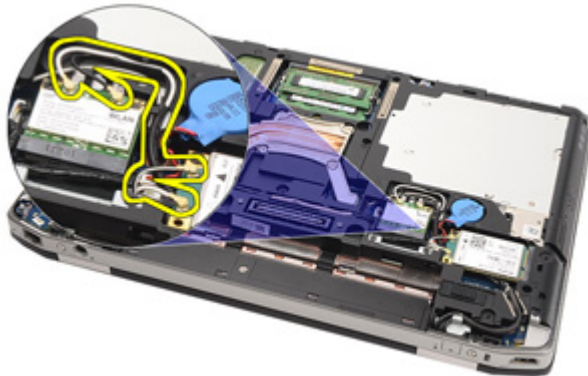

8. Disconnect the coin-cell battery cable from the system board.

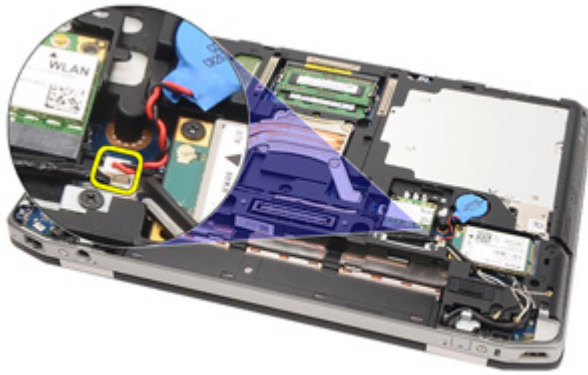

9. Release and remove the coin-cell battery from the computer.

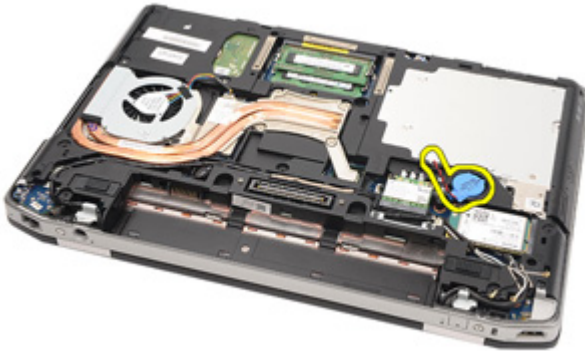


Installing the Coin-Cell Battery


1. Place the coin-cell battery in its location.
2. Connect the coin-cell battery cable to the system board.
3. Connect any antennas that were routed over the coin cell battery.
4. Install the *Base Cover*.
5. Install the *Secure Digital (SD) card*.
6. Install the *Battery*.
7. Install the *ATG Port Cover* (only for E6420 ATG systems).
8. Install the *ATG Handle* (only for E6420 ATG systems).
9. Follow the procedures in *After Working Inside Your Computer*.

Removing The Heat Sink

1. Follow the procedures in *Before Working On Your Computer*.
2. Remove the *ATG Handle* (only for E6420 ATG systems).
3. Remove the *ATG Port Cover* (only for E6420 ATG systems).
4. Remove the *Battery*.
5. Remove the *SD Card*.
6. Remove the *Base Cover*.
7. Disconnect the heat sink assembly cable.

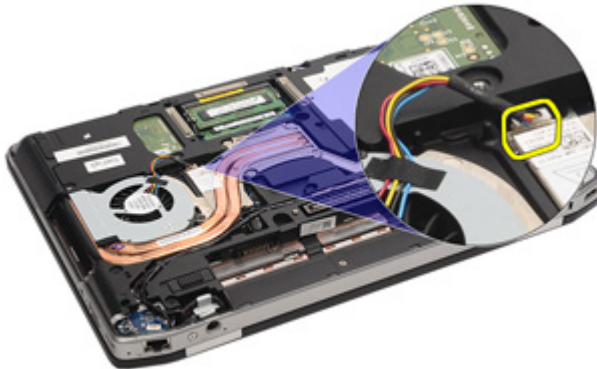

8. Loosen the screws securing the heat sink.

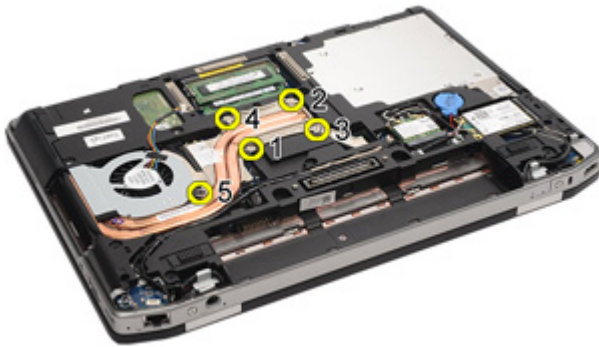

9. Remove the heat sink assembly from the system.



10. Rotate the processor cam lock in a counter-clockwise direction.



11. Remove the processor from the system.




Installing The Heat Sink

1. Insert the processor back into the system.
2. Rotate the processor cam lock in a clockwise direction.
3. Place the heat sink assembly into the system.
4. Tighten the four screws securing the heat sink.
5. Connect the heat sink assembly cable.
6. Install the *Base Cover*.
7. Install the *Secure Digital (SD) Card*.
8. Install the *Battery*.
9. Install the *ATG Port Cover* (only for E6420 ATG systems).
10. Install the *ATG Handle* (only for E6420 ATG systems).
11. Follow the procedures in *After Working Inside Your Computer*.

Bluetooth Card

Removing the Bluetooth Card


1. Follow the procedures in *Before Working On Your Computer*.
2. Remove the *ATG Handle* (only for E6420 ATG systems).
3. Remove the *ATG Port Cover* (only for E6420 ATG systems).
4. Remove the *Battery*.
5. Remove the *Secure Digital Card*.
6. Remove the *Base Cover*.
7. Remove the *Hard Drive*.
8. Remove the screw that secures the bluetooth card to the computer

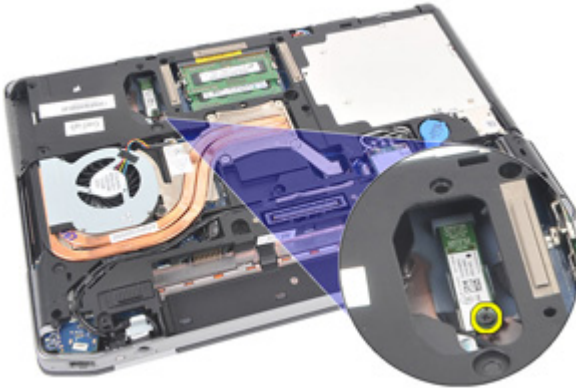

9. Remove the bluetooth card from the holder.



10. Disconnect the bluetooth cable.

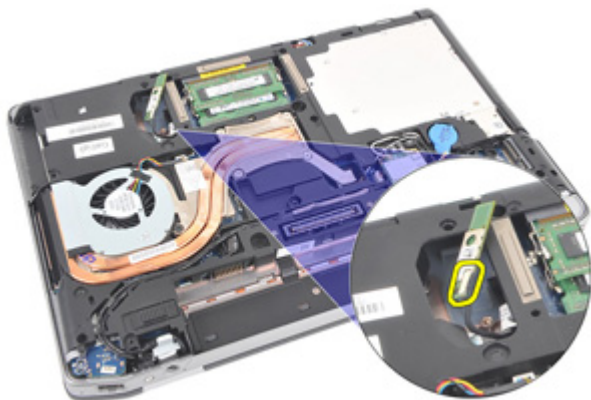

Installing the Bluetooth Card

1. Connect the bluetooth cable to the bluetooth card.
2. Replace and tighten the screw to secure the bluetooth card to the computer.
3. Install the *Hard Drive*.
4. Install the *Base Cover*.
5. Install the *SD Card*.
6. Install the *Battery*.
7. Install the *ATG Port Cover* (only for E6420 ATG systems).
8. Install the *ATG Handle* (only for E6420 ATG systems).
9. Follow the procedures in *After Working Inside Your Computer*.

Keyboard Trim

18

Removing the Keyboard Trim

1. Follow the procedures in *Before Working On Your Computer*.
2. Using a plastic scribe, pry the keyboard trim from the top edge to release it from the computer.



3. Pry along the sides.



4. Release the tabs part of the trim.



5. Gently lift the keyboard trim to release it from the computer.



Installing the Keyboard Trim

1. Align the keyboard trim with the keyboard and gently snap it into place.
2. Follow the procedures in *After Working Inside Your Computer*.

Keyboard

19

Removing the Keyboard

1. Follow the procedures in *Before Working On Your Computer*.
2. Remove the *Battery*.
3. Remove the *Keyboard Trim*.
4. Remove the screws that secure the keyboard at the bottom of the computer.



5. Remove the screws that secure the keyboard on the system.



6. Carefully flip the keyboard over and lay it toward the display.




7. Disconnect the keyboard cable from the system board.




8. Remove the keyboard from the computer.




9. Remove the tape securing the keyboard cable from the keyboard.

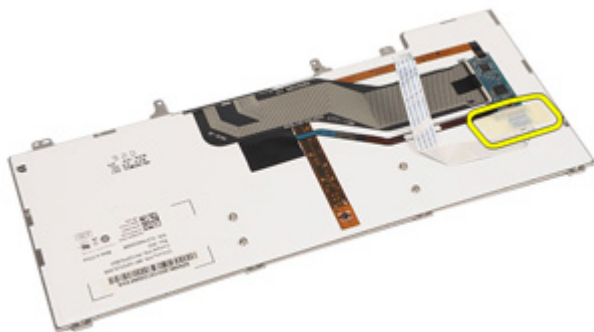

10. Unlock the cable holder.

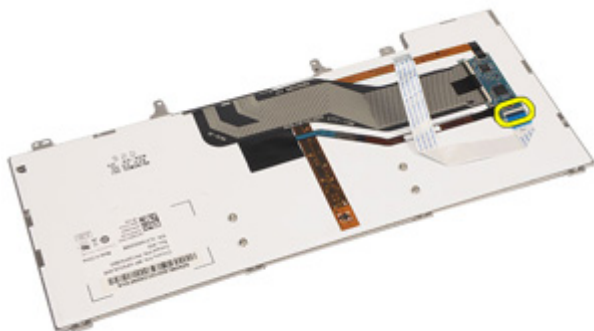

11. Disconnect and remove the keyboard cable from the keyboard.

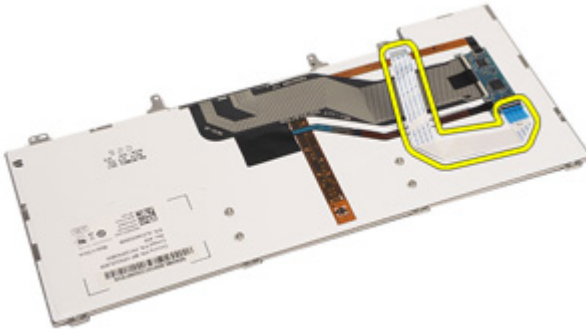

Installing the Keyboard

1. Connect the keyboard cable and secure it to the keyboard using the tape.
2. Connect the keyboard cable to its connector on the system board.
3. Replace and tighten the screws that secure the keyboard to the computer.
4. Install the *Battery*.
5. Install the *Keyboard Trim*
6. Follow the procedures in *After Working Inside Your Computer*.

Modem Card

Removing the Modem Card

1. Follow the procedures in *Before Working On Your Computer*.
2. Remove the *Battery*.
3. Remove the *Keyboard Trim*.
4. Remove the *Keyboard*.
5. Remove the screw securing the modem card to the computer.



6. Pull out the tab from underneath the palmrest.



7. Lift the tab to disconnect the holder.



8. Rotate the modem card at an angle.



9. Remove modem card from the slot away from the computer.



10. Disconnect the modem cable from the modem card and remove it from the system.




Installing the Modem Card

1. Connect the modem cable to the modem card on the system board.
2. Place the modem card in its slot in the computer.
3. Tighten the screw securing the modem card to the system.
4. Install the *Keyboard Trim*.
5. Install the *Keyboard*.
6. Install the *Battery*.
7. Follow the procedures in *After working inside your computer*.

Removing the Palm Rest Assembly

1. Follow the procedures in *Before Working On Your Computer*.
2. Remove the *ATG Handle* (only for E6420 ATG systems).
3. Remove the *ATG Port Cover* (only for E6420 ATG systems).
4. Remove the *Battery*.
5. Remove the *SD Card*.
6. Remove the *Base Cover*.
7. Remove the *Optical Drive*.
8. Remove the *Hard Drive*.
9. Remove the *WWAN Card*.
10. Remove the *Bluetooth Card*.
11. Remove the *Keyboard Trim*.
12. Remove the *Keyboard*.
13. Remove the screws that secure the palm rest assembly to the computer.

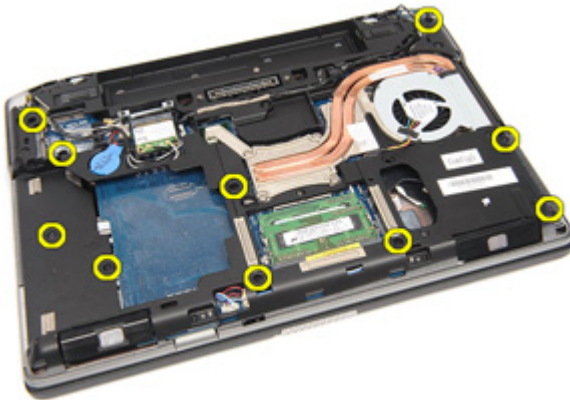

14. Turn the system and remove the screws that secure the palm rest assembly to the computer.



15. Release and disconnect the LED, smart card, touchpad, RFID, and ExpressCard cable from the system board.



16. Using a plastic scribe, gently pry out the top right corner of the palm rest and run along the scribe to the right side of the palm rest to release the snaps.



17. Continue to use the scribe to run along the top and left side of the palm rest until all snaps are released.



18. Lift the top side at a 25-degree angle, pull the palm rest towards the screen, and remove it from the computer.



Installing the Palm Rest Assembly

1. Align the palm rest assembly with the computer and gently snap it into place.
2. Replace and tighten the screws that secure the palm rest assembly to the system board.
3. Connect the LED, smart card, touchpad, RFID, and ExpressCard cables to the system board.
4. Replace and tighten the screws that secure the palm rest assembly to the computer.
5. Install the *Keyboard*.
6. Install the *Keyboard Trim*.
7. Install the *Bluetooth Card*.
8. Install the *WWAN Card*.
9. Install the *Hard Drive*.
10. Install the *Optical Drive*.
11. Install the *Base Cover*.
12. Install the *Secure Digital (SD) Card*.
13. Install the *Battery*.
14. Install the *ATG Port Cover* (only for E6420 ATG systems).
15. Install the *ATG Handle* (only for E6420 ATG systems).
16. Follow the procedures in *After Working Inside Your Computer*.

Smart Card Reader

22

Removing the Smart Card

1. Follow the procedures in *Before Working On Your Computer*.
2. Remove the *ATG Handle* (only for E6420 ATG systems).
3. Remove the *ATG Port Cover* (only for E6420 ATG systems).
4. Remove the *Battery*.
5. Remove the *SD Card*.
6. Remove the *Base Cover*.
7. Remove the *Hard Drive*.
8. Remove the *Keyboard Trim*.
9. Remove the *Keyboard*.
10. Remove the *Palmrest Assembly*.
11. Remove the Smart Card Reader cable from the system board.



12. Remove the screws securing the Smart Card Reader to the computer.



13. Remove the Smart Card Reader from the computer.



Installing the Smart Card

1. Replace the Smart Card Reader in the computer in its original position.
2. Tighten the screws of the Smart Card Reader.
3. Connect the Smart Card Reader cable on the system board.
4. Install the *Palmrest Assembly*.
5. Install the *Keyboard*.
6. Install the *Keyboard Trim*.
7. Install the *Hard Drive*.
8. Install the *Base Cover*.
9. Install the *SD Card*.
10. Install the *Battery*.
11. Install the *ATG Port Cover*(only for E6420 ATG systems).
12. Install the *ATG Handle*(only for E6420 ATG systems).
13. Follow the procedures in *After Working Inside Your Computer*.

Media Board

Removing The Media Board

1. Follow the procedures in *Before Working On Your Computer*.
2. Remove the *ATG Handle* (only for E6420 ATG systems).
3. Remove the *ATG Port Cover* (only for E6420 ATG systems).
4. Remove the *Battery*.
5. Remove the *SD Card*.
6. Remove the *Optical Drive*.
7. Remove the *Base Cover*.
8. Remove the *Hard Drive*.
9. Remove the *WWAN Card*.
10. Remove the *Bluetooth Card*.
11. Remove the *Keyboard Trim*.
12. Remove the *Keyboard*.
13. Remove the *Palmrest Assembly*.
14. Disconnect the media board cable from the system board.



15. Remove the screws that secure the media board to the computer.



16. Remove the media board from the computer.



Installing the Media Board

1. Align the media board to its original position on the computer.
2. Replace and tighten the screws that secure the media board to the computer.
3. Connect the media board cable to the system board.
4. Install the ATG Handle (for E6420 ATG systems only).
5. Install the ATG Port Cover (for E6420 ATG systems only).
6. Install the *Palmrest Assembly*.
7. Install the *Keyboard*.
8. Install the *Keyboard Trim*.
9. Install the *WWAN Card*.
10. Install the *Bluetooth Card*.
11. Install the *Hard Drive*.
12. Install the *Optical Drive*.
13. Install the *Base Cover*.
14. Install the *SD Card*.
15. Install the *Battery*.
16. Install the *ATG Port Cover* (only for E6420 ATG systems).
17. Install the *ATG Handle* (only for E6420 ATG systems).
18. Follow the procedures in *After Working Inside Your Computer*.

ExpressCard Cage

Removing the ExpressCard Cage

1. Follow the procedures in *Before Working On Your Computer*.
2. Remove the *ATG Handle* (only for E6420 ATG systems).
3. Remove the *ATG Port Cover* (only for E6420 ATG systems).
4. Remove the *Battery*.
5. Remove the *SD Card*.
6. Remove the *Base Cover*.
7. Remove the *Optical Drive*.
8. Remove the *Hard Drive*.
9. Remove the *Bluetooth Card*.
10. Remove the *Keyboard Trim*.
11. Remove the *Keyboard*.
12. Remove the *Palmrest Assembly*.
13. Remove the screws securing the ExpressCard cage to the computer.



14. Lift the ExpressCard slot to a 45-degree angle and remove the slot.




Installing the ExpressCard Cage

1. Align the ExpressCard cage into its slot.
2. Replace and tighten the screws securing the ExpressCard cage to the computer.
3. Install the *Palm rest Assembly*.
4. Install the *Keyboard*.
5. Install the *Keyboard Trim*.
6. Install the *Bluetooth Card*.
7. Install the *Hard Drive*.
8. Install the *Optical Drive*.
9. Install the *Base Cover*.
10. Install the *Secure Digital (SD) Card*.
11. Install the *Battery*.
12. Install the *ATG Port Cover* (only for E6420 ATG systems).
13. Install the *ATG Handle* (only for E6420 ATG systems).
14. Follow the procedures in *After working inside your computer*.

ส่วนประกอบของบอร์ดระบบ

Removing the System Board

1. Follow the procedures in *Before Working On Your Computer*.
2. Remove the *ATG Handle* (only for E6420 ATG systems).
3. Remove the *ATG Port Cover* (only for E6420 ATG systems).
4. Remove the *Battery*.
5. Remove the *Secure Digital Card*.
6. Remove the *Base Cover*.
7. Remove the *ExpressCard*.
8. Remove the *Optical Drive*.
9. Remove the *Memory*.
10. Remove the *Hard Drive*.
11. Remove the *WLAN Card*.
12. Remove the *WWAN Card*.
13. Remove the *Coin Cell Battery*.
14. Remove the *Heat Sink and Processor*.
15. Remove the *Bluetooth Card*.
16. Remove the *Keyboard Trim*.
17. Remove the *Keyboard*.
18. Remove the *Modem Card*.
19. Remove the *Palmrest Assembly*.
20. Remove the *ExpressCard Cage*.
21. Disconnect and release the speaker cables from the system board.

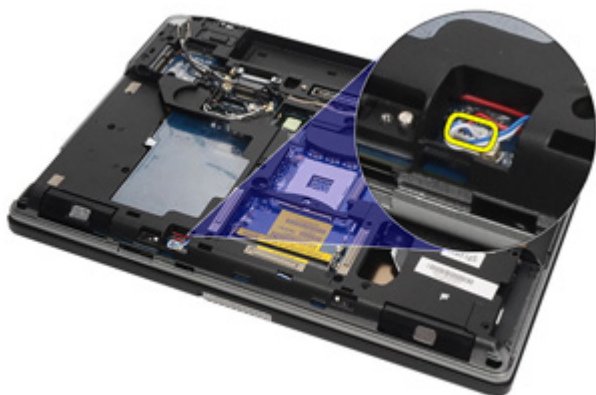

22. Remove the screws from the video cable holder.



23. Remove the video cable holder.



24. Disconnect the video camera and LED cables from the system board.



25. Remove the screw that secures the system board to the computer.



26. Flip and remove the screws from the system board.



27. Remove the Smart Card reader cable, Media Board cable, and DC-in Cable.



28. Disconnect the motherboard from the IO Board.



29. Slide to unlock system board from the port connectors.



30. Remove the system board.



Installing the System Board

1. Align the system board into its original position on the computer.
2. Connect the system board to the I/O board.
3. Connect the Smart Card reader cable, Media Board cable, and DC-in Cable to the system board.
4. Replace and tighten the screws that secure the system board to the computer.
5. Route and connect the video camera and LED cables to the system board.
6. Place the video cable holder and tighten the screws securing the video cable holder to the system board.
7. Connect the speaker cable to the system board.
8. Install the *ExpressCard Cage*
9. Install the *Palmrest Assembly*.
10. Install the *Modem Card*.
11. Install the *Keyboard*.
12. Install the *Keyboard Trim*.
13. Install the *Bluetooth Card*.
14. Install the *Heat Sink and Processor*.
15. Install the *Coin Cell Battery*.
16. Install the *WWAN Card*.
17. Install the *WLAN Card*.
18. Install the *Hard Drive*.
19. Install the *Memory*.
20. Install the *Optical Drive*.
21. Install the *ExpressCard*.
22. Install the *Base Cover*.
23. Install the *SD Card*.
24. Install the *Battery*.
25. Install the *ATG Port Cover* (only for E6420 ATG systems).
26. Install the *ATG Handle* (only for E6420 ATG systems).
27. Follow the procedures in *After Working Inside Your Computer*.

Removing the Speakers

1. Follow the procedures in *Before Working On Your Computer*.
2. Remove the *ATG Handle* (only for E6420 ATG systems).
3. Remove the *ATG Port Cover* (only for E6420 ATG systems).
4. Remove the *Battery*.
5. Remove the *Secure Digital Card*.
6. Remove the *Base Cover*.
7. Remove the *ExpressCard*.
8. Remove the *Optical Drive*.
9. Remove the *Memory*.
10. Remove the *Hard Drive*.
11. Remove the *WLAN Card*.
12. Remove the *WWAN Card*.
13. Remove the *Coin Cell Battery*.
14. Remove the *Heat Sink and Processor*.
15. Remove the *Bluetooth Card*.
16. Remove the *Keyboard Trim*.
17. Remove the *Keyboard*.
18. Remove the *Modem Card*.
19. Remove the *Palmrest Assembly*.
20. Remove the *ExpressCard Cage*.
21. Remove the *System Board*.
22. Remove the screws from the speaker assembly.



23. Unthread the speaker cable.



24. Remove the speaker from the system.




Installing the Speakers


1. Place the speaker back into the system.
2. Route the speaker cable.
3. Tighten the screws securing the speaker assembly.
4. Install the *System Board*.
5. Install the *ExpressCard Cage*.
6. Install the *Palmrest Assembly*.
7. Install the *Modem Card*.
8. Install the *Keyboard*.
9. Install the *Keyboard Trim*.
10. Install the *Bluetooth Card*.
11. Install the *Heat Sink and Processor*.
12. Install the *Coin Cell Battery*.
13. Install the *WWAN Card*.
14. Install the *WLAN Card*.
15. Install the *Hard Drive*.
16. Install the *Memory*.
17. Install the *Optical Drive*.
18. Install the *ExpressCard*.
19. Install the *Base Cover*.
20. Install the *SD Card*.
21. Install the *Battery*.
22. Install the *ATG Port Cover* (only for E6420 ATG systems).
23. Install the *ATG Handle* (only for E6420 ATG systems).
24. Follow the procedures in *After Working Inside Your Computer*.

Removing the Modem Connector


1. Follow the procedures in *Before Working On Your Computer*.
2. Remove the *ATG Handle* (only for E6420 ATG systems).
3. Remove the *ATG Port Cover* (only for E6420 ATG systems).
4. Remove the *Battery*.
5. Remove the *Secure Digital Card*.
6. Remove the *Base Cover*.
7. Remove the *Modem Connector Plug*.
8. Remove the *ExpressCard*.
9. Remove the *Optical Drive*.
10. Remove the *Memory*.
11. Remove the *Hard Drive*.
12. Remove the *WLAN Card*.
13. Remove the *WWAN Card*.
14. Remove the *Coin Cell Battery*.
15. Remove the *Heat Sink and Processor*.
16. Remove the *Bluetooth Card*.
17. Remove the *Keyboard Trim*.
18. Remove the *Keyboard*.
19. Remove the *Modem Card*.
20. Remove the *Palmrest Assembly*.
21. Remove the *ExpressCard Cage*.
22. Remove the *System Board*.
23. Unthread the modem cable.

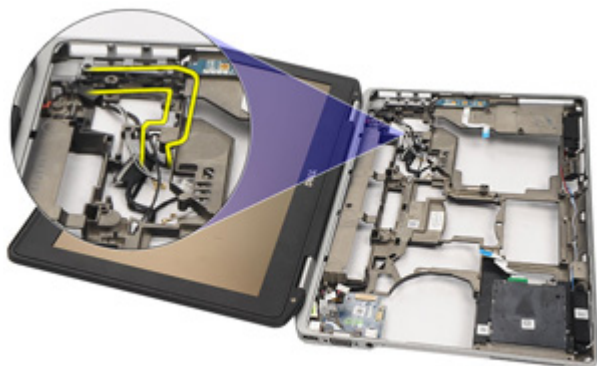


24. Unthread the video and wireless antenna cables.

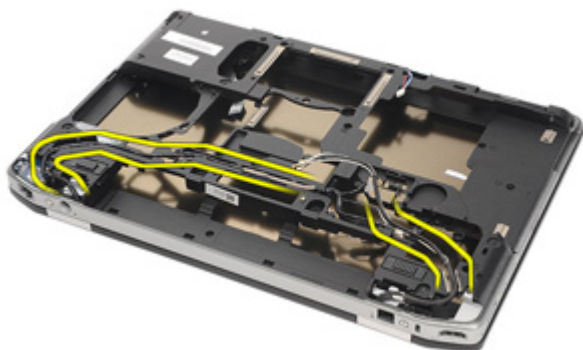


25. Unthread the modem cable.

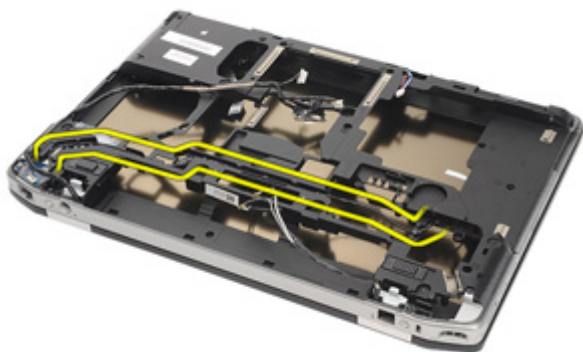


26. Pull out the end of the modem-to-motherboard connector.

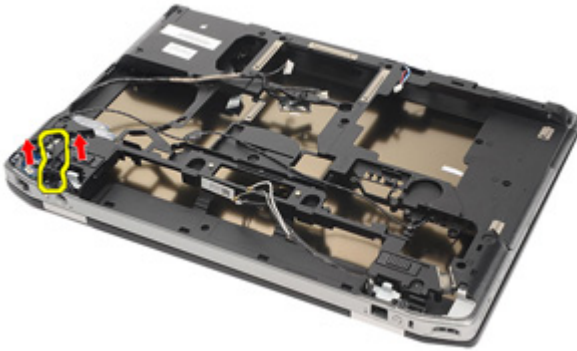


27. Remove screw from modem cable holder.

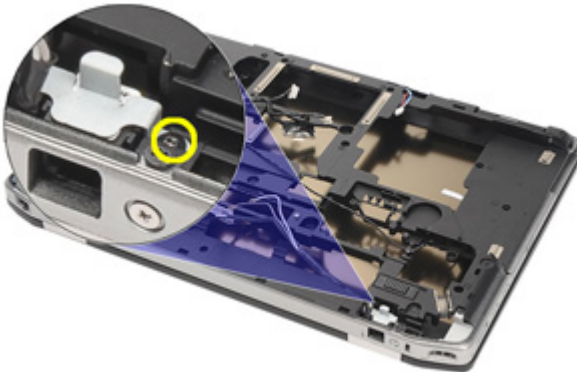

28. Remove modem cable holder.

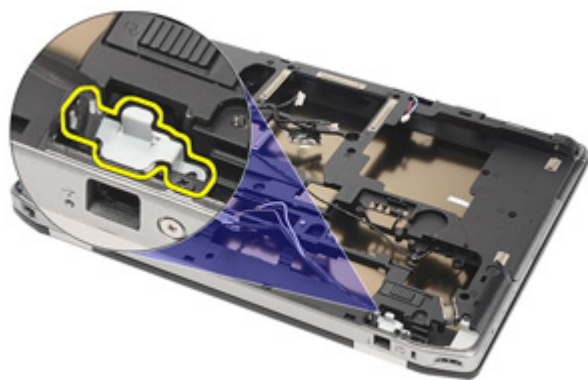

29. Remove the whole modem cable assembly by pulling it out from the base.

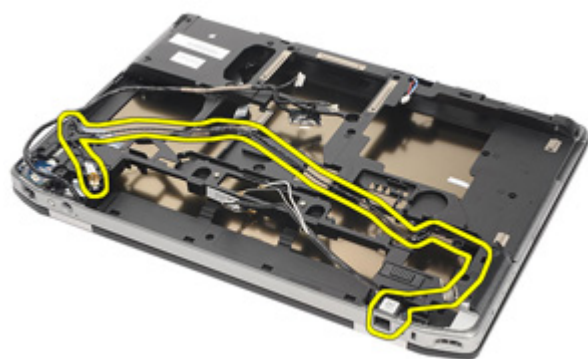

Installing the Modem Connector

1. Place the modem cable assembly into the base.
2. Place the modem cable holder.
3. Tighten the screw securing the modem cable holder.
4. Connect the end of the modem-to-motherboard connector.
5. Route the modem cable.
6. Route the video and wireless antenna cables.
7. Install the *System Board*.
8. Install the *ExpressCard Cage*
9. Install the *Palmrest Assembly*.
10. Install the *Modem Card*.
11. Install the *Keyboard*.
12. Install the *Keyboard Trim*.
13. Install the *Bluetooth Card*.
14. Install the *Heat Sink and Processor*.
15. Install the *Coin Cell Battery*.
16. Install the *WWAN Card*.
17. Install the *WLAN Card*.
18. Install the *Hard Drive*.
19. Install the *Memory*.
20. Install the *Optical Drive*.
21. Install the *ExpressCard*.
22. Install the *Modem Connector Plug*.
23. Install the *Base Cover*.
24. Install the *SD Card*.
25. Install the *Battery*.
26. Install the *ATG Port Cover* (only for E6420 ATG systems).
27. Install the *ATG Handle* (only for E6420 ATG systems).
28. Follow the procedures in *After Working Inside Your Computer*.

Removing the Input/Output (I/O) Board

1. Follow the procedures in *Before Working On Your Computer*.
2. Remove the *ATG Handle* (only for E6420 ATG systems).
3. Remove the *ATG Port Cover* (only for E6420 ATG systems).
4. Remove the *Battery*.
5. Remove the *Secure Digital Card*.
6. Remove the *Base Cover*.
7. Remove the *ExpressCard*.
8. Remove the *Optical Drive*.
9. Remove the *Memory*.
10. Remove the *Hard Drive*.
11. Remove the *WLAN Card*.
12. Remove the *WWAN Card*.
13. Remove the *Coin Cell Battery*.
14. Remove the *Heat Sink and Processor*.
15. Remove the *Bluetooth Card*.
16. Remove the *Keyboard Trim*.
17. Remove the *Keyboard*.
18. Remove the *Modem Card*.
19. Remove the *Palmrest Assembly*.
20. Remove the *ExpressCard Cage*.
21. Remove the screw securing the I/O board to the computer.



22. Remove the I/O board from the computer.




Installing the Input/Output (I/O) Board


1. Replace the I/O board in the computer.
2. Tighten the screw securing the I/O board to the computer.
3. Install the *System Board*.
4. Install the *ExpressCard Cage*
5. Install the *Palmrest Assembly*.
6. Install the *Modem Card*.
7. Install the *Keyboard*.
8. Install the *Keyboard Trim*.
9. Install the *Bluetooth Card*.
10. Install the *Heat Sink and Processor*.
11. Install the *Coin Cell Battery*.
12. Install the *WWAN Card*.
13. Install the *WLAN Card*.
14. Install the *Hard Drive*.
15. Install the *Memory*.
16. Install the *Optical Drive*.
17. Install the *Express Card*.
18. Install the *Base Cover*.
19. Install the *SD Card*.
20. Install the *Battery*.
21. Install the *ATG Port Cover* (only for E6420 ATG systems).
22. Install the *ATG Handle* (only for E6420 ATG systems).
23. Follow the procedures in *After Working Inside Your Computer*.

Removing DC-in Port


1. Follow the procedures in *Before Working On Your Computer*.
2. Remove the *ATG Handle* (only for E6420 ATG systems).
3. Remove the *ATG Port Cover* (only for E6420 ATG systems).
4. Remove the *Battery*.
5. Remove the *Secure Digital Card*.
6. Remove the *Base Cover*.
7. Remove the *ExpressCard*.
8. Remove the *Optical Drive*.
9. Remove the *Memory*.
10. Remove the *Hard Drive*.
11. Remove the *WLAN Card*.
12. Remove the *WWAN Card*.
13. Remove the *Coin Cell Battery*.
14. Remove the *Heat Sink and Processor*.
15. Remove the *Bluetooth Card*.
16. Remove the *Keyboard Trim*.
17. Remove the *Keyboard*.
18. Remove the *Modem Card*.
19. Remove the *Palmrest Assembly*.
20. Remove the *ExpressCard Cage*.
21. Remove the *System Board*.
22. Remove the screw securing the DC-in bracket.

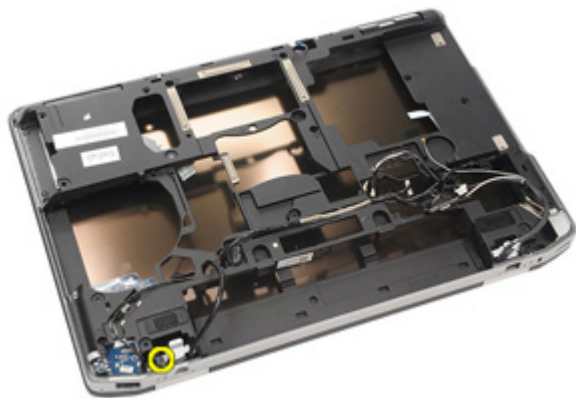


23. Remove the DC-in bracket.

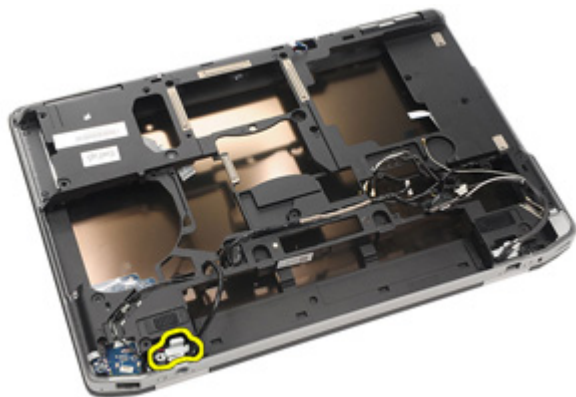

24. Remove the DC-in cable from the system.

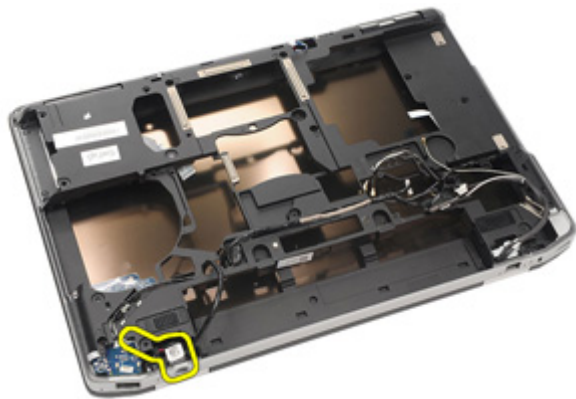

25. Push in the DC-in trim and remove it from the system.

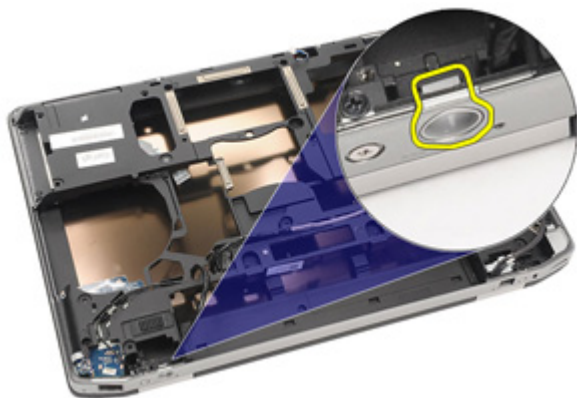

Installing DC-In Port


1. Push the DC-in trim and place it into the system.
2. Place the DC-in cable into the system.
3. Insert the DC-in bracket.
4. Tighten the screw securing the DC-in bracket.
5. Install the *System Board*.
6. Install the *ExpressCard Cage*.
7. Install the *Palmrest Assembly*.
8. Install the *Modem Card*.
9. Install the *Keyboard*.
10. Install the *Keyboard Trim*.
11. Install the *Bluetooth Card*.
12. Install the *Heat Sink and Processor*.
13. Install the *Coin Cell Battery*.
14. Install the *WWAN Card*.
15. Install the *WLAN Card*.
16. Install the *Hard Drive*.
17. Install the *Memory*.
18. Install the *Optical Drive*.
19. Install the *ExpressCard*.
20. Install the *Base Cover*.
21. Install the *SD Card*.
22. Install the *Battery*.
23. Install the *ATG Port Cover* (only for E6420 ATG systems).
24. Install the *ATG Handle* (only for E6420 ATG systems).
25. Follow the procedures in *After Working Inside Your Computer*.

Removing the Display Assembly


1. Follow the procedures in *Before Working On Your Computer*.
2. Remove the *ATG Handle* (only for E6420 ATG systems).
3. Remove the *ATG Port Cover* (only for E6420 ATG systems).
4. Remove the *Battery*.
5. Remove the *Secure Digital Card*.
6. Remove the *Base Cover*.
7. Remove the *ExpressCard*.
8. Remove the *Optical Drive*.
9. Remove the *Memory*.
10. Remove the *Hard Drive*.
11. Remove the *WLAN Card*.
12. Remove the *WWAN Card*.
13. Remove the *Coin Cell Battery*.
14. Remove the *Heat Sink and Processor*.
15. Remove the *Bluetooth Card*.
16. Remove the *Keyboard Trim*.
17. Remove the *Keyboard*.
18. Remove the *Modem Card*.
19. Remove the *Palm rest Assembly*.
20. Remove the *ExpressCard Cage*.
21. Remove the *System Board*.
22. Remove the *DC-in port*.
23. Remove the screws securing the display assembly to the computer.



24. Unthread the antennas, video, and camera connectors.

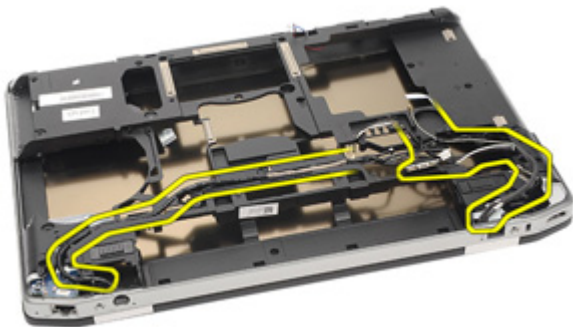

25. Lift up the whole bottom base while threading the cable down via the bottom base.

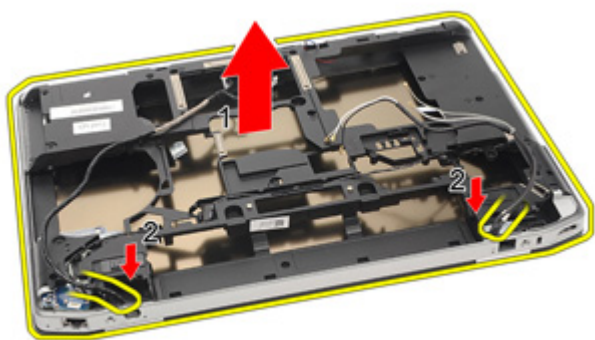

Installing the Display Assembly

1. Align the display assembly into its original position on the computer.
2. Route the antennas, video, and camera connectors.
3. Install the *DC in port*.
4. Install the *System Board*.
5. Install the *ExpressCard Cage*
6. Install the *Palmrest Assembly*.
7. Install the *Modem Card*.
8. Install the *Keyboard*.
9. Install the *Keyboard Trim*.
10. Install the *Bluetooth Card*.
11. Install the *Heat Sink and Processor*.
12. Install the *Coin Cell Battery*.
13. Install the *WWAN Card*.
14. Install the *WLAN Card*.
15. Install the *Hard Drive*.
16. Install the *Memory*.
17. Install the *Optical Drive*.
18. Install the *ExpressCard*.
19. Install the *Base Cover*.
20. Install the *Secure Digital (SD) Card*.
21. Install the *Battery*.
22. Install the *ATG Port Cover* (only for E6420 ATG systems).
23. Install the *ATG Handle* (only for E6420 ATG systems).
24. Follow the procedures in *After Working Inside Your Computer*.

Removing the Display Hinge Covers

1. Follow the procedures in *Before Working On Your Computer*.
2. Remove the *ATG Handle* (only for E6420 ATG systems).
3. Remove the *ATG Port Cover* (only for E6420 ATG systems).
4. Remove the *Battery*.
5. Remove the *Secure Digital Card*.
6. Remove the *Base Cover*.
7. Remove the *ExpressCard*.
8. Remove the *Optical Drive*.
9. Remove the *Memory*.
10. Remove the *Hard Drive*.
11. Remove the *WLAN Card*.
12. Remove the *WWAN Card*.
13. Remove the *Coin Cell Battery*.
14. Remove the *Heat Sink and Processor*.
15. Remove the *Bluetooth Card*.
16. Remove the *Keyboard Trim*.
17. Remove the *Keyboard*.
18. Remove the *Modem Card*.
19. Remove the *Palmrest Assembly*.
20. Remove the *ExpressCard Cage*.
21. Remove the *System Board*.
22. Remove the *DC-in port*.
23. Remove the *Display Assembly*.
24. Pry the display hinge cover from the left hinge.



25. Remove the display hinge cover from the left hinge.



26. Pry the display hinge cover from the right hinge.



27. Remove the display hinge cover from the right hinge.



Installing the Display Hinge Covers

1. Place the display hinges in the appropriate positions.
2. Replace the display hinge cover to the computer.
3. Install the *Display Assembly*.
4. Install the *DC-in port*.
5. Install the *System Board*.
6. Install the *ExpressCard Cage*
7. Install the *Palmrest Assembly*.
8. Install the *Modem Card*.
9. Install the *Keyboard*.
10. Install the *Keyboard Trim*.
11. Install the *Bluetooth Card*.
12. Install the *Heat Sink and Processor*.
13. Install the *Coin Cell Battery*.
14. Install the *WWAN Card*.
15. Install the *WLAN Card*.
16. Install the *Hard Drive*.
17. Install the *Memory*.
18. Install the *Optical Drive*.
19. Install the *ExpressCard*.
20. Install the *Base Cover*.
21. Install the *SD Card*.
22. Install the *Battery*.
23. Install the *ATG Port Cover* (only for E6420 ATG systems).
24. Install the *ATG Handle* (only for E6420 ATG systems).
25. Follow the procedures in *After Working Inside Your Computer*.

Display Bezel

Removing the Display Bezel

1. Follow the procedures in *Before Working On Your Computer*.
2. Remove the *Battery*.
3. Pry the left and right edges of the display bezel.



4. Work along to the top and bottom edges of the display bezel.



5. Remove the display bezel.



Installing the Display Bezel

1. Place the display bezel into the system.
2. Work along to the top and bottom edges of the display bezel.
3. Press the left and right edges of the display bezel.
4. Install the *Battery*.
5. Follow the procedures in *After Working Inside Your Computer*.

Display Panel

33

Removing the Display Panel

1. Follow the procedures in *Before Working On Your Computer*.
2. Remove the *Battery*.
3. Remove the *Display Bezel*.
4. Remove the screws securing the display panel to the display assembly.



5. Flip the display panel over.



6. Disconnect the Low-Voltage Differential Signaling (LVDS) cable connector tape from the display panel.



7. Disconnect the Low-Voltage Differential Signaling (LVDS) cable from the display panel.



8. Remove the display panel from the display assembly.




Installing the Display Panel

1. Align the display panel in its original position on the display assembly.
2. Connect the Low-Voltage Differential Signaling (LVDS) cable to the display panel.
3. Tighten the screws securing the display panel to the display assembly.
4. Install the *LCD Bezel*.
5. Install the *Battery*.
6. Follow the procedures in *After Working Inside Your Computer*.

Display Bracket

Removing the Display Bracket

1. Follow the procedures in *Before Working On Your Computer*.
2. Remove the *Battery*.
3. Remove the *Display Bezel*.
4. Remove the *Display Panel*.
5. Remove the screws from each side of the display panel and remove the display brackets.

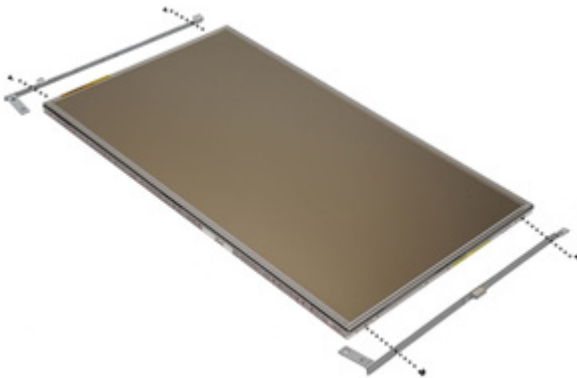

Installing the Display Bracket

1. Place the display brackets and tighten the screws on either side of the display panel.
2. Install the *Display Panel*.
3. Install the *LCD Bezel*.
4. Install the *Battery*.
5. Follow the procedures in *After Working Inside Your Computer*.

Removing the Camera

1. Follow the procedures in *Before Working On Your Computer*.
2. Remove the *Battery*.
3. Remove the *Display Bezel*.
4. Remove the *Display Panel*.
5. Disconnect the camera cable from the camera.



6. Remove the captive screw securing the camera to the display assembly.



7. Remove the camera from the display assembly.



Installing the Camera

1. Place the camera module in its original position in the display assembly.
2. Tighten the screw securing the camera to the display assembly.
3. Connect the camera cable to the camera.
4. Install the *Display Panel*.
5. Install the *Display Bezel*.
6. Install the *Battery*.
7. Follow the procedures in *After working inside your computer*.

Technical Specifications



NOTE: อุปกรณ์ที่นำมาด้วยอาจแตกต่างกันในแต่ละพื้นที่ รายละเอียดทางเทคนิคต่อไปนี้เป็นส่วนที่อยู่ภายใต้เงื่อนไขของกฎหมายสำหรับจัดส่งคอมพิวเตอร์ของคุณ กรุณาดูรายละเอียดเพิ่มเติมเกี่ยวกับคอมพิวเตอร์ของคุณ โดยคลิก **Start** → **Help and Support** จากนั้นเลือกตัวเลือกเพื่อดูข้อมูลเกี่ยวกับคอมพิวเตอร์ของคุณ

System Information

Chipset	Intel Mobile Express Series 6 chipset
DRAM bus width	64-bit
Flash EPROM	SPI 32 Mbits
PCIe Gen1 bus	100 MHz

Processor

Types	<ul style="list-style-type: none"> Intel Core i3 series (available only with Latitude E6420 only) Intel Core i5 series with Turbo Boost technology 2.0 Intel Core i7 series with Turbo Boost technology 2.0
L2 cache	up to 6 MB
External bus frequency	1333 MHz

Memory

Memory connector	two SODIMM slots
Memory capacity	1 GB, 2 GB, or 4 GB
Memory type	DDR3 SDRAM (1333 MHz)
Minimum memory	2 GB
Maximum memory	8 GB

Audio

Type	four-channel high definition audio
Controller	IDT 92HD90
Stereo conversion	24-bit (analog-to-digital and digital-to-analog)
Interface:	
Internal	high definition audio
External	microphone-in/stereo headphones/external speakers connector
Speakers	two
Internal speaker amplifier	0.5 W (typical) per channel
Volume controls	keyboard function keys and program menus

Video

Video type	<ul style="list-style-type: none">• integrated on system board• discrete
Data bus:	
UMA	integrated video
Discrete	<ul style="list-style-type: none">• PCI-E x16 Gen1• PCI-E x16 Gen2
Controller:	
UMA	
Latitude E6420	Intel HD Graphics
Latitude E6420 ATG	Intel HD Graphics 3000
Discrete	NVIDIA NVS 4200M Discrete Graphics (512 MB DDR3)

Communications

Network adapter	10/100/1000 Mbps Ethernet LAN
-----------------	-------------------------------

Communications

Wireless	internal wireless local area network (WLAN) and wireless wide area network (WWAN)
----------	-----------------------------------------------------------------------------------

Ports and Connectors

Audio	one microphone connector/stereo headphones/ external speakers connector
Video	<ul style="list-style-type: none">• one 15-pin VGA connector• one 19-pin HDMI connector
Network adapter	one RJ-45 connector
USB	three 4-pin USB 2.0-compliant connectors and one eSATA/USB 2.0-compliant connector
Memory card reader	one 5-in-1 memory card reader

Contactless Smart Card

Supported Smart Cards/Technologies	ISO14443A — 106 kbps, 212 kbps, 424 kbps, and 848 kbps ISO14443B — 106 kbps, 212 kbps, 424 kbps, and 848 kbps ISO15693 HID iClass FIPS201 NXP Desfire
------------------------------------	-------------------------------------------------------------------------------------------------------------------------------------------------------

Display

Type	white Light Emitting Diode (WLED) display
Size	14.0 inch high definition (HD)
Active area (X/Y)	309.40 mm x 173.95 mm
Dimensions:	
Height	192.50 mm (7.58 inches)
Width	324.00 mm (12.76 inches)
Diagonal	355.60 mm (14.00 inches)
Maximum resolution	1366 x 768 pixels at 263 K colors
Maximum Brightness	
Latitude E6420	200 nits

Display

Latitude E6420 ATG	730 nits
Operating angle	0° (closed) to 135°
Refresh rate	60 Hz
Minimum Viewing angles:	
Latitude E6420	
Horizontal	+/- 40°
Vertical	+10°/-30°
Latitude E6420 ATG	
Horizontal	+/- 50°
Vertical	+/- 40°
Pixel pitch	0.2265 mm

Keyboard

Number of keys	United States: 86 keys, United Kingdom: 87 keys, Brazil: 87 keys, and Japan: 90 keys
Layout	QWERTY/AZERTY/Kanji

Touchpad

Active Area:	
X-axis	80.00 mm
Y-axis	40.70 mm

Battery

Type	<ul style="list-style-type: none">• 4-cell "smart" lithium ion (available only with Latitude E6420 only)• 6-cell "smart" lithium ion• 9-cell "smart" lithium ion
------	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Dimensions:

4-cell and 6-cell

Battery

Depth	48.08 mm (1.90 inches)
Height	20.00 mm (0.79 inch)
Width	208.00 mm (8.19 inches)
9-cell	
Depth	71.79 mm (2.83 inches)
Height	20.00 mm (0.79 inch)
Width	214.00 mm (8.43 inches)
Weight:	
6-cell	345.00 g (0.76 lb)
9-cell	524.00 g (1.16 lb)
Charge time for a 6-cell battery with computer off	approximately 1 hour to 80% capacity and 2 hours to 100% capacity.
Voltage	
4-cell	14.80 VDC
6-cell and 9-cell	11.10 VDC
Temperature range:	
Latitude E6420	
Operating	0 °C to 35 °C (32 °F to 95 °F)
Non-Operating	-40 °C to 65 °C (-40 °F to 149 °F)
Latitude E6420 ATG	
Operating	0 °C to 60 °C (32 °F to 140 °F)
Non-Operating	-51 °C to 71 °C (-59 °F to 159 °F)
Coin-cell battery	3 V CR2032 lithium coin cell

AC Adapter

	Latitude E6420	Latitude E6420 ATG
Type	65 W, 90 W, and 150 W	90 W

AC Adapter



NOTE: 65 W AC adapter is available only for computers with integrated video card.

Input voltage	100 VAC to 240 VAC	100 VAC to 240 VAC
Input current (maximum)	1.50 A/1.60 A/1.70 A/ 2.10 A	1.50 A/1.60 A/1.70 A
Input frequency	50 Hz to 60 Hz	50 Hz to 60 Hz
Output power	65 W, 90 W, and 150 W	90 W
Output current	3.34 A, 4.62 A and 7.70 A (continuous)	4.62 A (continuous)
Rated output voltage	19.5 +/- 1.0 VDC	19.5 +/- 1.0 VDC
Temperature range:		
Operating	0 °C to 40 °C (32 °F to 104 °F)	0 °C to 40 °C (32 °F to 104 °F)
Non-Operating	-40 °C to 70 °C (-40 °F to 158 °F)	-40 °C to 70 °C (-40 °F to 158 °F)

Physical

Latitude E6420

Height	26.90 mm to 32.40 mm (1.06 inches to 1.27 inches)
Width	352.00 mm (13.86 inches)
Depth	241.00 mm (9.49 inches)
Weight (with 4-cell battery)	2.07 kg (4.56 lb)

Latitude E6420 ATG

Physical

Height	29.00 mm to 37.70 mm (1.14 inches to 1.48 inches)
Width	357.30 mm (14.07 inches)
Depth	246.50 mm (9.70 inches)
Weight (with 6-cell battery and air bay)	2.69 kg (5.93 lb)

Environmental

Temperature:

Latitude E6420

Operating	0 °C to 35 °C (32 °F to 95 °F)
Storage	-40 °C to 65 °C (-40 °F to 149 °F)

Latitude E6420 ATG

Operating	0 °C to 60 °C (32 °F to 140 °F)*
Storage	-51 °C to 71 °C (-59 °F to 159 °F)

* Tested configuration is without the optical drive

Relative humidity (maximum):

Operating	10 % to 90 % (noncondensing)
Storage	5 % to 95 % (noncondensing)

Altitude (maximum):

Operating	-15.2 m to 3048 m (-50 ft to 10,000 ft)
Non-Operating	-15.2 m to 10,668 m (-50 ft to 35,000 ft)

Airborne contaminant level G1 as defined by ISA-71.04-1985

Setup Overview

System Setup allows you to:

- change the system configuration information after you add, change, or remove any hardware in your computer.
- set or change a user-selectable option such as the user password.
- read the current amount of memory or set the type of hard drive installed.

Before you use System Setup, it is recommended that you write down the System Setup screen information for future reference.



CAUTION: Unless you are an expert computer user, do not change the settings for this program. Certain changes can cause your computer to work incorrectly.

Entering System Setup

1. Turn on (or restart) your computer.
2. When the blue DELL logo is displayed, you must watch for the F2 prompt to appear.
3. Once the F2 prompt appears, press <F2> immediately.



NOTE: The F2 prompt indicates that the keyboard has initialized. This prompt can appear very quickly, so you must watch for it to display, and then press <F2> . If you press <F2> before you are prompted, this keystroke will be lost.

4. If you wait too long and the operating system logo appears, continue to wait until you see the Microsoft Windows desktop. Then, shut down your computer and try again.


System Setup Menu


The following sections describe the menu options for the System Setup program:

General

Option	Description
System Information	<p>This section lists the primary hardware features of your computer.</p> <ul style="list-style-type: none">• System Information• Memory Information• Processor Information• Device Information
Battery Information	<p>Displays the battery status and the type of AC adapter connected to the computer.</p>
Boot Sequence	<p>Allows you to change the order in which the computer attempts to find an operating system.</p> <ul style="list-style-type: none">• Diskette Drive• Internal HDD• USB Storage Device• CD/DVD/CD-RW Drive• Onboard NIC• Cardbus NIC <p>You can also choose the Boot List option. The options are:</p> <ul style="list-style-type: none">• Legacy• UEFI
Date/Time	<p>Allows you to change the date and time.</p>

System Configuration

Option	Description
 NOTE: System Configuration contains options and settings related to integrated system devices. Depending on your computer and installed devices, the items listed in this section may or may not appear.	
Integrated NIC	<p>Allows you to configure the integrated network controller. The options are:</p> <ul style="list-style-type: none">• Disabled• Enabled

Option	Description
System Management	<ul style="list-style-type: none"> • Enabled w/PXE <p>Default Setting: Enabled w/PXE</p> <p>Allows you to control the systems management mechanism. The options are:</p> <ul style="list-style-type: none"> • Disabled • DASH/ASF 2.0 <p>Default Setting: DASH/ASF 2.0</p>
Parallel Port	<p>Allows you to configure the parallel port on the docking station. The options are:</p> <ul style="list-style-type: none"> • Disabled • AT • PS2 • ECP <p>Default Setting: AT</p>
Serial Port	<p>Allows you to configure the integrated serial port. The options are:</p> <ul style="list-style-type: none"> • Disabled • COM1 • COM2 • COM3 • COM4 <p>Default Setting: COM1</p>
SATA Operation	<p>Allows you to configure the internal SATA hard-drive controller. The options are:</p> <ul style="list-style-type: none"> • Disabled • ATA • AHCI • RAID On <p>Default Setting: RAID On</p>
	<p> NOTE: SATA is configured to support RAID mode.</p>





Option	Description
USB Controller	<p>Allows you to control the USB controller. The options are:</p> <ul style="list-style-type: none"> • Enable Boot Support • Enable External USB Port <p>Default Setting: Enable USB Controller and Enable External USB Port</p>
Miscellaneous Devices	<p>Allows you to enable or disable the following devices:</p> <ul style="list-style-type: none"> • Internal Modem • Microphone • eSATA Ports • Hard Drive Free Fall Protection • Module Bay • ExpressCard • Camera <p>You can also enable or disable:</p> <ul style="list-style-type: none"> • Media Card and 1394 • Enable Media Card only • Disable Media Card and 1394 <p>Default Setting: Media Card and 1394</p>
Keyboard illumination	<p>Allows you to configure the keyboard illumination feature. The options are:</p> <ul style="list-style-type: none"> • Disabled • Level is 25% • Level is 50% • Level is 75% • Level is 100% <p>Default Setting: Level is 25%</p>
Drives	<p>Allows you to configure the SATA drives on board. The options are:</p> <ul style="list-style-type: none"> • SATA-0 • SATA-1 • SATA-4


Option	Description
	<ul style="list-style-type: none"> SATA-5 <p>Default Setting: All drives are enabled.</p>


Video

Option	Description
LCD Brightness	Allows you to set the display brightness depending on the power source (On Battery and On AC).
Enable Optimus	This option enables or disables the Nvidia Optimus Technology applicable to Windows 7 only.

Security

Option	Description
Admin Password	<p>Allows you to set, change, or delete the administrator (admin) password.</p> <p> NOTE: You must set the admin password before you set the system or hard drive password.</p> <p> NOTE: Deleting the admin password automatically deletes the system password and the hard drive password.</p> <p> NOTE: Successful password changes take effect immediately.</p> <p>Default Setting: Not set</p>
System Password	<p>Allows you to set, change, or delete the system password.</p> <p> NOTE: Successful password changes take effect immediately.</p> <p>Default Setting: Not set</p>
Internal HDD-0 Password	Allows you to set or change the system's internal hard-disk drive.

Option	Description
Password Bypass	 NOTE: Successful password changes take effect immediately. Default Setting: Not set Allows you to enable or disable the permission to bypass the System and the Internal HDD password, when they are set. The options are: <ul style="list-style-type: none"> • Disabled • Reboot bypass
Password Change	Default Setting: Disabled Allows you to enable the disable permission to the System and Hard Drive passwords when the admin password is set. Default Setting: Allow Non-Admin Password Changes is selected
Strong Password	Allows you to enforce the option to always set strong passwords. Default Setting: Disabled
OROM Keyboard Access	Allows you to set an option to enter the Option ROM Configuration screens using hotkeys during boot. The options are: <ul style="list-style-type: none"> • Enable • One Time Enable • Disable Default Setting: Enable
TPM Security	Allows you to enable the Trusted Platform Module (TPM) during POST. Default Setting: Disabled
Computrace (R)	Allows you to activate or disable the optional Computrace software. The options are: <ul style="list-style-type: none"> • Deactivate • Disable • Activate

Option	Description
CPU XD Support	 NOTE: The Activate and Disable options will permanently activate or disable the feature and no further changes will be allowed. Default Setting: Deactivate
Non-Admin Setup Changes	Allows you to enable the Execute Disable mode of the processor. Default Setting: Enabled Allows you to determine whether changes to the setup options are allowed when an Administrator Password is set. If disabled, the setup options are locked by the admin password. Default Setting: Disabled
Password Configuration	Allows you to determine the minimum and maximum length of Administrator and System passwords.
Admin Setup Lockout	Allows you to prevent users from entering Setup when an Administrator password is set. Default Setting: Disabled


Performance

Option	Description
Multi Core Support	Allows you to enable or disable multi-core support for the processor. The options are: <ul style="list-style-type: none"> • All • 1 • 2 Default Setting: All
Intel SpeedStep	Allows you to enable or disable the Intel SpeedStep feature. Default Setting: Enabled
C-States Control	Allows you to enable or disable the additional processor sleep states.

Option	Description
Limit CPUID	<p>Default Setting: The options C states, C3, C6, Enhanced C-states, and C7 options are selected/enabled.</p> <p>Allows you to limit the maximum value the processor Standard CPUID Function will support.</p> <p>Default Setting: Enable CPUID Limit</p>
Intel TurboBoost	<p>Allows you to enable or disable the Intel TurboBoost mode of the processor.</p> <p>Default Setting: Enabled</p>
HyperThread Control	<p>Allows you to enable or disable the HyperThreading in the processor.</p> <p>Default Setting: Enabled</p>

Power Management

Option	Description
AC Behavior	<p>Allows you to enable or disable the computer from turning on automatically when an AC adapter is connected.</p> <p>Default Setting: Wake on AC is not selected.</p>
Auto On Time	<p>Allows you to set the time at which the computer must turn on automatically. The options are:</p> <ul style="list-style-type: none"> • Disabled • Every Day • Weekdays <p>Default Setting: Disabled</p>
USB Wake Support	<p>Allows you to enable USB devices to wake the system from Standby.</p> <p>Default Setting: Disabled</p>

Option	Description
Wireless Radio Control	<p> NOTE: This feature is only functional when the AC power adapter is connected. If the AC power adapter is removed during Standby, the system setup will remove power from all of the USB ports to conserve battery power.</p> <p>Allows you to enable or disable the feature that automatically switches from wired or wireless networks without depending on the physical connection.</p> <p>Default Setting: The options Control WLAN radio and Control WWAN radio are selected.</p>
Wake on LAN/WLAN	<p>This field allows the computer to power up from the off state when triggered by a special LAN signal or from Hibernate state when triggered by a special wireless LAN signal. Wake-up from the Standby state is unaffected by this setting and must be enabled in the operating system. This feature only works when the computer is connected to AC.</p> <ul style="list-style-type: none"> • Disabled — Does not allow the system to power on when it receives a wake-up signal from the LAN or wireless LAN. • LAN Only — Allows the system to be powered on by special LAN signals. • WLAN Only — Allows the system to be powered on by special WLAN signals. • LAN or WLAN — Allows the system to be powered on by special LAN or wireless LAN signals. <p>Default Setting: Disabled</p>
ExpressCharge	<p>Allows you to enable or disable the ExpressCharge feature. The options are:</p> <ul style="list-style-type: none"> • Standard • ExpressCharge <p>Default Setting: ExpressCharge</p>

POST Behavior

Option	Description
Adapter Warnings	<p>Allows you to enable or disable the system setup (BIOS) warning messages when you use certain power adapters.</p> <p>Default Setting: Enable Adapter Warnings is selected.</p>
Keypad (Embedded)	<p>Allows you to choose one or two methods to enable the keypad that is embedded in the internal keyboard.</p> <ul style="list-style-type: none">• Fn Key Only• By Num Lk <p>Default Setting: Fn Key Only</p>
Mouse/Touchpad	<p>Allows you to define how the system handles mouse and touchpad input. The options are:</p> <ul style="list-style-type: none">• Serial Mouse• PS2 Mouse• Touchpad/PS-2 Mouse <p>Default Setting: Touchpad/PS-2 Mouse</p>
Numlock Enable	<p>Allows you to enable the Numlock option when the computer boots.</p> <p>Default Setting: Enable Numlock is selected.</p>
Fn Key Emulation	<p>Allows you to set the option where the <Scroll Lock> key is used to simulate the <Fn> key feature.</p> <p>Default Setting: Enable Fn Key Emulation is selected.</p>
POST HotKeys	<p>Allows you enable the sign-on screen message display indicating the keystroke sequence to access the System Setup option menu.</p> <p>Default Setting: Enable F12 Boot Option Menu is selected.</p>
Fastboot	<p>Allows to set the option to speed up the boot process. The options are:</p>

Option	Description
	<ul style="list-style-type: none"> Minimal Thorough Auto <p>Default Setting: Thorough</p>

Virtualization Support


Option	Description
Virtualization	<p>Allows you to enable or disable the Intel Virtualization Technology.</p> <p>Default Setting: Enable Intel Virtualization Technology is selected.</p>
VT for Direct I/O	<p>Allows you to enable or disable Virtualization Technology for Direct I/O.</p> <p>Default Setting: Disabled is selected.</p>
Trusted Execution	<p>This option specifies whether a Measured Virtual Machine Monitor (MVMM) can utilize the additional hardware capabilities provided by Intel Trusted Execution Technology. The TPM Virtualization Technology and Virtualization Technology for Direct I/O must be enabled to use this feature.</p> <p>Default Setting: Disabled is selected.</p>

Wireless

Option	Description
Wireless Switch	<p>Allows you to set the wireless devices that can be controlled by the wireless switch. The options are:</p> <ul style="list-style-type: none"> WWAN WLAB Bluetooth <p>Default Setting: All the options are selected.</p>
Wireless Device Enable	<p>Allows you to enable or disable the wireless devices.</p>

Option	Description
	Default Setting: All the options are selected.

Maintenance




Option	Description
Service Tag	Displays the Service Tag of your computer.  NOTE: If a Service Tag has not been set for this system, the computer will automatically bring up this screen when users enter the BIOS. You will be prompted to enter the Service Tag.
Asset Tag	Displays the Asset Tag.

System Logs

Option	Description
BIOS Events	Allows you to view and clear the System Setup (BIOS) POST events.
DellDiag Events	Allows you to view and clear the DellDiag events.
Thermal Events	Allows you to view and clear the Thermal events.
Power Events	Allows you to view and clear the Power events.

Diagnostic LED Codes

The following table shows the possible LED codes that may display when your computer is unable to complete a power on self test.

Appearance			Description	Next Step
				
Storage LED	Power LED	Wireless LED		
Blinking	Solid	Solid	The micro-controller is handing control of the system to the processor. This code persists if no processor is detected.	Replace the processor.
Solid	Blinking	Solid	Memory is detected but has errors.	<ol style="list-style-type: none"> 1. Re-seat the memory. 2. If two modules are installed, remove one and test. Try the other module in the same slot and test. Test the other slot with both modules. 3. Replace the memory. 4. Replace the system board.
Blinking	Blinking	Blinking	System board error	Replace the system board.
Blinking	Blinking	Solid	Video card error	Replace the system board.
Blinking	Blinking	Off	Keyboard error	<ol style="list-style-type: none"> 1. Re-seat the keyboard cable. 2. Replace the keyboard.





Appearance		Description		Next Step
Blinking	Off	Blinking	USB controller error	Unplug the USB device (if any)
Solid	Blinking	Blinking	No SODIMMs are installed	<ol style="list-style-type: none"> 1. Install supported memory modules. 2. If memory is already present, re-seat the module(s) one at a time in each slot. 3. Try known good memory from another computer or replace the memory. 4. Replace the system board.
Blinking	Solid	Blinking	Display panel error	<ol style="list-style-type: none"> 1. Re-seat the display cable. 2. Replace the display panel. 3. Replace the video card/system board.
Off	Blinking	Blinking	Modem error	<ol style="list-style-type: none"> 1. Re-seat the modem. 2. Replace the modem. 3. Replace the system board.

Battery Status Lights

If the computer is connected to an electrical outlet, the battery light operates as follows:

- **Alternately blinking amber light and blue light** — An unauthenticated or unsupported non-Dell AC adapter is attached to your laptop.
- **Alternately blinking amber light with steady blue light** — Temporary battery failure with AC adapter present.
- **Constantly blinking amber light** — Fatal battery failure with AC adapter present.
- **Light off** — Battery in full charge mode with AC adapter present.
- **Blue light on** — Battery in charge mode with AC adapter present.

Device Status Lights

-  Turns on when you turn on the computer and blinks when the computer is in a power management mode.
-  Turns on when the computer reads or writes data.
-  Turns on steadily or blinks to indicate battery charge status.
-  Turns on when wireless networking is enabled.

การติดต่อกับ Dell



หมายเหตุ: หากไม่สามารถเชื่อมต่ออินเทอร์เน็ต สามารถค้นหาข้อมูลติดต่อได้จากใบแจ้งหนี้ ใบกำกับสินค้า บิล หรือแคตตาล็อกสินค้าของ Dell

Dell มีบริการความช่วยเหลือผ่านระบบออนไลน์และทางโทรศัพท์ การจัดหาบริการจะขึ้นอยู่กับประเทศและประเภทผลิตภัณฑ์ บริการบางตัวอาจไม่มีในพื้นที่ของคุณ การติดต่อฝ่ายขายของ Dell ฝ่ายบริการทางเทคนิคหรือฝ่ายบริการลูกค้าเพื่อแจ้งปัญหา:

1. กรุณาเข้าไปที่เว็บไซต์ **support.dell.com**
2. เลือกประเภทบริการที่เกี่ยวข้อง
3. หากคุณไม่ใช่ลูกค้าในสหรัฐฯ ให้เลือกรหัสประเทศจากด้านล่าง หรือเลือก **All** เพื่อดูตัวเลือกเพิ่มเติม
4. เลือกลิงค์ของบริการหรือความช่วยเหลือที่ตรงกับความต้องการของคุณ