

Dell™ Display Manager


- _____
 - _____
 - _____
 - _____
 - _____
 - _____
-

Dell Display Manager

Dell
Dell Display Manager

Windows

가

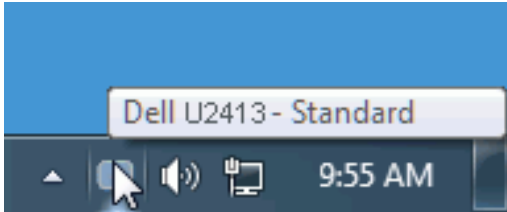

Dell Display Manager
가

가

Dell

The screenshot displays the Dell Display Manager interface for a Dell U2413 monitor. The interface is organized into several sections:

- Display Information:** Shows the monitor model as "Dell U2413" and the resolution as "1920x1200". A "Change" link is provided next to the resolution.
- Mode Selection:** Offers two modes: "Auto Mode" (selected) and "Manual Mode". A "Configure" link is next to the Auto Mode selection. A dropdown menu is set to "Standard".
- Brightness and Contrast:** Each has a horizontal slider set to 50%.
- Display Modes:** A grid of 21 icons representing various display modes. The first icon in the top-left corner is highlighted with a red 'X', indicating it is the current mode.
- Footer:** A button labeled "Open Dell Display Manager" is located at the bottom of the interface.

Display Manager

Dell

가
가

가

Dell Display Manager Dell U2413

Basic Auto Mode Easy Arrange Options i

Resolution: 1920x1200 Change

Auto Mode Configure
Use preset mode assignments for active applications


Manual Mode
Choose a preset mode: Standard ▼

Brightness: 50%


Contrast: 50%

가 , Dell Display Manager





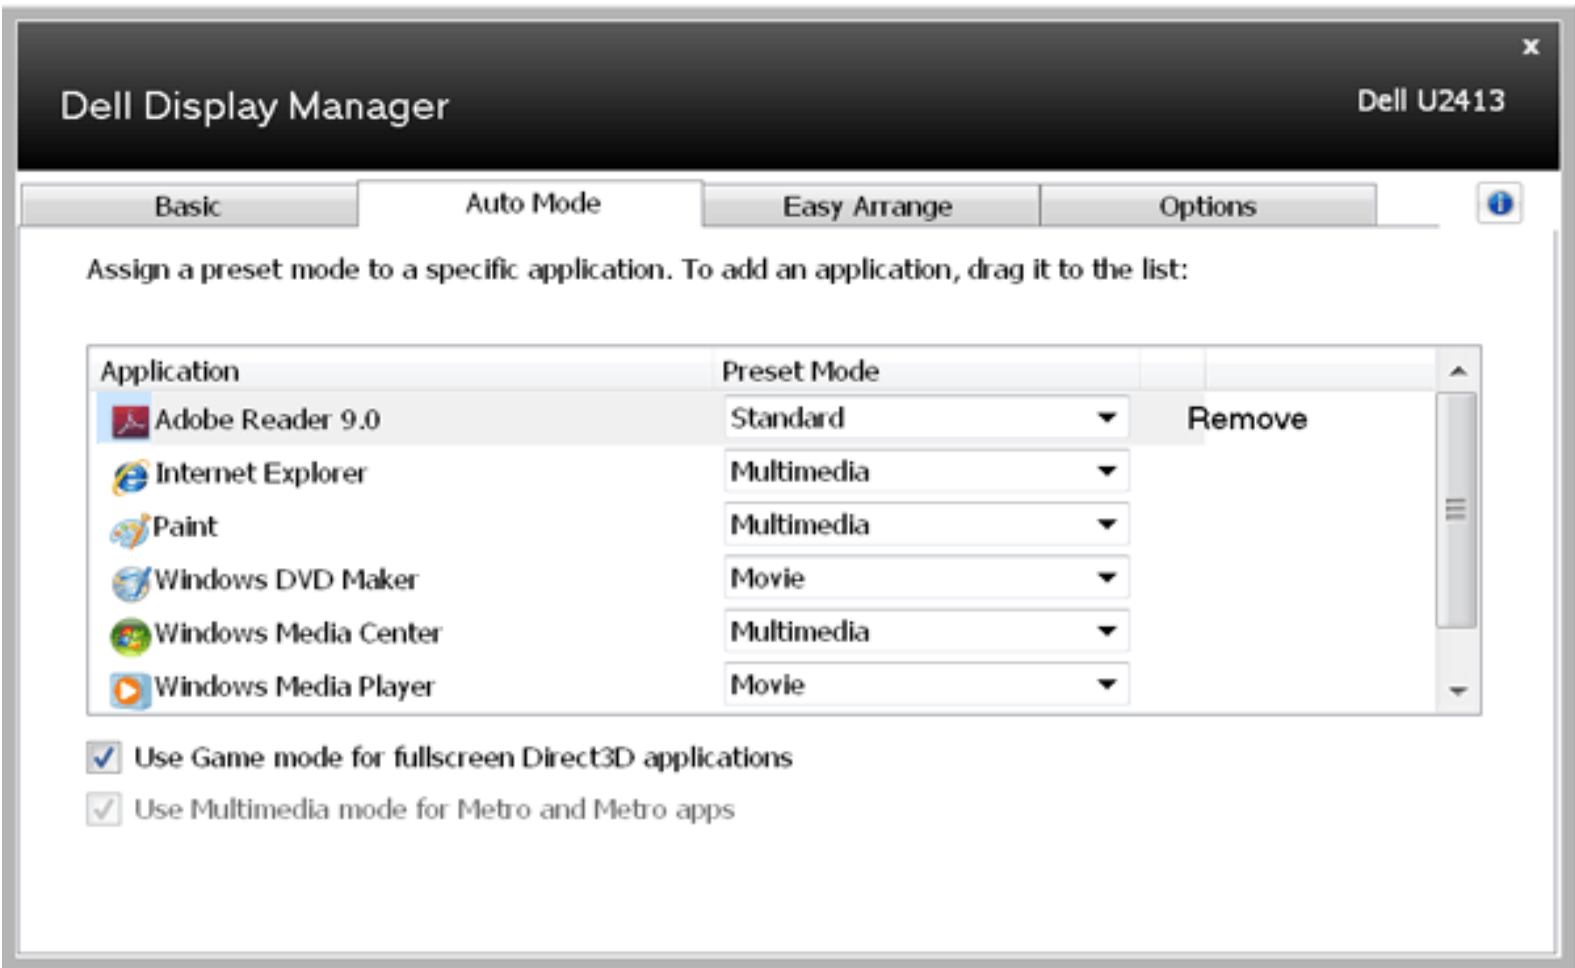

Dell Display Manager 가 , Windows

 : zip 가

, Direct3D " " 가
가 Direct3D




The screenshot shows the Dell Display Manager application window. The title bar includes the application name and the monitor model 'Dell U2413'. The interface has four tabs: 'Basic', 'Auto Mode', 'Easy Arrange', and 'Options'. The 'Easy Arrange' tab is active, displaying instructions: 'Assign a preset mode to a specific application. To add an application, drag it to the list:'. Below this is a table with columns for 'Application', 'Preset Mode', and a 'Remove' button. The table lists several applications with their assigned preset modes. At the bottom, there are two checked checkboxes: 'Use Game mode for fullscreen Direct3D applications' and 'Use Multimedia mode for Metro and Metro apps'.

Application	Preset Mode	
 Adobe Reader 9.0	Standard	Remove
 Internet Explorer	Multimedia	
 Paint	Multimedia	
 Windows DVD Maker	Movie	
 Windows Media Center	Multimedia	
 Windows Media Player	Movie	

- Use Game mode for fullscreen Direct3D applications
- Use Multimedia mode for Metro and Metro apps

Dell

가

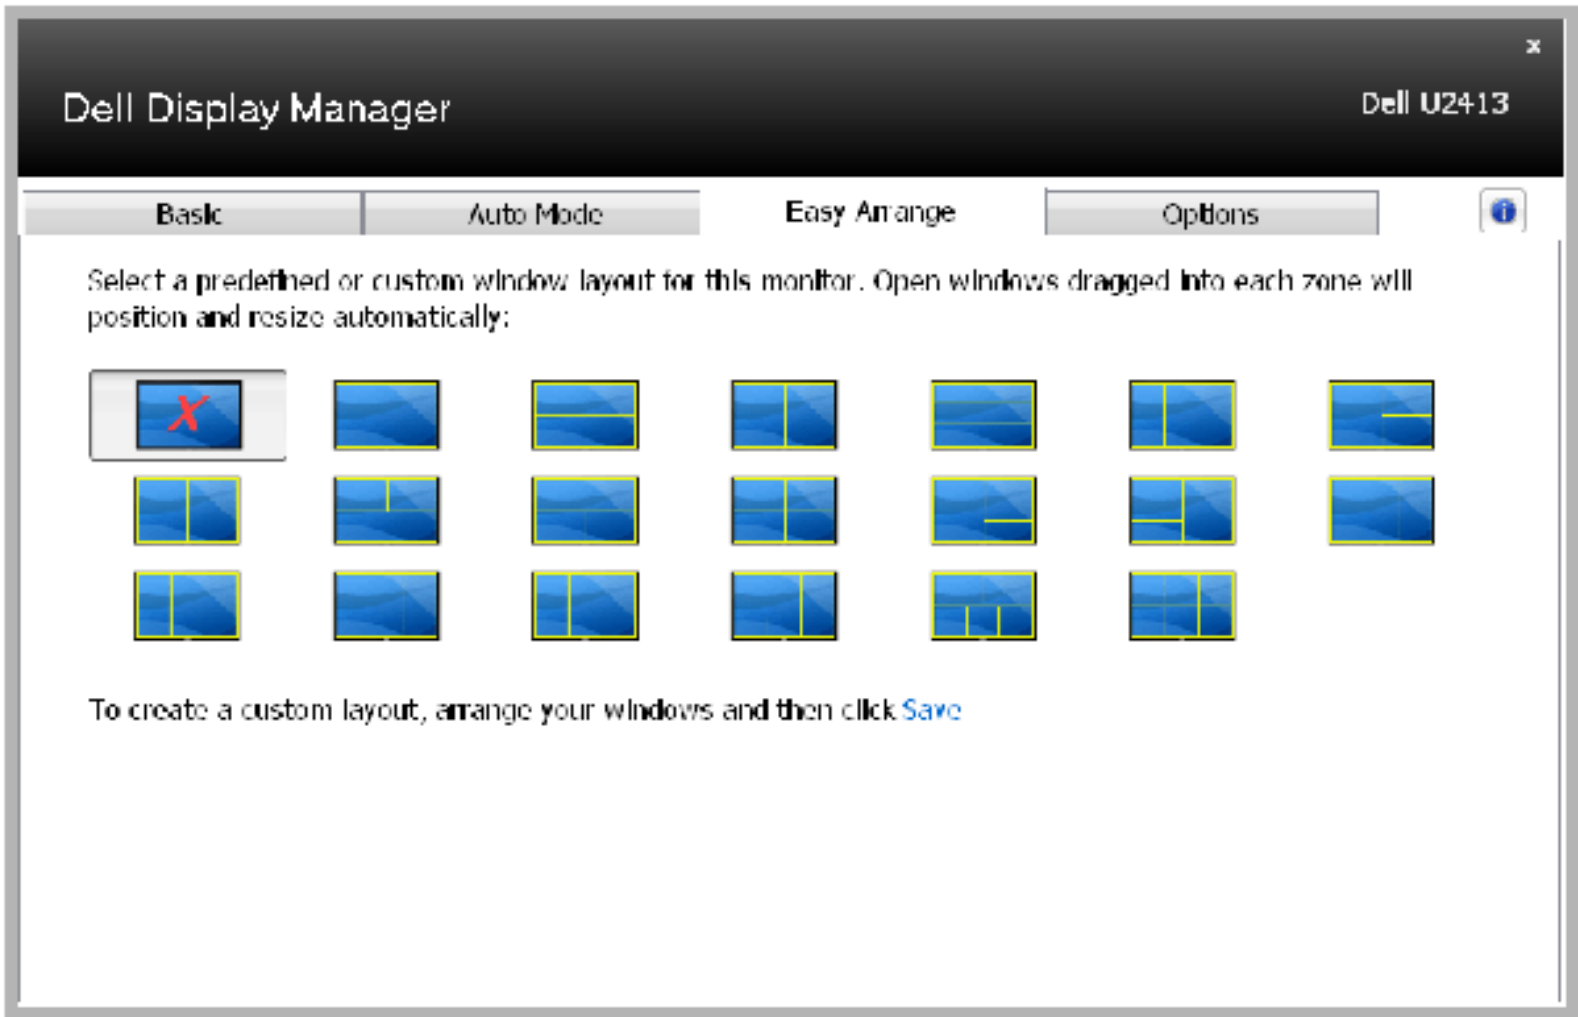

Dell

PowerNap

Smart Video Enhance

PowerNap

가

가

가

가

Smart Video Enhance

" " "

