Dell UltraSharp UP3218K Dell Display Manager User's Guide





NOTE: A NOTE indicates important information that helps you make better use of your computer.

Copyright © 2017 Dell Inc. All rights reserved. This product is protected by U.S. and international copyright and intellectual property laws.

Dell[™] and the Dell logo are trademarks of Dell Inc. in the United States and/or other jurisdictions. All other marks and names mentioned herein may be trademarks of their respective companies.

Contents

Overview
Using the Quick Settings Dialog 5
Setting Basic Display Functions
Assigning Preset Modes to Applications7
Organizing Windows with Easy Arrange
Managing Multiple Video Inputs
Troubleshooting

Overview

Dell Display Manager is a Windows application used to manage a monitor or a group of monitors. It allows manual adjustment of the displayed image, assignment of automatic settings, energy management, window organization, image rotation, and other features on select Dell monitors. Once installed, Dell display manager runs each time the computer starts and its icon is placed in the notification tray. Information about monitors connected to the computer is displayed when you hover the mouse pointer over the notification tray icon.

-	Dell UP3218K-Standard	14:41
		02/15/2017

NOTE: Dell Display Manager needs to use DDC/CI channel to communicate with your monitor. Please make sure DDC/CI is enabled in the menu as below.





Using the Quick Settings Dialog

Clicking Dell Display Manager's notification tray icon opens the **Quick Settings** dialog box. When more than one supported Dell model is connected to the system, a specific target monitor can be selected using the menu provided. The **Quick Settings** dialog box allows convenient adjustment of the monitor's brightness and contrast levels. You can manually select a preset mode or enable automatic selection of a preset mode depending on the active application.

* Display Manager					
Display:	Dell UP3218K				
Resolution:	7680x4320 Change				
Auto ModeManual Mode	Configure Standard •				
Brightness:	75%				
Contrast:	75%				
Open Dell Display Manager					

The **Quick Settings** dialog box also provides access to Dell display manager's advanced user interface, which is used to adjust basic functions, configure Auto Mode, and access other features.

Setting Basic Display Functions

A preset mode for the selected monitor can be manually applied using the menu on the **Basic** tab. Alternatively, Auto Mode can be enabled. Auto Mode causes your preferred preset mode to be applied automatically when specific applications are active. A message momentarily appears on the screen showing the selected preset mode.

The selected monitor's brightness and contrast can also be directly adjusted from the **Basic** tab.

Display M	x Dell UP3218K				
Basic	Auto Mode	Easy Arrange	Input Manager	0	
Resolution:	7680x4320			Change	
O Auto Mode Con Use preset mode assignments for active applications					
Manual Mode Choose a preset r	mode:		Standard	~	
Brightness:	1 I I I I I I I I	100%			
Contrast:	r i i i i	100%			

Assigning Preset Modes to Applications

The **Auto Mode** tab allows you to associate a specific preset mode with a specific application, and apply it automatically. When Auto Mode is enabled, Dell Display Manager automatically switches to the corresponding preset mode whenever the associated application is activated. The preset mode assigned to a particular application may be the same on each connected monitor, or it can vary from one monitor to the next.

Dell Display Manager is pre-configured for many popular applications. To add a new application to the assignment list, simply drag the application from the desktop, Windows Start Menu, or elsewhere, and drop it onto the current list.



NOTE: Preset mode assignments targeting batch files, scripts, and loaders, as well as non-executable files such as zip archives or packed files, are not supported and will be ineffective.

In addition an option can be enabled that activates the Game preset mode when a Direct3D application is run in full-screen mode. To override this behavior for individual game titles, add them to the assignment list with a different Preset Mode. Applications present in the assignment list take priority over the general Direct3D setting.

7 Display /	lanager		Deil	UP3218
Basic	Auto Mode	Easy Arrange	Input Manager	(
Application		Preset Mode		^
		Standard	×	
(Default for de	sktop apps)			
	lscreen Direct3D)	Standard	~	
	lscreen Direct3D)			
(Default for ful	lscreen Direct3D) er	Standard	~ ~ ~	

Organizing Windows with Easy Arrange

Some Dell models feature Easy Arrange, which allows the selected monitor's desktop to be organized into various predefined or custom window layouts. When Easy Arrange is enabled, windows can easily be repositioned and resized automatically to fill specific regions within a window layout.

To get started with **Easy Arrange**, choose a target monitor and select one of the predefined layouts. The regions for that layout are displayed momentarily on the monitor. Next, drag an open window across the monitor. While the window is being dragged, the current window layout is displayed and an active region gets highlighted as the window passes over it. At any time, drop the window into the active region to place the window in that region.



To create a custom window layout, size and position the windows (maximum 10) on the desktop and then click the **Save** link in **Easy Arrange**. The size and position of the windows is saved as a custom layout and the custom layout icon is created.

NOTE: This option does not save or remember the applications that are open. Only the size and position of the windows is saved.

Display N	Manager		Γ	X Dell UP3218K
Basic	Auto Mode	Easy Arrange	Input Manager	0
Select a predefined o position and resize a	or custom window layout fo utomatically:	r this monitor. Open windo	ws dragged into each z	one will
	e Your current window layo button.	out has been assigned to	the custom layout	×
			ОК	
To create a custom la	ayout, arrange your windo rent borders	ws and then dick. Save		

To use the custom layout, select the custom layout icon. To delete the currently saved custom layout, close all windows on the desktop and then click the **Save** link in **Easy Arrange**.

Display	C	x Dell UP3218K					
Basic	Auto Mode	Easy Arrange	Input Manager	0			
	Select a predefined or custom window layout for this monitor. Open windows dragged into each zone will position and resize automatically:						
X ,							
To create a custom layout, arrange your windows and then dick Save							

Managing Multiple Video Inputs

The **Input Manager** tab provides convenient ways for you to manage multiple video inputs connected to your Dell monitor. It makes it very easy to switch between inputs while you work with multiple computers.

All video input ports available to your monitor are listed. You can give each input a name as you like. Please save your changes after editing.

You can define a shortcut key to quickly switch to your favorite input and another shortcut key to quickly switch between two inputs if you often work between them.

Display Manager Dell U					
Basic	Auto Mode	Easy Arrange	Input Manager 🕕		
Input port:	Input name:				
DP1	My_Win10				
DP2 (Active)	My_MacBook				
F	41		Save		
Favorite input shortcu Ctrl + Alt + 1	>> DP2_My_Mac	Book 🗸 🗸	Change active input		
Input switch shortcut Ctrl + Alt + 2	<pre>>> DP1_My_Win:</pre>	10 ~ <	<>> DP2_My_MacBook ~		

NOTE: Input Manager is not available in tiled mode as your monitor resolution is 7680 x 4320 60Hz or 48 Hz.

You can use the dropdown list to switch to any input source.

Display N	Nanager		De	: 11 UP3218K
Basic	Auto Mode	Easy Arrange	Input Manager	0
Input port:	Input name:			
DP1	My_Win10			
DP2 (Active)	My_MacBook			
Favorite input shortc	ut key:		Save	
Ctrl + Alt + 1	>> DP2_My_Ma	cBook 🗸 🗸	Change active inp	ut 📐
Input switch shortcut Ctrl + Alt + 2	tkey: >> DP1_My_Wir	10 ~ <<	<pre>>> DP1_My_Win10 >> DP2_My_MacBo</pre>	

NOTE: DDM communicates with your monitor even when the monitor is displaying video from another computer. You can install DDM on the PC you frequently use and control input switching from it. You may also install DDM on other PCs connected to the monitor.

Troubleshooting

If DDM cannot work with your monitor, DDM will show below icon in your notification tray.



Click on the icon, DDM shows a more detailed error message.



Please note that DDM only works with Dell branded monitors. If you are using monitors from other manufacturers, DDM doesn't support them.

If DDM is unable to detect and/or communicate with a supported Dell monitor, please take below actions to troubleshoot:

- 1. Make sure the video cable is properly connected to your monitor and your PC, especially the connectors should be firmly inserted into position.
- 2. Check the monitor OSD to ensure DDC/CI is enabled.
- 3. Make sure you have the correct and latest display driver from the graphics vendor (Intel, AMD, NVidia, etc.). Display driver is often the cause of DDM failure.
- 4. Remove any docking stations or cable extenders or converters between the monitor and the graphics port. Some low-cost extenders, hubs or converters may not support DDC/CI properly and can fail DDM. Update the driver of such device if the latest version is available.
- 5. Restart your system.

DDM may not work with below monitors:

- Dell monitor models earlier than year 2013 and D-series of Dell monitors. You can refer to Dell Product Support websites for more information.
- Gaming monitors using Nvidia-based G-sync technology.
- Virtual and wireless displays do not support DDC/CI.
- Some early models of DP 1.2 monitors, it may be necessary to disable MST/DP 1.2 using the monitor OSD.

If your PC is connected to the Internet, you will be prompted with a message

when a newer version of DDM application is available. It is recommended to download and install the latest DDM application.

You may also check for new version by right clicking on DDM icon while pressing and holding 'shift' key.

	Open Dell Display Manager Make text and other items larger or smaller	
	<u>R</u> efresh Save diagnostic report	
✓ ✓	<u>A</u> uto-load at startup O <u>n</u> screen notifications <u>C</u> heck for new version	
	Exit	