

dell.com/support

1




2



3




Windows 8

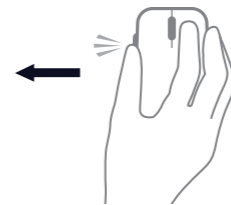

### Charms sidebar

- Charms 側邊功能表
- Charms 側邊菜單
- チャームサイドバー
- Панель Charms
- Sidorpanel för snabbknappar
- Changer d'appas
- Barre latérale Charms
- شريط البدء الجانبي
- Sidebar Charms
- Charms-Sidebar
- Perler-sidepanel
- Charms sidepanel
- Barra lateral de accesos
- Barra de Atalhos
- Bočni panel ovládacích tlačítek
- Barra lateral de accesos
- 참(Charms) 사이드바
- Barra lateral Charms
- Düğmeler kenar çubuğu

Windows 8

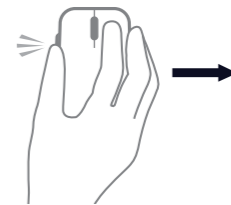

### Apps switch

- 應用程式切換
- 应用程序切换
- アプリアスイッチ
- Переключение на Приложения
- Byte av appar
- Changer d'appas
- مفتاح التطبيقات
- Cambio app
- App-Wechsel
- App-bryter
- Skift af app
- Selector de aplicaciones
- Alternar aplicativos
- Přepínač aplikací
- Εναλλαγή εφαρμογών
- 응용 프로그램 전환
- Mudança de aplicação
- Uygulama Seçimi



### Scroll and pan

- 捲動和搖攝
- 滚动和平移
- スクロール/パン
- Прокрутка и сдвиг
- Klicka och dra
- Défilement et panoramique
- تمرير وتحريك
- Scorri e panoramica
- Scrollen und schwenken
- Bla og heft
- Rul og panorer
- Desplazarse y panorámica
- Rolagem e panorâmica
- Posunout
- Κόλιση και μετατόπιση
- 스크롤 및 이동
- Deslocamento e panorâmica
- Kaydırma ve tersyüz