


# INSPIRON M731R

## Quick Start Guide




### 1 Connect the power adapter and press the power button

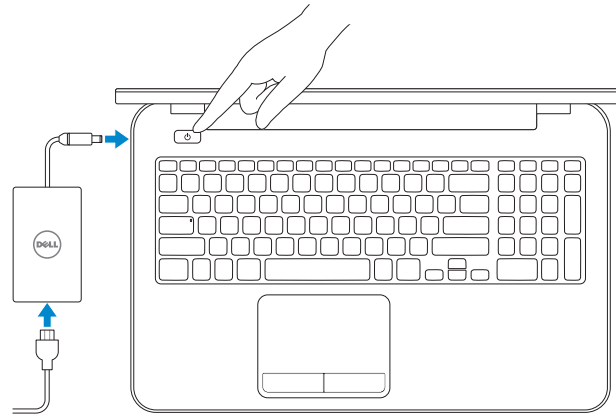


### 2 Finish Windows setup



 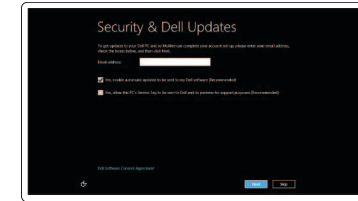


 


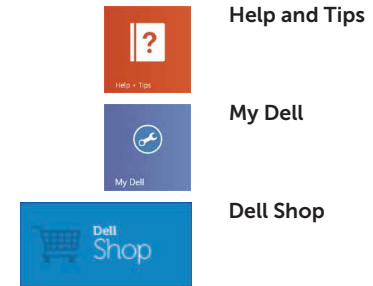


#### Enable security




### 3 Explore resources



## Shortcut keys

 F1	Switch to external display	 F9	Play/Pause
 F2	Turn off/on wireless	 F10	Play next track or chapter
 F3	Disable/enable touchpad	 F11	Decrease volume
 F4	Decrease brightness	 F12	Increase volume
 F5	Increase brightness		Mute audio
 F8	Play previous track or chapter		

 **NOTE:** For more information, see *Specifications* at [dell.com/support](http://dell.com/support).

### Product Support

[dell.com/support](http://dell.com/support)

### Contact Dell

[dell.com/contactdell](http://dell.com/contactdell)

### Regulatory and safety

[dell.com/regulatory\\_compliance](http://dell.com/regulatory_compliance)


### Computer model

Inspiron 5735

### Regulatory model and type

P17E  
P17E003

## Features

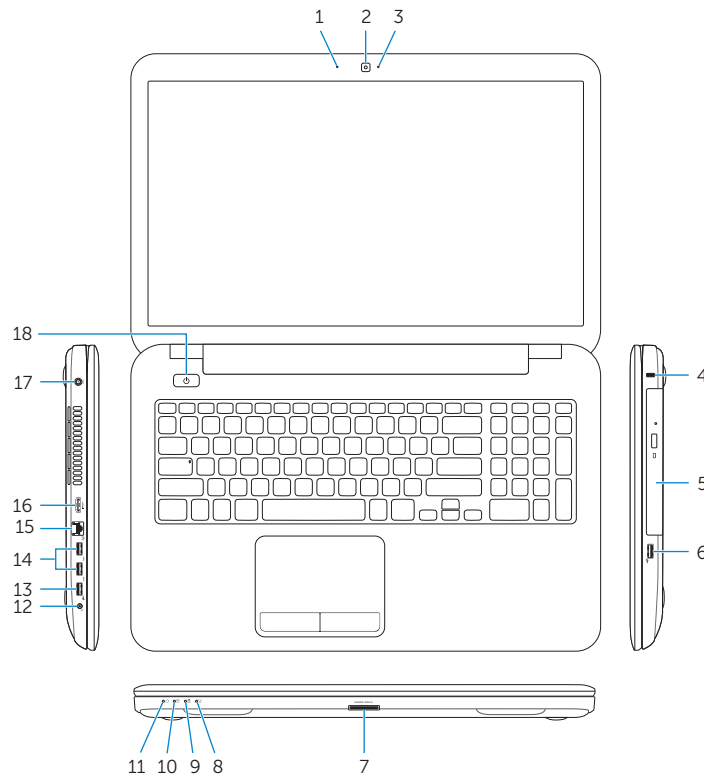

1. Digital microphone
2. Camera
3. Camera-status light
4. Security-cable slot
5. Optical drive
6. USB 2.0 port
7. Media-card reader
8. Wireless-status light
9. Battery-status light
10. Hard-drive activity light
11. Power-status light
12. Headset port
13. USB 2.0 port
14. USB 3.0 ports (2)
15. Network port
16. HDMI port
17. Power-adaptor port
18. Power button
19. Regulatory label
20. Service Tag label

