




QUICK START GUIDE






QUICK START GUIDE

Notes and Cautions

 **NOTE:** A NOTE indicates important information that helps you make better use of your computer.

 **CAUTION:** A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.

Information in this document is subject to change without notice.

© 2009 Dell Inc. All rights reserved.

Reproduction of these materials in any manner whatsoever without the written permission of Dell Inc. is strictly forbidden.

Trademarks used in this text: *Dell*, the *DELL* logo, and *YOURS IS HERE* are trademarks of Dell Inc.; *Ubuntu* and the *Ubuntu* logo are registered trademarks of Canonical Ltd.

Other trademarks and trade names may be used in this document to refer to either the entities claiming the marks and names or their products. Dell Inc. disclaims any proprietary interest in trademarks and trade names other than its own.

Contents

Overview	5	Using the Web Browser	16
Getting Started With Your Dell Desktop	6	Instant Messaging With Pidgin	18
Getting Started With Your Classic Desktop	8	Using Totem TV	18
Starting an Application	8	Dell Media Experience	18
Customizing Your Desktop	8	Applications in Ubuntu	19
Adding and Removing an Application Icon on Your Desktop	8	Connecting Devices	20
Getting Started With Ubuntu	9	Restoring Your Ubuntu System	22
Connecting to the Internet Using a Wireless or Wired Connection	9	Starting System Restore	22
Quickly Viewing a Window in Full Screen	10		
System Preferences and Administration	11		
Browsing Files and Folders	14		

Overview

 
Welcome to your Dell™ Inspiron™ Mini.

This guide helps you to get acquainted with the Ubuntu® operating system, perform basic functions, and set up your computer just the way you want it.

If you need more information, complete documentation on Ubuntu is available from the Help Center on your computer. To access the Help Center, click the Help icon on the Panel, found at the top of your screen.

Getting Started With Your Dell Desktop

The Dell Desktop launches when you turn on your computer.

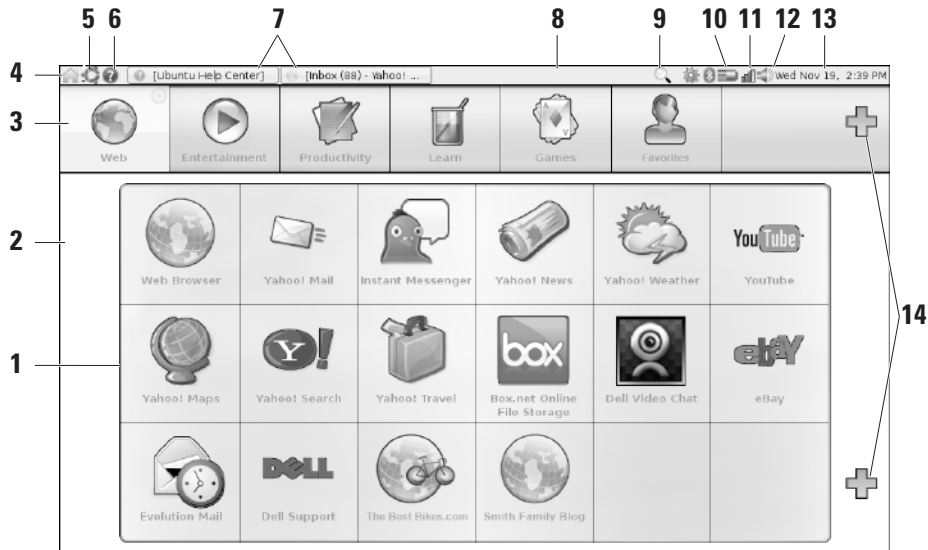

- 1 Launcher** — The Launcher organizes applications, bookmarks, folders, and documents into categories. Click a Category, and then click an item to open it. Customize the Launcher by adding your favorite items to a Category, or even add a new Category — using the Plus icons.
- 2 Desktop** — Right-click the background to change the background image.
- 3 Categories** — Click a category to view a list of applications, bookmarks, folders, or documents.
- 4 Home icon** — Click this icon to minimize all windows and to display the Launcher.
- 5 Ubuntu icon** — The Ubuntu icon opens the Ubuntu Menu. From the Ubuntu Menu, access applications, preferences, system commands, system settings, and tools.
- 6 Help icon** — Click this icon to access the Help Center.
- 7 Running tasks** — To bring a running task to the foreground, click the corresponding item on the Panel.
- 8 Panel** — The Panel provides quick access to open running tasks on the desktop, or to frequently-used programs, files, or utilities on your computer.
- 9 Search icon** — Click this icon to search for files and folders.
- 10 Battery/Charging status indicator** — Move the mouse over this icon to view the battery status. Right-click to change your Power Manager settings.
- 11 Network status indicator** — Click the icon to view the list of available networks. When connected to a wireless network, the icon changes to a series of bars indicating signal strength. The more bars, the stronger the signal.
- 12 Volume control icon** — Click this icon to adjust the volume of the computer.
- 13 Notification area** — Includes a clock and icons associated with programs.
- 14 Plus icons** — Click the upper Plus icon to add a category to the Launcher. Click the lower Plus icon to add applications or website bookmarks.

Getting Started With Your Classic Desktop

To switch from the Dell Desktop Launcher to the Classic Desktop, click  → **Switch Desktop Mode** → **Classic Desktop**.

Starting an Application

1. Click the **Applications** menu.
2. Select the appropriate category and application.

Customizing Your Desktop

Personalizing the Panel

You can add frequently used utilities and applications to the Panel by performing the following procedures:

1. Right-click the Panel and select **Add to Panel**.
2. Select an application in the **Add to Panel** dialog box and click **Add**.

Adding and Removing an Application Icon on Your Desktop

You can add an icon on your Desktop to launch a frequently used application.

1. Select an application in the **Applications** menu.
2. Drag and drop the application on to the Desktop.

To remove an application icon from your Desktop, drag it into the trash bin.

Getting Started With Ubuntu


Connecting to the Internet Using a Wireless or Wired Connection

Connecting to a Wireless Network

1. To initiate a connection to a wireless network, click the **Network Manager** icon on the right side of the Panel.
2. Select the network to which you would like to connect. If the network requires a password, the **Wireless Network Key Required** screen appears. Enter the network password. Select the **Show password** checkbox to review your password, if needed.

Connecting to a Wired Network

1. To use a wired network connection, connect the network cable into the network port on the right side of your computer.


2. If your network automatically assigns IP addresses and network settings, your set-up is complete.
3. If your network does not automatically assign a network address to your computer, you may configure an IP address on your computer from the **Network Administration** screen. Go to  → **System** → **Administration** → **Network Settings**. Use the IP address and network information provided by your ISP or network administrator.

Quickly Viewing a Window in Full Screen

Press <Ctrl><Alt><F> to toggle between standard view and full screen view.



System Preferences and Administration

From the Dell Desktop, use the tools available from  → **System** to control the appearance and operation of your computer.

- Select **Preferences** for settings of themes, keyboard shortcuts, and power management.
- Select **Administration** to manage computer monitors and configuration tools functions such as network, printing, and users and groups.

Setting Screensaver Preferences

1. Click  → **System** → **Preferences** → **Screensaver**.

The **Screensaver Preferences** window appears.

2. In the **Screensaver theme** list, select **Blank** for a blank screen, select **Random** for a random screensaver, or select a screensaver of your choice.
3. Adjust the slider for the length of time that you want your computer to idle before the screensaver appears.

4. Ensure that the **Activate screensaver when computer is idle** checkbox is selected.
5. If you want the screensaver to lock the screen, select the **Lock screen when screensaver is active** checkbox.
6. Click **Close**.



Browsing Files and Folders

The **File Manager** allows you to view, create, organize, and search for your files and folders using an interface similar to a web browser. To open the file browser from the Dell Launcher, select **Productivity**→**Places**.

Using Bookmarks

 
Bookmarks in the **File Manager** are similar to bookmarks in a web browser. Use the bookmarks feature to help you quickly open frequently used folders.

To add a bookmark

1. Browse to the folder that you want to bookmark, and open it.
2. Click **Bookmarks**→**Add Bookmark** or press <Ctrl><D>. The bookmark appears in the **Bookmarks** menu and in the lower portion of the side pane.

Creating a New Folder

1. Browse to the location where you want to create the new folder.
2. Click **File**→**Create Folder**, or right-click and select **Create Folder**, or press <Shift><Ctrl><N>.
3. Name the folder and press **Enter**.

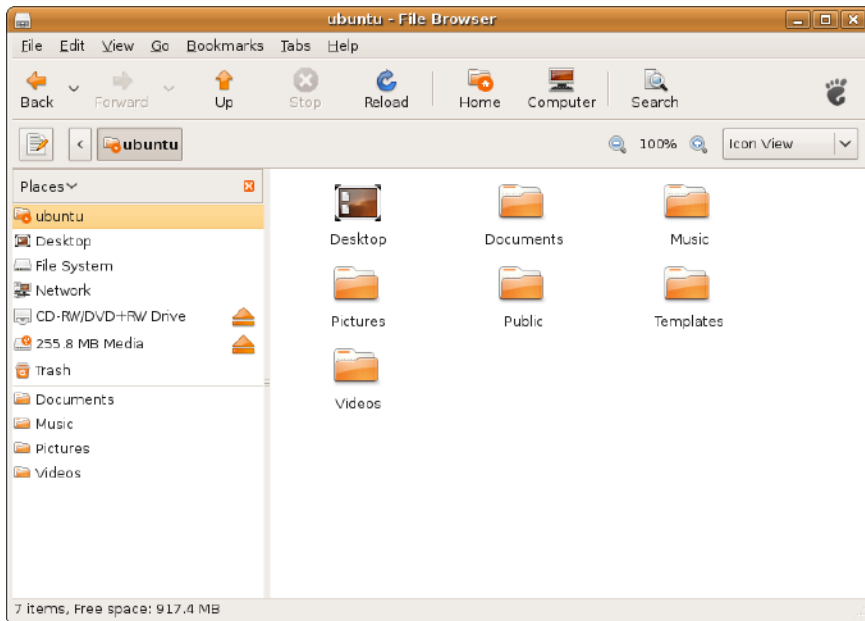

Using the Web Browser

You can browse the web using the web browser. The search box allows you to search the web directly from the toolbar. Tabbed browsing means you can have multiple pages open, but contained within the same browser window.

Using Tabbed Browsing

To open a new tab, go to **File**→**New Tab** or press <Ctrl><T>.

To close a tab, click the close button on the tab or press <Ctrl><W>.


Using Bookmarks

 
1. To bookmark a page, click **Bookmarks**→**Bookmark This Page** or press <Ctrl><D> or to bookmark a group of tabs, select **Bookmarks**→**Bookmark All Tabs**.

2. Select a folder for the bookmark and click **Add**. Bookmarks saved to the **Bookmarks Toolbar Folder** appear on the Bookmarks Toolbar.
3. To organize and edit your bookmarks, click **Bookmarks**→**Organize Bookmarks**.

Adding Bookmarks to the Launcher

If you have the Dell Desktop enabled, you can add web site bookmarks to the Launcher from within the web browser.

1. To add a bookmark to the Launcher, choose one of the following methods:
 - Select **Bookmarks**→**Bookmark in Launcher**
 - Press <Ctrl><Shift><D>
 - Click the heart icon  from the navigation bar
2. Select a category and click **Apply**.

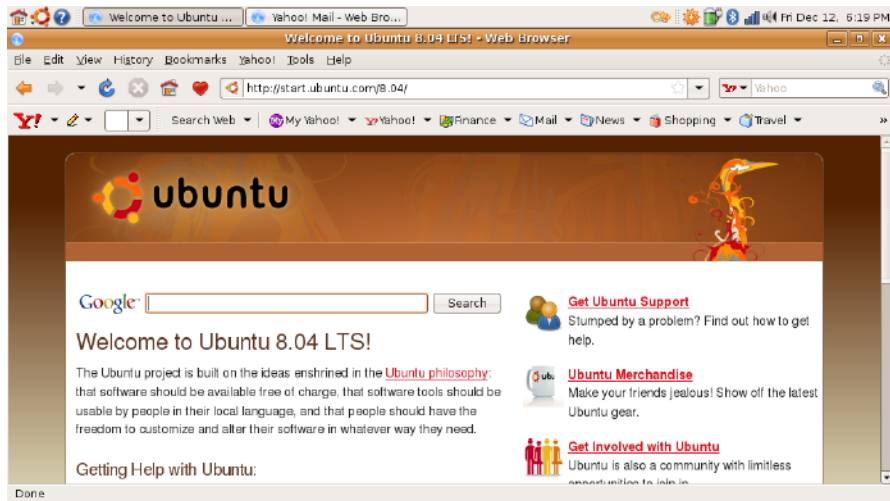

The screenshot shows a web browser window with the following elements:

- Browser Tabs:** "Welcome to Ubuntu ..." and "Yahoo! Mail - Web Bro...".
- Address Bar:** "http://start.ubuntu.com/8.04/".
- Navigation Bar:** Includes "Search Web", "My Yahoo!", "Yahoo!", "Finance", "Mail", "News", "Shopping", and "Travel".
- Page Content:**
 - Header:** The Ubuntu logo and the text "ubuntu".
 - Search:** A Google search bar with a "Search" button.
 - Section:** "Welcome to Ubuntu 8.04 LTS!".
 - Text:** "The Ubuntu project is built on the ideas enshrined in the [Ubuntu philosophy](#): that software should be available free of charge, that software tools should be usable by people in their local language, and that people should have the freedom to customize and alter their software in whatever way they need."
 - Getting Help with Ubuntu:** A section with a heading and a partially visible paragraph: "Ubuntu is also a community with limitless opportunities to join in...".
 - Right Column:** Three links with icons:
 - Get Ubuntu Support:** "Stumped by a problem? Find out how to get help."
 - Ubuntu Merchandise:** "Make your friends jealous! Show off the latest Ubuntu gear."
 - Get Involved with Ubuntu:** "Ubuntu is also a community with limitless opportunities to join in..."

Instant Messaging With Pidgin

The Pidgin messaging client allows you to use multiple types of instant messaging accounts and protocols all at once.

1. From the Dell Launcher, select **Web**→ **Instant Messenger**.
2. If you are opening Pidgin for the first time, in addition to your Buddy List, an **Accounts** dialog box prompts you to add accounts. Click **Add**.
3. Select the **Protocol** of the account that you want to add, enter the required information, and click **Save**.
4. Close the **Accounts** dialog box and, optionally, the **Buddy List**.

To access the Pidgin menu options, right-click the Pidgin icon on the top Panel.

Using Totem TV

If your computer includes the optional TV tuner/antenna, you can use the Totem TV player to watch digital TV:

1. From the Dell Launcher, select **Entertainment**→ **TV Player**.
2. Totem TV automatically presents a scan dialog. Choose **DVB-T**.
3. After scanning completes, double-click the desired channel name from the list to begin viewing.

Dell Media Experience

For the best multimedia experience, Dell provides PowerCinema — a media player for Music, Video, Photos, and Movies. To view DVD movies, the portable Dell CD/DVD Player and PowerDVD software are required.

To use Dell Media Experience, select **Entertainment**→ **Dell Media Experience** from the Dell Launcher.

Applications in Ubuntu

Ubuntu comes with a wide variety of pre-installed applications.

Some of the most frequently used applications include the following:



Pidgin Instant Messenger



Evolution Mail



Rhythmbox Music Player



Movie Player




OpenOffice.org Word Processor



Web Browser

Adding and Removing Applications

1. Click  → **Applications** → **Add/Remove**.
2. To add an application, select the required application checkbox. To remove an application, deselect the required application checkbox.
3. Some applications may require additional supporting applications or will be a part of a bundle. If you still want to install/remove the application, click **Install All/Remove All** in the confirmation window.
4. When you have finished making changes, click **OK**.
5. Check the list of changes you have made in the confirmation window and click **Apply**.
6. Progress windows appear while downloading, installing, and removing applications. Once the processes finish, the **Changes Applied** window appears.
7. Click **Close**.

Connecting Devices

Ubuntu supports a wide range of peripheral devices and lets you connect to them easily.



USB Drives

1. Connect storage devices like USB hard drives or pen drives to an available USB port on the computer
2. The drivers are automatically installed and the File Browser window appears.
3. You can now transfer files between your computer and the storage device.

Digital Cameras

1. Connect your digital camera to an available USB port on the computer.
2. Turn on the camera and place it in review or file transfer mode.
3. On the screen that appears, choose F-Spot Photo Manager as the program to open.
4. Select the photo(s) and the location to transfer the photos.
5. Click **Copy** and the photos are transferred to the selected location.


Bluetooth Devices

1. From the Panel, right-click the Bluetooth icon  and select **Connect new device...**
2. The **Bluetooth Device Wizard** screen appears. Click **Forward**.
3. The detected Bluetooth devices are listed. Select the device you wish to use and click **Forward**.
4. A PIN code may be necessary to establish connection. On the Bluetooth device, enter the PIN code displayed on your computer screen, and you are connected (paired).
5. The **Successfully configured new device** message appears. Click **Close**.
6. To transfer or browse files, right-click the Bluetooth icon  and select **Send files to device...** or **Browse files on device...**

Restoring Your Ubuntu System

Use the *Ubuntu LTS* DVD that shipped with your computer to restore your operating system.


 **CAUTION: Using the Ubuntu LTS DVD deletes all data on the hard drive.**

 **NOTE:** Your computer may or may not have an optical drive. Use an external optical drive or any external storage device for the procedures that involve media.

Starting System Restore

1. Turn off the computer.
2. Connect an external USB optical drive into an available USB connector on your computer.
3. Insert the *Ubuntu LTS* DVD in the external USB optical disc drive.

 **CAUTION: Using the Ubuntu LTS DVD deletes all data on the hard drive.**

4. Turn on the computer.
5. When the DELL logo appears, press <F12> immediately.
 **NOTE:** The next steps change the boot sequence for one time only. On the next start-up, the computer boots according to the devices specified in the system setup program.
6. When the boot device list appears, highlight **CD/DVD/CD-RW** and press <Enter>.
7. Press any key to **Boot from CD-ROM**. Follow the instructions on the screen to complete the installation.

Printed in China.

Printed on recycled paper.

www.dell.com | support.dell.com



OF670RA00