



Setting Up Your Computer

XPS



Before you set up and operate your Dell™ computer, see the safety instructions in the *Owner's Manual*. Also, see your *Owner's Manual* for a complete list of features.



1 AC Adapter




2 Modem



3 Network



4 Power Button

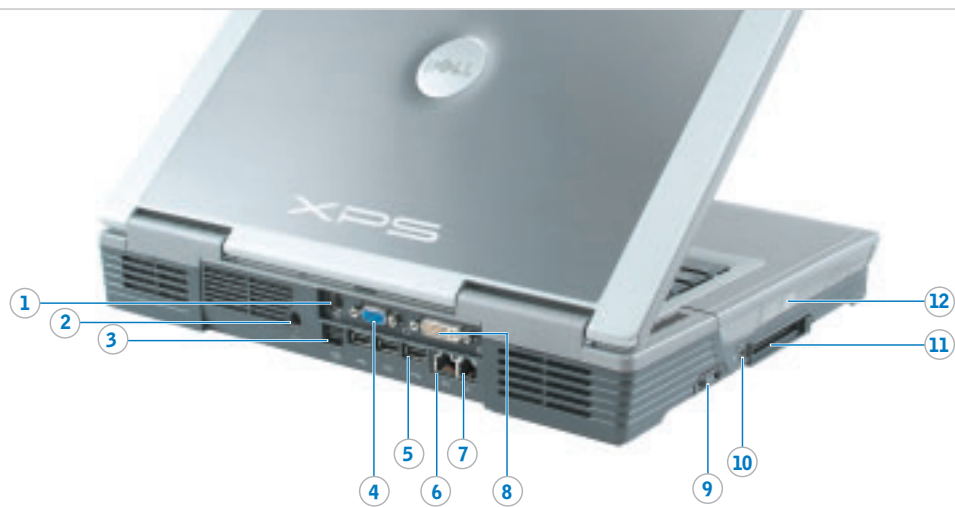

- 1. S-video TV-out connector
- 2. AC adapter connector
- 3. D/Bay connector
- 4. video connector
- 5. USB connector (3)
- 6. network connector
- 7. modem connector
- 8. DVI-I connector
- 9. audio connectors (2)

- 10. IEEE 1394 connector
- 11. PC Card slot
- 12. module bay
- 13. track stick
- 14. touch pad buttons
- 15. touch pad
- 16. track stick buttons
- 17. media control buttons
- 18. power button



0K3342A00





Battery

To remove the battery, slide the battery latch release and lift the battery out of the bay.

NOTE: If you ordered the optional subwoofer, it is located in the battery bay (12-cell battery only).



Wireless Network (Optional)

1. Ensure that your wireless router is enabled.
2. Right-click the wireless network connections icon in the lower-right corner of the Microsoft® Windows® operating system desktop.
3. Click **View Available Wireless Networks** and select the network that you want to join.
4. Click **Allow me to connect to the selected wireless network, even though it is not secure.**
5. Click **Connect.** Go to www.dell.com to verify the connection.



Finding Answers

See your *Owner's Manual* for information on setting up devices like printers.

See the *Dell™ Inspiron™ Help* file for information on using your computer and operating system.

To access the *Dell Inspiron Help* file:

1. Click the **Start** button and click **Help and Support.**
2. Click **User and system guides** and click **User's guides.**
3. Click **Dell Inspiron Help.**

Information in this document is subject to change without notice.

© 2004 Dell Inc. All rights reserved.

Reproduction in any manner whatsoever without the written permission of Dell Inc. is strictly forbidden.

Dell, the *DELL* logo, and *Inspiron* are trademarks of Dell Inc.; *Microsoft* and *Windows* are registered trademarks of Microsoft Corporation. Dell disclaims proprietary interest in the marks and names of others.

January 2004

