

Latitude 13

3000 Series 2-in-1


Quick Start Guide

Panduan Pengaktifan Cepat



1 Connect the power adapter and press the power button

Sambungkan adaptor daya dan tekan tombol daya

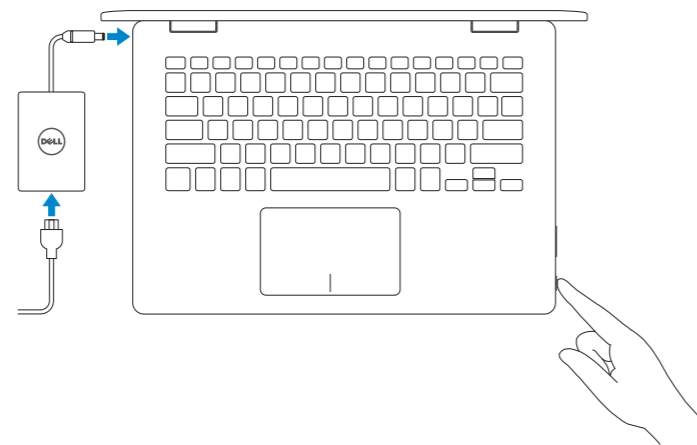

2 Finish Windows 10 setup

Tuntaskan penataan Windows 10

Connect to your network

Sambungkan ke jaringan Anda



NOTE: If you are connecting to a secured wireless network, enter the password for the wireless network access when prompted.

CATATAN: Jika Anda menghubungkan ke jaringan nirkabel aman, masukkan kata sandi untuk akses jaringan nirkabel tersebut saat diminta.

Sign in to your Microsoft account or create a local account

Masuk ke akun Microsoft Anda atau buat akun lokal




Locate Dell apps

Mencari aplikasi Dell



Dell SupportAssist

Check and update your computer
Periksa dan perbarui komputer Anda

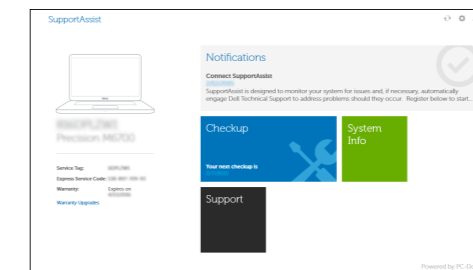

Product support and manuals
Manual dan dukungan produk

Dell.com/support
Dell.com/support/manuals
Dell.com/support/windows

Contact Dell
Hubungi Dell

Dell.com/contactdell

Regulatory and safety
Regulasi dan keselamatan

Dell.com/regulatory_compliance

Regulatory model
Model regulatori

P69G

Regulatory type
Jenis regulatori

P69G001

Computer model
Model komputer



Latitude 3379



07332NA01

Features

Fitur

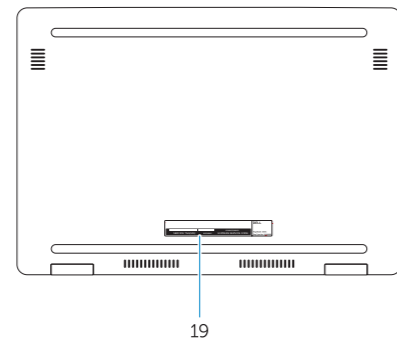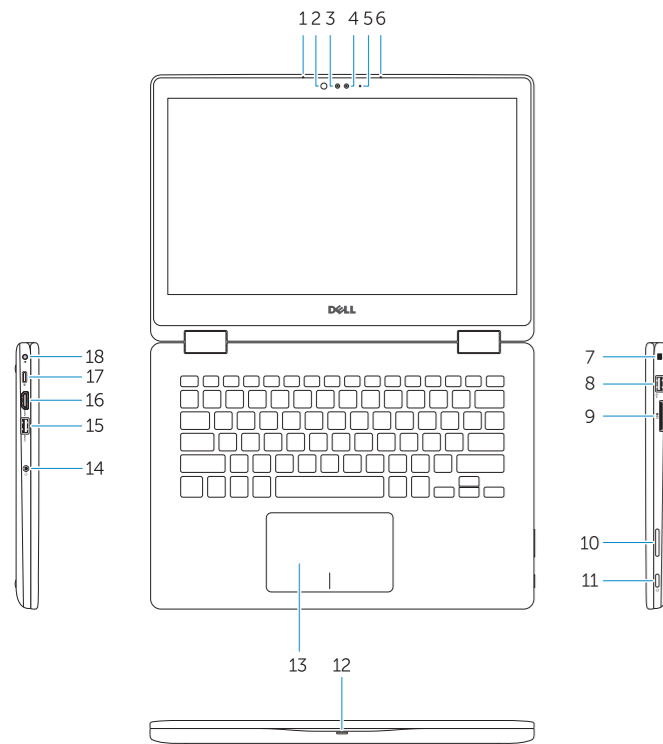

- 1. Microphone
- 2. Infrared emitter
- 3. Infrared camera
- 4. Camera
- 5. Camera-status light
- 6. Microphone
- 7. Security cable slot
- 8. USB 2.0 port
- 9. Media card reader
- 10. Volume control buttons
- 11. Power button
- 12. Power and battery status light/hard drive activity light
- 13. Touchpad
- 14. Headset port
- 15. USB 3.0 with PowerShare
- 16. HDMI port
- 17. USB Type-C port
- 18. Power connector port
- 19. Service Tag label

- 1. Mikrofon
- 2. Pemancar inframerah
- 3. Kamera inframerah
- 4. Kamera
- 5. Lampu status kamera
- 6. Mikrofon
- 7. Slot kabel pengaman
- 8. Port USB 2.0
- 9. Pembaca kartu media
- 10. Tombol kontrol volume
- 11. Tombol daya
- 12. Lampu daya dan status baterai/lampu aktivitas hard disk


- 13. Panel sentuh
- 14. Port headset
- 15. USB 3.0 dengan PowerShare
- 16. Port HDMI
- 17. Port USB Tipe-C
- 18. Port konektor daya
- 19. Label Tag Servis

Modes

Mode


Notebook

Notebook

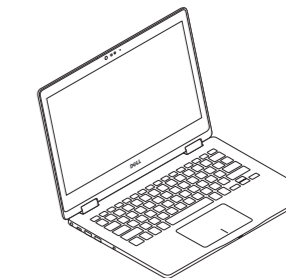


Tablet

Tablet

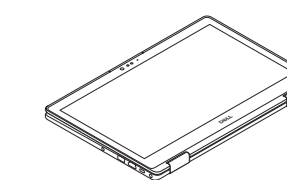

Stand

Dudukan

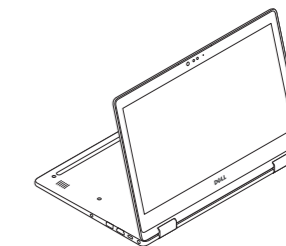

Tent

Tenda

