



# Replacing the Bottom Access Panel

## About Cautions



**CAUTION:** A CAUTION indicates a potential for property damage, personal injury, or death.



**CAUTION:** Before you begin any of the procedures in this section, read the safety information that shipped with your computer. For additional safety best practices information, see the Regulatory Compliance Homepage at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).



**NOTICE:** If you need to remove the computer cover, first disconnect the computer power and modem cables from all electrical outlets.

To replace the bottom access panel of your computer, you need the iAMT configuration-mode number that is located on the original bottom access-panel of your computer.

Follow the instructions on this tech sheet carefully to ensure that you:

- Remove the original bottom access-panel from your computer (see your *Service Manual*).
- Select the correct label that is provided in the replacement kit.
- Install the label in the correct location on the replacement bottom access-panel.

 
To replace the bottom access panel:

- 1 Remove the original bottom access-panel from your computer (see your *Service Manual*).




**NOTE:** If the original iAMT configuration-mode label is missing, damaged, or otherwise illegible, contact Dell to obtain your iAMT configuration-mode number (see your *Setup and Quick Reference Guide* for contact information).

- 2 Take note of the label that is attached to the inside of the cover.

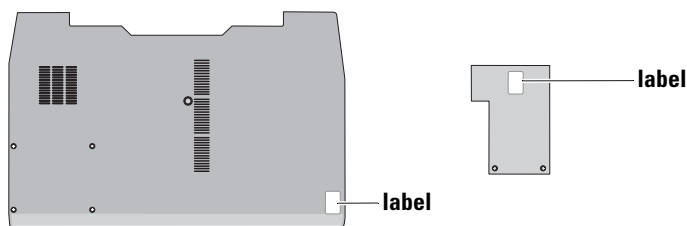

 You should see one of the following four yellow iAMT configuration-mode labels on the inside of the bottom access panel:

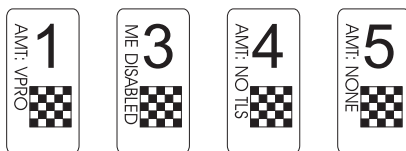

- 3 Select the matching label from the set of four iAMT configuration-mode labels that came with the new bottom access panel.
- 4 Install the new label in the matching location on the new bottom access panel.
- 5 Replace the bottom access panel (see your *Service Manual*).

---

**Information in this document is subject to change without notice.**

© 2008 Dell Inc. All rights reserved.

Reproduction of these materials in any manner whatsoever without the written permission of Dell Inc. is strictly forbidden.

Trademarks used in this text: *Dell* and the *DELL* logo are trademarks of Dell Inc.; *iAMT* is a registered trademark of Intel Corporation in the U.S. and other countries.

Other trademarks and trade names may be used in this document to refer to either the entities claiming the marks and names or their products. Dell Inc. disclaims any proprietary interest in trademarks and trade names other than its own.