

Vostro 14

5000 Series


Quick Start Guide

Pedoman Panduan Cepat



1 Connect the power adapter and turn on your computer


Hubungkan adaptor daya dan hidupkan komputer Anda

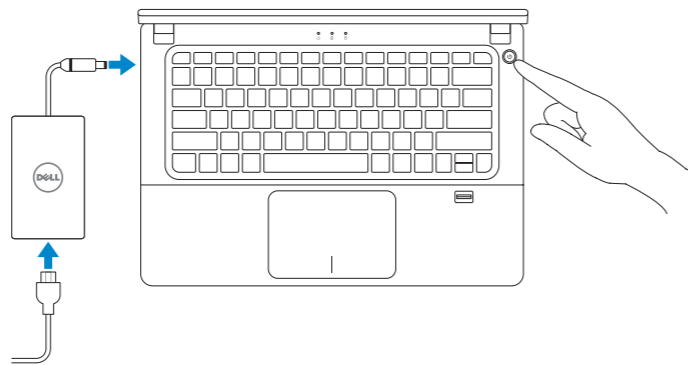

2 Finish Windows setup

Selesaikan penataan Windows

Windows 8

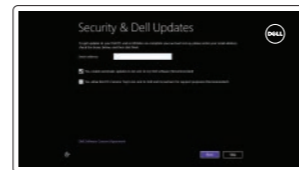

Enable security and updates

Aktifkan keamanan dan pembaruan




Connect to your network

Sambungkan ke jaringan Anda

NOTE: If you are connecting to a secured wireless network, enter the password for the wireless network access when prompted.


CATATAN: Jika Anda menyambungkan ke jaringan nirkabel aman, masukkan kata sandi untuk akses jaringan nirkabel saat diminta.

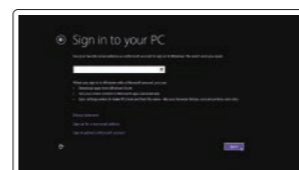

Sign in to your Microsoft account or create a local account


Masuk ke akun Microsoft Anda atau buat akun lokal

Windows 7

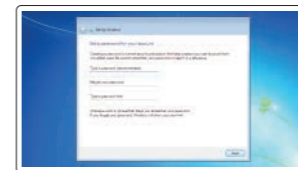

Set up password for Windows

Atur kata sandi untuk Windows

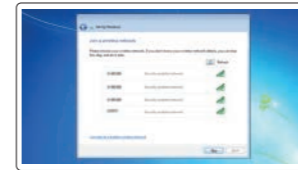


Connect to your network

Sambungkan ke jaringan Anda

NOTE: If you are connecting to a secured wireless network, enter the password for the wireless network access when prompted.

CATATAN: Jika Anda menyambungkan ke jaringan nirkabel aman, masukkan kata sandi untuk akses jaringan nirkabel saat diminta.

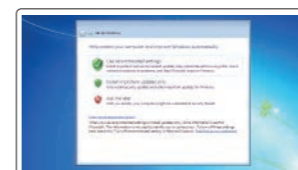

Protect your computer

Lindungi komputer Anda

Ubuntu

Follow the instructions on the screen to finish setup.

Ikuti petunjuk pada layar untuk menyelesaikan pengaturan.

Locate your Dell apps


Cari lokasi aplikasi Dell Anda

Windows 8




Register your computer

 Daftarkan komputer Anda




Dell Backup and Recovery

 Dell Backup and Recovery



My Dell

My Dell

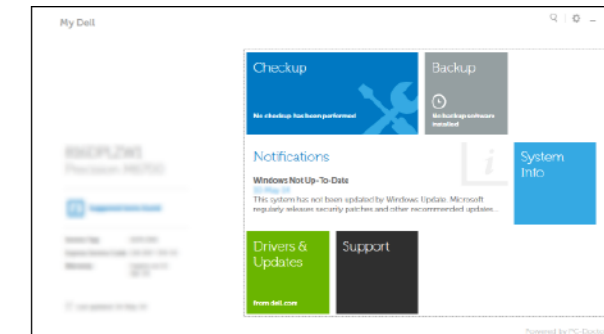

Product support and manuals

Dukungan dan panduan produk

Contact Dell

Hubungi Dell

Regulatory and safety

Regulasi dan keselamatan

Regulatory model

Model regulatori

Regulatory type

Jenis regulatori

Computer model

Model komputer

dell.com/support

dell.com/support/manuals

dell.com/contactdell

dell.com/regulatory_compliance

P41G

P41G002

Vostro 14-5480

Learn how to use Windows


Pelajari cara menggunakan Windows

Windows 8




Help and Tips

Bantuan dan Tips

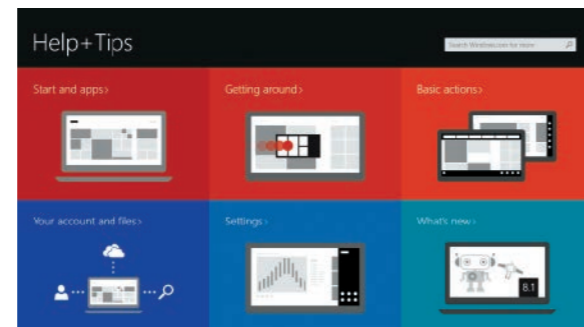

Features

Fitur

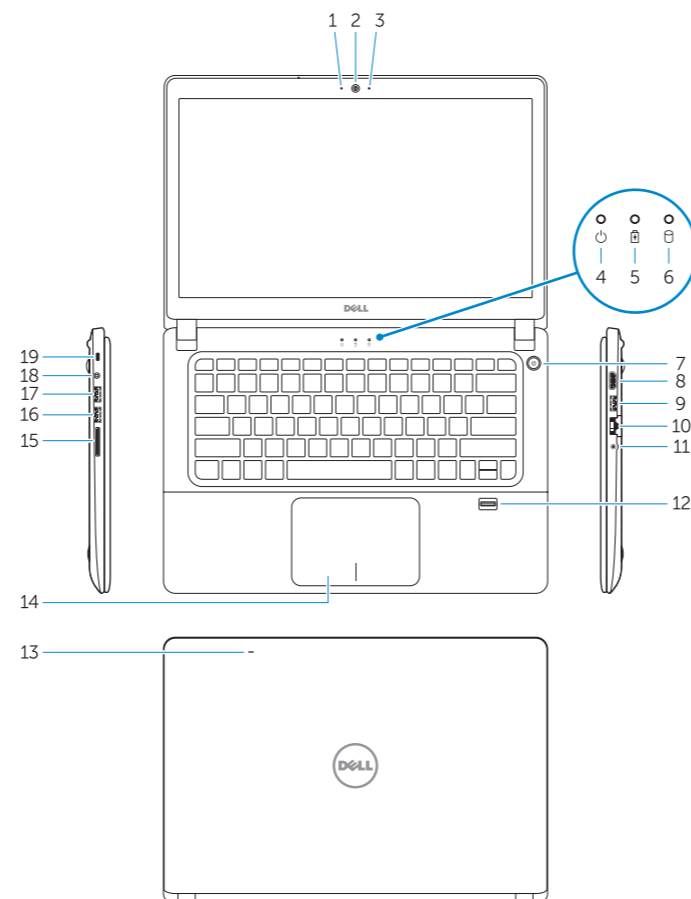

1. Camera-status light
2. Camera
3. Microphone
4. Power-status light
5. Battery-status light
6. Hard-drive activity light
7. Power button
8. HDMI connector
9. USB 3.0 connector
10. Network connector
11. Headset connector
12. Fingerprint reader

NOTE: Fingerprint reader application is not available for Windows 7 OS by default

13. Microphones
14. Touchpad
15. Memory card reader
16. USB 3.0 connector
17. USB 3.0 connector with PowerShare
18. Power connector
19. Security-cable slot
20. Service-tag label
21. Sub-woofer speaker
22. Speakers

1. Lampu status kamera
2. Kamera
3. Mikrofon
4. Lampu status daya
5. Lampu status baterai
6. Lampu aktivitas hard disk
7. Tombol Daya
8. Konektor HDMI
9. Konektor USB 3.0
10. Konektor jaringan
11. Konektor headset
12. Pembaca sidik jari
13. Mikrofon
14. Panel sentuh
15. Pembaca kartu memori
16. Konektor USB 3.0
17. konektor USB 3.0 dengan PowerShare
18. Konektor daya
19. Slot kabel pengaman
20. Label tag servis
21. Speaker sub-woofer
22. Speaker

CATATAN: aplikasi pembaca sidik jari tidak tersedia bagi OS Windows 7 secara bawaan

Printed in China.

Printed on recycled paper.

2017-05

NOTE: For more information, see *Owner's Manual* at dell.com/support/manuals.

CATATAN: Untuk informasi lebih lanjut, lihat *Panduan Pemilik* di dell.com/support/manuals.