

Vostro 15

3000 Series


Quick Start Guide

Pedoman Panduan Cepat




1 Connect the power adapter and press the power button

Sambungkan adaptor daya dan tekan tombol daya

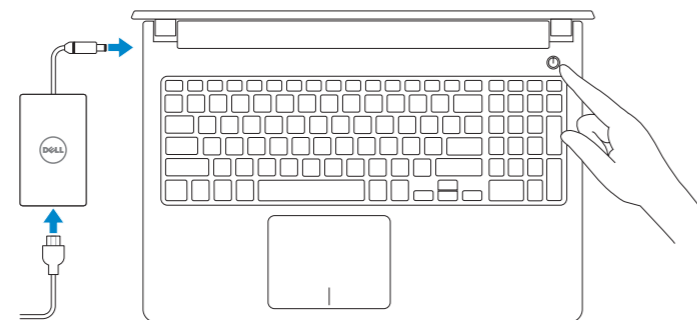


2 Finish Windows 10 setup

Tuntaskan penataan Windows 10

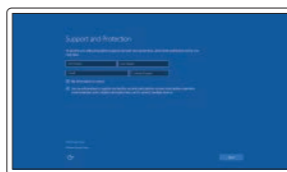

Enable Support and Protection

Aktifkan Dukungan dan Perlindungan

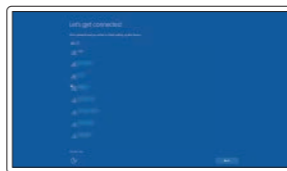

Connect to your network

Sambungkan ke jaringan Anda

NOTE: If you are connecting to a secured wireless network, enter the password for the wireless network access when prompted.

CATATAN: Jika Anda menyambungkan ke jaringan nirkabel aman, masukkan kata sandi untuk akses jaringan nirkabel saat diminta.



Sign in to your Microsoft account or create a local account

Masuk ke akun Microsoft Anda atau buat akun lokal

Create recovery media for Windows

Buat media pemulihan untuk Windows

In Windows search, type **Recovery**, click **Create a recovery media**, and follow the instructions on the screen.

Di pencarian Windows, ketik **Pemulihan**, klik **Buat media pemulihan**, dan ikuti petunjuk pada layar.

Locate Dell apps

Mencari lokasi aplikasi Dell



Dell Product Registration

Register your computer


Daftarkan komputer Anda



Dell SupportAssist

Check and update your computer

Periksa dan perbarui komputer Anda

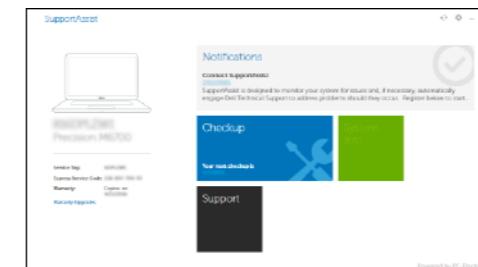

Product support and manuals

Dukungan dan panduan produk

Dell.com/support

Dell.com/support/manuals

Dell.com/support/windows

Contact Dell

Hubungi Dell

Dell.com/contactdell

Regulatory and safety

Regulasi dan keselamatan

Dell.com/regulatory_compliance

Regulatory model

Model regulatori

P52F

Regulatory type

Jenis regulatori

P52F001/ P52F003

Computer model

Model komputer

Vostro 15-3558/3559

© 2017 Dell Inc.

© 2017 Microsoft Corporation.


© 2015 Canonical Ltd.

Printed in China.


2017-05

Features

Fitur

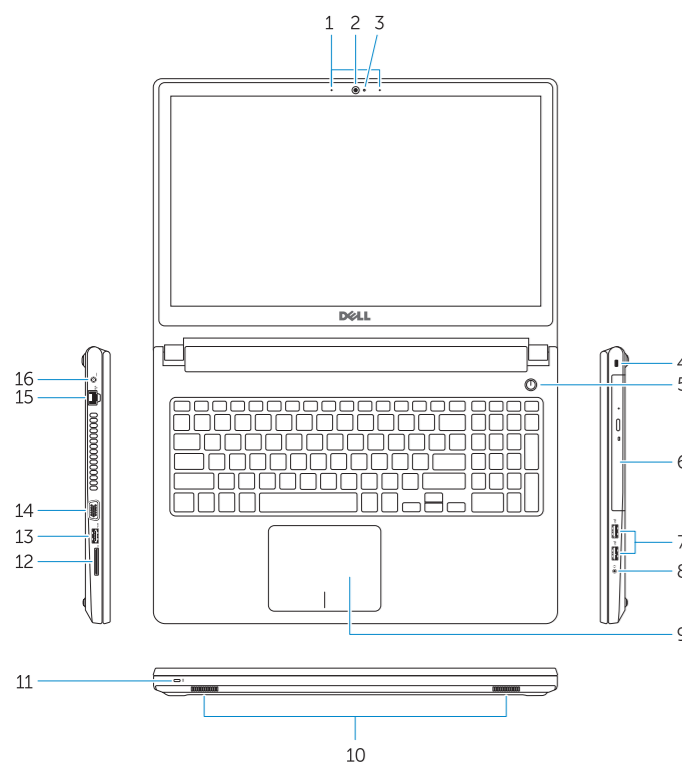

- 1. Microphone (Vostro 15-3558)
- 2. Camera
- 3. Camera-status light
- 4. Microphone
- 5. Security-cable slot
- 6. Power button
- 7. Optical drive
- 8. USB 2.0 connectors
- 9. Headset connector
- 10. Touchpad
- 11. Speakers
- 12. Power and battery-status light/ Hard-drive activity light
- 13. Memory-card reader
- 14. USB 3.0 connector
- 15. VGA connector
- 16. Network connector
- 17. Power connector
- 18. Battery
- 19. Service-Tag label

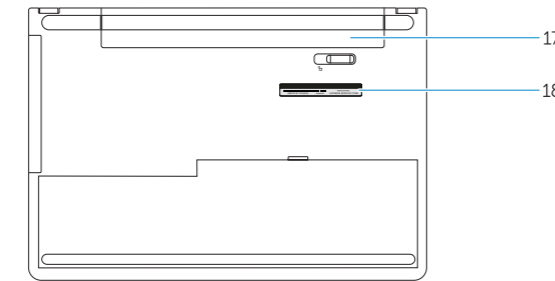


- 1. Mikrofon (Vostro 15-3558)
- 2. Kamera
- 3. Lampu status kamera
- 4. Mikrofon
- 5. Slot kabel pengaman
- 6. Tombol Daya
- 7. Drive optik
- 8. Konektor USB 2.0
- 9. Konektor headset
- 10. Panel sentuh
- 11. Speaker
- 12. Lampu daya dan status baterai/Lampu aktivitas hard disk
- 13. Pembaca kartu memori
- 14. Konektor USB 3.0
- 15. Konektor VGA
- 16. Konektor jaringan
- 17. Konektor daya
- 18. Baterai
- 19. Label Tag Servis

Shortcut keys

Tombol pintasan



 - F1** Mute audio
Mendiamkan audio
- F2** Decrease volume
Menurunkan volume
- F3** Increase volume
Meningkatkan volume
- F4** Previous track
Trek sebelumnya
- F5** Play/Pause
Memutar/Menjeda
- F6** Next track
Trek berikutnya
- F8** Extend display
Perpanjang display
- F9** Search
Menelusuri
- F10** Backlit keyboard
Keyboard dengan lampu latar



- F11** Decrease brightness
Menurunkan kecerahan
- F12** Increase brightness
Meningkatkan kecerahan
- Fn** + **PrtScr** Toggle Fn-key lock
Mengalihkan kunci tombol Fn
- Fn** + **Esc** Previous track
Trek sebelumnya
- Fn** + **Insert** Put the computer to sleep
Membuat komputer tertidur
- Fn** + **H** Toggle between power and battery-status light/harddrive activity light
Mengalihkan antara lampu daya dan status baterai/lampu aktivitas hard disk