Dell Vostro 3360

Setup And Features Information

About Warnings

MARNING: A WARNING indicates a potential for property damage, personal injury, or death.

Front And Back View

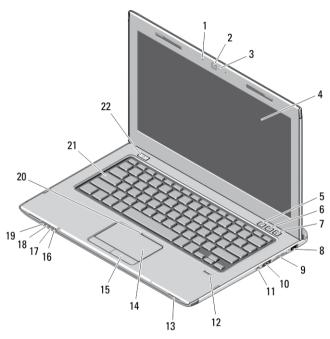


Figure 1. Front View

- 1. microphone (2)
- 2. camera
- 3. camera status light
- 4. display
- 5. Windows Mobility Center
- 6. Dell Support Center
- 7. Dell Instant Launch Manager
- 8. network connector
- 9. Secure Digital (SD) 8- in-1 media card reader
- 10. USB 3.0 connector
- 11. audio connector
- 12. fingerprint reader

- 13. speakers (2)
- 14. touchpad
- 15. touchpad buttons (2)
- 16. wireless status light
- 17. battery status light
- 18. hard disk status light
- 19. power status light
- touchpad status light
- 21. keyboard
- 22. power button





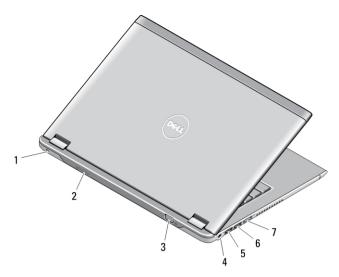


Figure 2. Back View

- 1. security cable slot
- 2. SIM card slot
- 3. VGA connector
- 4. AC adapter connector

- 5. USB 3.0 connector with PowerShare
- 6. USB 3.0 connector
- 7. HDMI connector

Quick Setup



MARNING: Before you begin any of the procedures in this section, read the safety information that shipped with your computer. For additional best practices information, see www.dell.com/regulatory_compliance.



MARNING: The AC adapter works with electrical outlets worldwide. However, power connectors and power strips vary among countries. Using an incompatible cable or improperly connecting the cable to the power strip or electrical outlet may cause fire or equipment damage.



CAUTION: When you disconnect the AC adapter cable from the computer, grasp the connector, not the cable itself, and pull firmly but gently to avoid damaging the cable. When you wrap the AC adapter cable, ensure that you follow the angle of the connector on the AC adapter to avoid damaging the cable.



NOTE: Some devices may not be included if you did not order them.

Connect the AC adapter to the AC adapter connector on the computer and to the electrical outlet.



Figure 3. AC Adapter

Connect the network cable (optional).

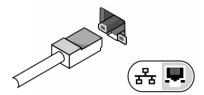 


Figure 4. Network Connector

3. Connect USB devices, such as a mouse or keyboard (optional).

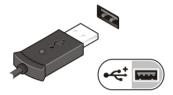 


Figure 5. USB Connector

4. Open the computer display and press the power button to turn on the computer.



Figure 6. Power Button



NOTE: It is recommended that you turn on and shut down your computer at least once before you install any cards or connect the computer to a docking device or other external device, such as a printer.

Specifications



NOTE: Offerings may vary by region. The following specifications are only those required by law to ship with your computer. For more information regarding the configuration of your computer, click **Start** \rightarrow **Help and Support** and select the option to view information about your computer.

Power	
AC Adapter	65 W
Input voltage	100 VAC to 240 VAC
Coin-cell battery	3 V CR2032 lithium coin cell
Physical	
Height	19.20 mm (0.75 inch)
Width	332.00 mm (13.07 inches)
Depth	232.50 mm (9.15 inches)
Weight (with battery pack)	1.68 kg (3.70 lb)

Environmental

Operating Temperature

0 °C to 35 °C (32 °F to 95 °F)

Information para NOM (únicamente para México)

Voltaje de alimentación 100 V CA – 240 V CA

Frecuencia 50 Hz – 60 Hz
Consumo eléctrico 1,50 A /1,70 A
Voltaje de salida 19,50 V de CC

Intensidad de salida 3,34 A

Finding More Information and Resources

See the safety and regulatory documents that shipped with your computer and the regulatory compliance website at **www.dell.com/regulatory_compliance** for more information on:

- Safety best practices
- Regulatory certification
- · Ergonomics

See www.dell.com for additional information on:

- Warranty
- Terms and Conditions (U.S. only)
- End User License Agreement

Additional information on your product is available at support.dell.com/manuals.

Information in this publication is subject to change without notice.

© 2012 Dell Inc. All rights reserved.

Reproduction of these materials in any manner whatsoever without the written permission of Dell Inc. is strictly forbidden.

Trademarks used in this text: Dell™, the DELL logo, Dell Precision™, Precision ON™,ExpressCharge™, Latitude™, Latitude ON™, OptiPlex™, Vostro™, and Wi-Fi Catcher™ are trademarks of Dell Inc. Intel®, Pentium®, Xeon®, Core™, Atom™, Centrino®, and Celeron® are registered trademarks or trademarks of Intel Corporation in the U.S. and other countries. AMD® is a registered trademark and AMD Opteron™, AMD Phenom™, AMD Sempron™, AMD Athlon™, ATI Radeon™, and ATI FirePro™ are trademarks of Advanced Micro Devices, Inc. Microsoft®, Windows®, MS-DOS®, Windows Vista®, the Windows Vista start button, and Office Outlook® are either trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries. Blu-ray Disc™ is a trademark owned by the Blu-ray Disc Association (BDA) and licensed for use on discs and players. The Bluetooth® word mark is a registered trademark and owned by the Bluetooth® SIG, Inc. and any use of such mark by Dell Inc. is under license. Wi-Fi® is a registered trademark of Wireless Ethernet Compatibility Alliance, Inc.

Other trademarks and trade names may be used in this publication to refer to either the entities claiming the marks and names or their products, Dell Inc. disclaims any proprietary interest in trademarks and trade names other than its own.