




# System Board Jumpers Location For Dell PowerEdge R310 Systems— Information Update

This update supersedes the information provided in the *Hardware Owner's Manual* at [support.dell.com/manuals](http://support.dell.com/manuals).

To locate the system board jumpers and connectors, see Figure 1.

**Figure 1. System Board Jumpers Location**

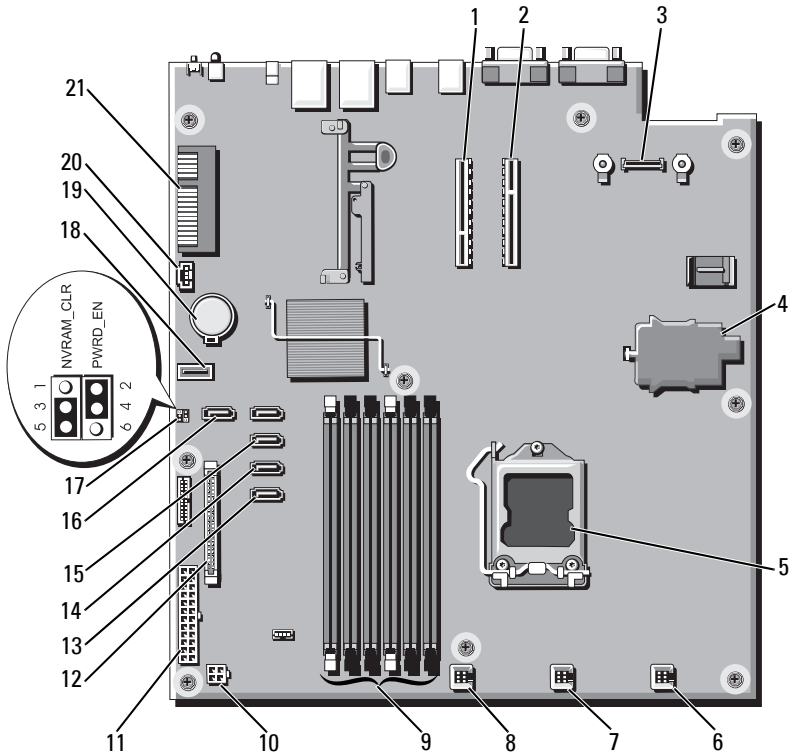

**Table 1. System Board Jumpers and Connectors**

<b>Item</b>	<b>Connector</b>	<b>Description</b>
1	RISER2	Control panel USB interface connector
2	RISER1	SATA A connector
3	iDRAC6 Enterprise	iDRAC6 Enterprise card connector
4	iDRAC6 Express	iDRAC6 Express card connector
5	CPU	Processor socket
6	FAN1	System fan 1 connector
7	FAN2	System fan 2 connector
8	FAN3	System fan 3 connector
9	5	Memory module slot 5
	3	Memory module slot 3
	1	Memory module slot 1 (white release lever)
	6	Memory module slot 6
	4	Memory module slot 4
	2	Memory module slot 2 (white release lever)
10	12 V	4-pin power connector
11	PWR_CONN	24-pin power connector
12	CTRL_PNL	Control panel connector
13	SATA_A	SATA connector A
14	SATA_B	SATA connector B
15	SATA_C	SATA connector C
16	SATA_D	SATA connector D
17	PWRD_EN	Password enable jumper
	NVRAM_CLR	NVRAM clear jumper
18	USB_CONN	Internal USB connector
19	BATTERY	Battery socket

**Table 1. System Board Jumpers and Connectors**

---

<b>Item</b>	<b>Connector</b>	<b>Description</b>
20	HD_ACT_CARD	Expansion-card cable connector
21	PCIE-G2-X4	Internal storage controller card connector

---

© 2012 Dell Inc.

Trademarks used in this text: Dell™, the DELL logo, and PowerEdge™ are trademarks of Dell Inc.

2012 - 06

Rev. A00

