

Mini 3v

Getting Started Guide



DELL™


Overview

Front View Features



- 1 Front camera**
Used for making video calls. The front camera is of a lower resolution than the rear camera.
- 2 Back/Home button**
Press once to view the previous screen.
Press and hold to return to the home screen.
- 3 Camera button**
Press to activate the camera and capture photos or videos.
- 4 Touch screen**
Displays information and enables you to make selections.
- 5 Options button**
Press to view the Options menu.
- 6 Volume buttons (2)**
Press to increase or decrease the volume level.
- 7 Power button**
Press to lock/unlock the screen.
Press and hold to turn on/off the phone.

Back View Features

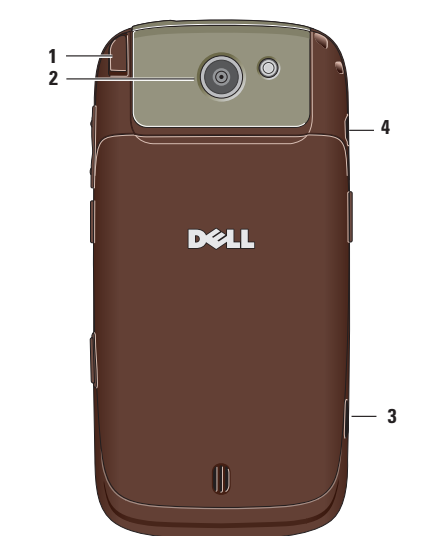

- 1 Antenna**
Extendable antenna used for receiving Mobile TV signals.
- 2 Rear camera**
Used to capture photos and videos.
- 3 Micro-USB connector**
Used to charge the phone and connects to a computer for data transfer.
- 4 3.5 mm headset connector**
Connects to the headset for hands-free communication. Also connects to compatible headphones.


Setting Up Your Mini 3v

1. Remove the back cover



Press your thumb on the groove on the back cover and slide the back cover down.


2. Install the SIM card

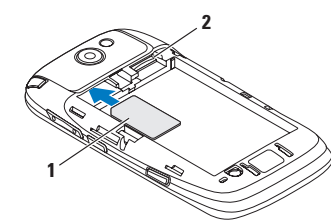

Slide the SIM card into the SIM card slot. Ensure that the SIM card's metal contacts are facing down and the beveled corner on the SIM card is facing the top of the phone.


- 1 SIM card
- 2 MicroSD card

3. Install the battery

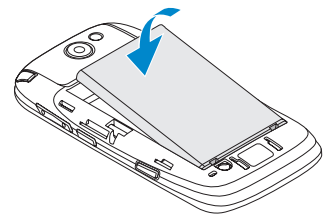


Align the battery's metal contacts with the connectors in the battery compartment and press the battery down until it locks into place.

4. Replace the back cover

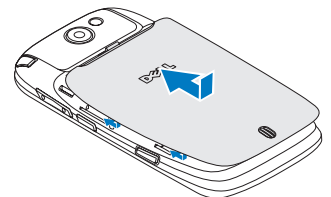

Insert the tabs on the back cover into the slots on the phone and slide the back cover into place.

5. Turn on the phone

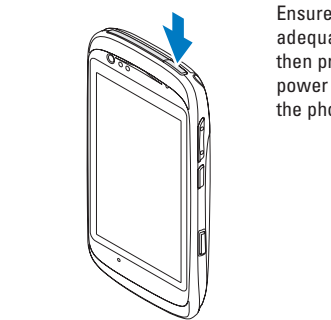

Ensure that the battery is adequately charged and then press and hold the power button to turn on the phone.

Lock Screen



The lock screen displays a slide show of images until the phone is unlocked.

To unlock your phone, drag the circle across the screen to the bottom-left corner.

If the phone is in sleep mode, press the power button once to view the lock screen.

NOTE: The phone enters sleep mode if the phone is not unlocked within a preset time frame.

Home Screen



The Home screen displays the applications available on your phone. To view the Home screen, unlock the phone.

Launch applications — To launch an application tap the application's icon.

Rearrange icons —


1. Tap and hold the icon until it begins to rotate.
2. Drag the rotating icon to the desired location.

Delete icons —




1. Tap and hold the icon until it begins to rotate.
2. Tap the trash bin icon.

NOTE: Certain icons may be locked in position by your service provider. These icons cannot be moved or deleted.

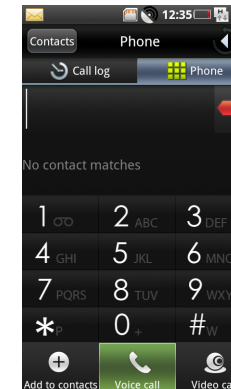Making Calls



To make a call using the dialer:

1. Tap the **Phone** icon  on the Home screen.
2. Tap the Phone tab at the top of the Phone screen to open the on-screen dial pad.
3. Enter the number by tapping the on-screen dial pad. Tap the Backspace icon  to make corrections.
4. Tap the Voice call icon  to dial the number.

Messaging

To launch messaging, tap the **Messaging** icon  on the Home screen.

To send a message:

1. Select a contact from the Messaging list to open the Compose screen.
2. Enter your message.
3. Tap **Send**.

You can also insert images, videos, or captured photos and sounds in your messages.

Input Panel

When you start a program or select a field that requires text or numbers, the input panel appears automatically. You can select an input method and start entering the text.

Your phone supports input in multiple languages, and provides the following input methods:

- QWERTY
- Phone Keypad
- HandWriting

Mobile TV

The Mobile TV application allows you to watch digital TV programs.

 
 **NOTE:** For optimum performance, extend the antenna on your phone before launching Mobile TV.

To launch Mobile TV, tap the Mobile TV icon  on the home screen.



Browser



To launch the web browser, tap the **Browser** icon  on the Home screen.

To create bookmarks to your favorite web pages:

1. Tap **Options** and then tap **Bookmarks**.
2. Tap **Add current page as bookmark**.

Search

To search for content on your phone:

1. Tap the Search icon  on the Home screen.
2. Enter the search criteria and tap the Search icon .

The search results are sorted by categories and listed in tabs.




Multimedia


To browse and play multimedia content on your phone:

1. Tap the Mobile Music icon  on the Home screen.
2. Tap a category to view the lists within it.
3. Tap any song to start playing the song.

 
The search results are sorted by categories and listed in tabs.




 **NOTE:** The Music player allows you to view files by artist name, album name, and the complete music list.




 **NOTE:** You can also access other functions of the phone while playing music. To go back to the music player, tap **Mobile Music** on the Home screen.


Camera

To activate the camera, press the camera button or tap the Camera icon  on the Home screen.

 To capture a picture, press the camera button or tap the Capture icon .

To record a video:

1. Tap the Switch to Video icon  to switch to video recorder mode.
2. Press the Camera button or tap the Capture icon  to start video recording.
3. Press the Camera button again or tap the Stop icon  to stop video recording.

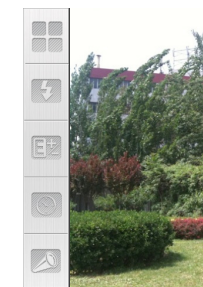

Additional Information

The microSD card that shipped with your phone contains the following:

- **User's Manual** — Provides extensive information on other features and advanced options available on your phone.
- **PCSync tool** — Used to sync contacts, calendar, and personal content such as music and pictures between your phone and a computer.
- **Lingtu navigation software** — Provides access to maps, directions, and distance calculations.

You can also download the User's Manual and PCSync tool at support.dell.com.

Information in this document is subject to change without notice.

© 2010 Dell Inc. All rights reserved.

Reproduction of these materials in any manner whatsoever without the written permission of Dell Inc. is strictly forbidden.

Trademarks used in this text: *Dell* and the *DELL* logo are trademarks of Dell Inc.

June 2010

P/N xxxxx

Rev. A00

Printed in China.

www.dell.com | support.dell.com