

Dell™ Latitude™ D505 Service Manual

[Before You Begin](#)

[Memory Module, Mini PCI Card, and Devices](#)

[System Components](#)

[Reserve Battery](#)

[Hard Drive](#)

[PC Card With Bluetooth® Wireless Technology](#)

[Keyboard](#)

[Modem](#)

[Microprocessor Thermal-Cooling Assembly](#)

[Microprocessor Module](#)

[Display Assembly and Display Latch](#)

[Palm Rest](#)

[Docking Doors](#)

[Speakers](#)

[Base Latch](#)

[Fan](#)

[System Board](#)

[Flashing the BIOS](#)

[Pin Assignments for I/O Connectors](#)

[Mini Recommended Spares List](#)

Notes, Notices, and Cautions



NOTE: A NOTE indicates important information that helps you make better use of your computer.



NOTICE: A NOTICE indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.



CAUTION: A CAUTION indicates a potential for property damage, personal injury, or death.

Information in this document is subject to change without notice.

© 2003–2004 Dell Inc. All rights reserved.

Reproduction in any manner whatsoever without the written permission of Dell Inc. is strictly forbidden.

Trademarks used in this text: *Dell*, the *DELL* logo, and *Latitude* are trademarks of Dell Inc.; *Intel*, *Pentium*, and *Celeron* are registered trademarks of Intel Corporation; *Microsoft* and *Windows* are registered trademarks of Microsoft Corporation; *Bluetooth* is a trademark owned by Bluetooth SIG, Inc. and is used by Dell Inc. under license.

Other trademarks and trade names may be used in this document to refer to either the entities claiming the marks and names or their products. Dell Inc. disclaims any proprietary interest in trademarks and trade names other than its own.

Model PP10L







April 2004 Rev. A01

Before You Begin

Dell™ Latitude™ D505 Service Manual

- [Preparing to Work Inside the Computer](#)
 - [Recommended Tools](#)
 - [Computer Orientation](#)
 - [Screw Identification](#)
-

Preparing to Work Inside the Computer

-  **CAUTION:** Only a certified service technician should perform repairs on your computer. Damage due to servicing that is not authorized by Dell is not covered by your warranty. Read and follow the safety instructions in the *Product Information Guide* that came with the computer.
-  **CAUTION:** To prevent static damage to components inside your computer, discharge static electricity from your body before you touch any of your computer's electronic components. You can do so by touching an unpainted metal surface.
-  **CAUTION:** Handle components and cards with care. Do not touch the components or contacts on a card. Hold a card by its edges or by its metal mounting bracket. Hold a component such as a microprocessor by its edges, not by its pins.
-  **NOTICE:** To avoid damaging the computer, perform the following steps before you begin working inside the computer.
 1. Ensure that the work surface is flat and clean to prevent scratching the computer cover.
 2. Save any work in progress and exit all open programs.
 3. Turn off the computer and all attached devices.
-  **NOTE:** Ensure that the computer is off and not in a power management mode. If you cannot shut down the computer using the computer operating system, press and hold the power button for 4 seconds.
 4. If the computer is connected to a docking device (docked), undock it.
 5. Disconnect the computer from the electrical outlet.
 6. To avoid possible damage to the system board, wait 10 to 20 seconds and then disconnect any attached devices.
 7. Disconnect all other external cables from the computer.
 8. Remove any installed PC Cards from the PC Card slot.
 9. Close the display and turn the computer upside down on a flat work surface.
-  **NOTICE:** To avoid damaging the system board, you must remove the main battery before you service the computer.
 10. Slide and hold the battery-bay latch release on the bottom of the computer, and then remove the battery from the bay.



11. Remove any installed [memory modules](#), [Mini PCI cards](#), and [devices](#), including a second battery if one is installed.
 12. Remove the [hard drive](#).
-

Recommended Tools

The procedures in this manual require the following tools:

- #1 Phillips screwdriver
 - ¼-inch flat-blade screwdriver
 - Small plastic scribe
 - Flash BIOS update program floppy disk or CD
-


Computer Orientation



1	back
2	right
3	front
4	left

Screw Identification


When you are removing and replacing components, photocopy "[Screw Identification](#)" as a tool to lay out and keep track of the screws. The placemat provides the number of screws and their sizes.

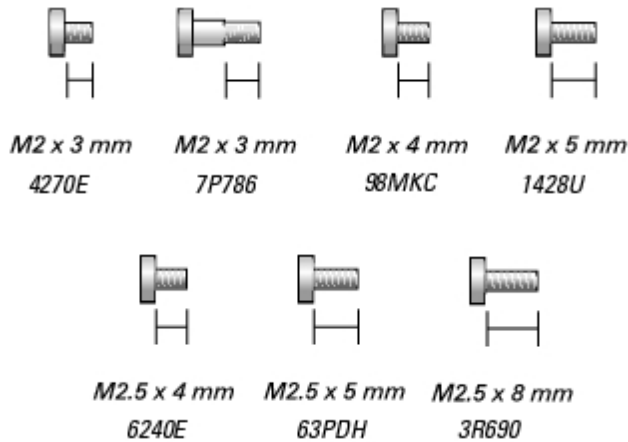

Optional Device: (1 each)	Hard Drive: (2 each)	Keyboard: (2 each)
------------------------------	-------------------------	-----------------------



M2 x 3 mm
7P786



M2.5 x 5 mm
63PDH



M2.5 x 5 mm
63PDH

Modem:
(1 each)



M2 x 3 mm
4270E

Display Assembly:
(4 each)



M2.5 x 5 mm
63PDH

Display Bezel:
(display bumpers, 6 each)
(6 each)



M2 x 5 mm
1428U

Display Panel:
(8 each)



M2 x 5 mm
1428U

Display Latch:
(1 each)



M2 x 5 mm
1428U

Palm Rest:
(4 each)



M2.5 x 5 mm
63PDH

Display Adapter Rails
(14.1-inch display only):
(4 each)



M2 x 3 mm
4270E

(13 each)



M2.5 x 8 mm
3R690

Speakers:
(1 each)


Fan:
(2 each)

System Board:
(2 each)




M2.5 x 5 mm
63PDH

(4 each)



M2.5 x 5 mm
63PDH



M2.5 x 8 mm
3R690



M2 x 4 mm
98MKC

[Back to Contents Page](#)

Memory Module, Mini PCI Card, and Devices

Dell™ Latitude™ D505 Service Manual

- [Memory Module](#)
- [Mini PCI Card](#)
- [Devices](#)


Memory Module

⚠ CAUTION: Before working inside your Dell™ computer, read the safety instructions in your *Product Information Guide*.

⚠ CAUTION: To prevent static damage to components inside your computer, discharge static electricity from your body before you touch any of your computer's electronic components. You can do so by touching an unpainted metal surface.

🔧 NOTE: Memory modules purchased from Dell are covered under your computer warranty.

1. Follow the instructions in "[Preparing to Work Inside the Computer](#)."
2. Turn the computer over, loosen the captive screw (labeled "M") from the memory module cover, and lift the cover.

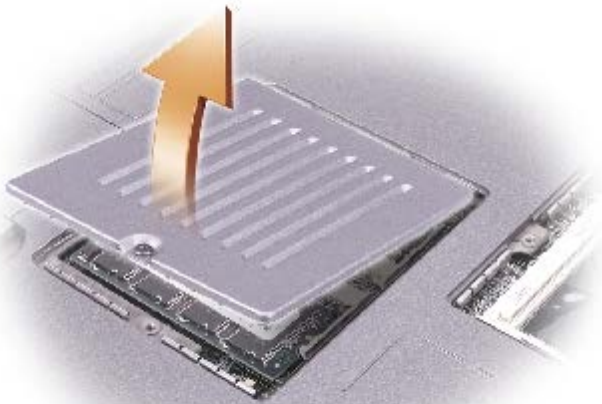


➡ NOTICE: To prevent damage to the memory module connector, do not use tools to spread the securing clips that secure the memory module.

3. If you are replacing a memory module, remove the existing module.

➡ NOTICE: Handle memory modules by their edges, and do not touch the components on a module.

- a. Use your fingertips to carefully spread apart the securing clips on each end of the memory module connector until the module pops up.

- b. Remove the module from the connector.

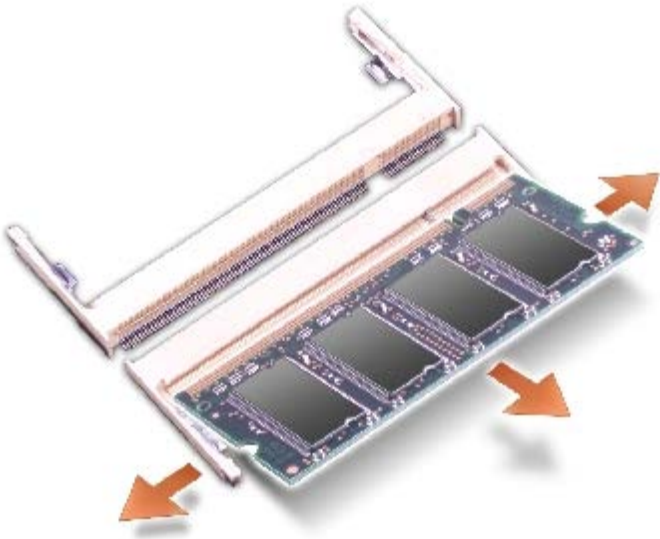

➡ **NOTICE:** If you need to install memory modules in two connectors, install a memory module in the connector labeled "DIMM A" (slot 1) before you install a module in the other connector.

4. Ground yourself and install the new memory module:
 - a. Align the notch in the module with the slot in the center of the connector.
 - b. Slide the edge of the module firmly into the connector, and rotate the module down until you feel a click. If you do not feel the click, remove the module and reinstall it.

🔧 **NOTE:** If the memory module is not installed properly, the computer does not boot. No error message indicates this failure.

5. Replace the cover and screw.

➡ **NOTICE:** If the memory module cover is difficult to close, remove the module and reinstall it. Forcing the cover to close may damage your computer.

6. Insert the battery into the battery bay, or connect the AC adapter to your computer and an electrical outlet.
7. Turn on the computer.

As the computer boots, it detects the additional memory and automatically updates the system configuration information.

Mini PCI Card

If you ordered a Mini PCI card at the same time that you ordered your computer, Dell has already installed the card for you.

⚠ **CAUTION:** Before working inside your computer, read the safety instructions in your *Product Information Guide*.

⚠ CAUTION: To prevent static damage to components inside your computer, discharge static electricity from your body before you touch any of your computer's electronic components. You can do so by touching an unpainted metal surface.

➡ NOTICE: Handle components and cards by their edges, and avoid touching pins and contacts.

1. Follow the instructions in "[Preparing to Work Inside the Computer](#)."
2. Turn the computer over, and loosen the captive screw (labeled "C") on the Mini PCI card cover.




3. Place your finger under the cover at the indentation, lift up the cover, and slide the cover open.



4. If a Mini PCI card is not already installed, go to [step 5](#). If you are replacing a Mini PCI card, remove the existing card:
 - a. Disconnect the Mini PCI card from any attached cables.

➡ NOTICE: To prevent damage to the Mini PCI card connector, do not use tools to spread the securing clips that secure the card.

- b. Release the Mini PCI card by spreading the securing clips until the card pops up slightly.
 - c. Lift the Mini PCI card out of its connector.
5. Slide the new Mini PCI card firmly into the connector.
 6. Connect the antenna cables from the Mini PCI card to the antenna connectors on the computer.

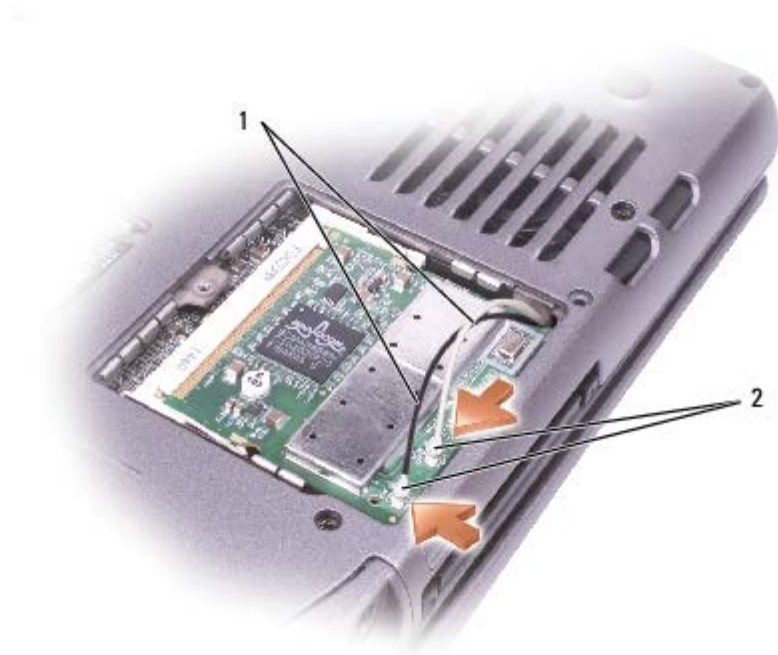

1	antenna cables (2)
2	antenna connectors on card (2)

7. Lower the Mini PCI card toward the inner tabs to approximately a 20-degree angle.
8. Continue lowering the Mini PCI card until it snaps into the inner tabs of the connector.
9. Replace the cover.

Devices

Your computer ships with an optical drive installed in the module bay. However, the device security screw is not installed in the optical drive but packaged separately. When you install your device in the module bay, you can install the device security screw.

➡ **NOTICE:** Insert devices into the module bay before you dock and turn on the computer.

🔩 **NOTE:** You do not need to install the device security screw unless you want to secure the module inside the computer for security purposes.

If the Device Security Screw Is Not Installed

➡ **NOTICE:** To prevent damage to devices, place them in a safe, dry place when they are not installed in the computer.

Avoid pressing down on them or placing heavy objects on top of them.

1. Press the device latch release so that the latch release pops out.




1 device latch release

2. Pull the device by the latch release to remove the device from the module bay.



If the Device Security Screw Is Installed

1. If the computer is connected to a docking device (docked), undock it. See the documentation that came with your docking device for instructions.

 **NOTICE:** To prevent damage to devices, place them in a safe, dry place when they are not installed in the computer. Avoid pressing down on them or placing heavy objects on top of them.

2. Close the display and turn the computer over.
3. Use a #1 Phillips screwdriver to remove the M2 x 3-mm screw from the bottom of the computer.



1	M2 x 3-mm screw
---	-----------------


4. Press the device latch release so that the latch release pops out.
5. Pull the device by the latch release to remove the device from the module bay.



System Components

Dell™ Latitude™ D505 Service Manual

- NOTICE:** Only a certified service technician should perform repairs on your computer. Damage due to servicing that is not authorized by Dell is not covered by your warranty.
- NOTICE:** Unless otherwise noted, each procedure in this document assumes that a part can be replaced by performing the removal procedure in reverse order.

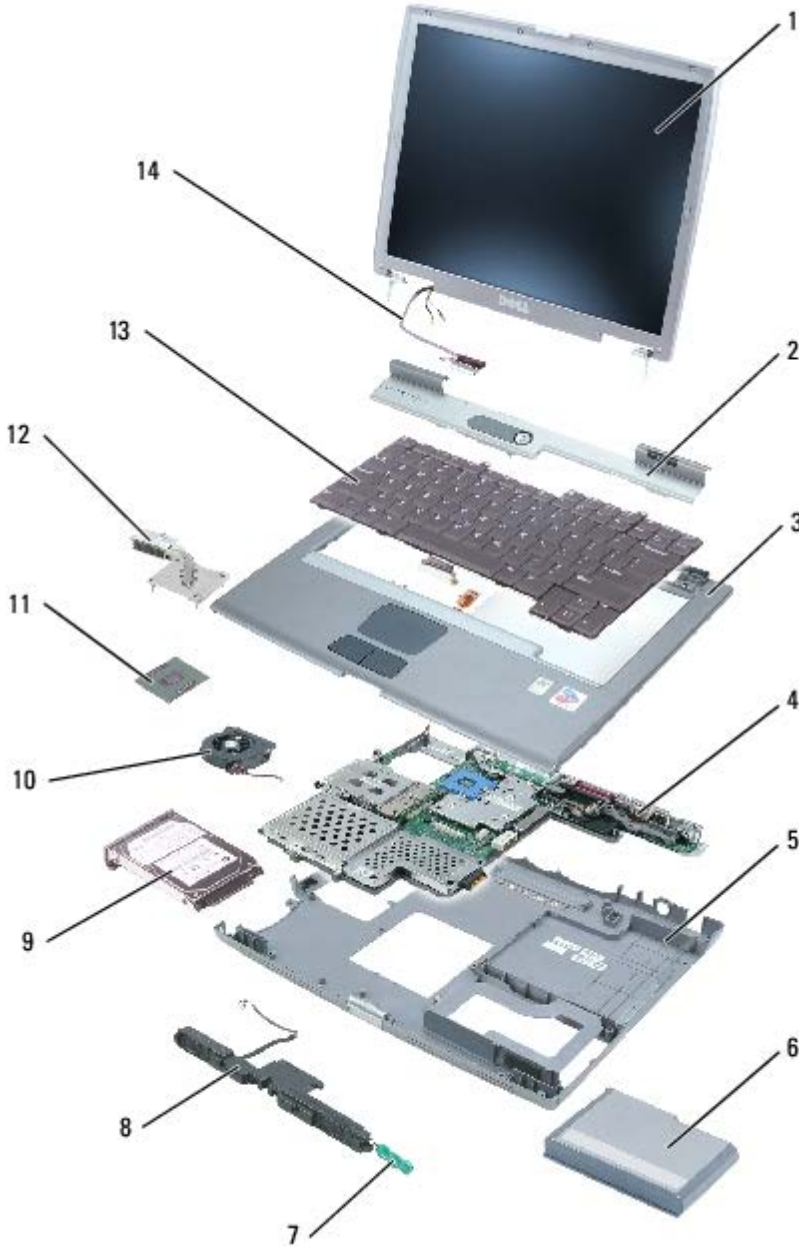

1	display assembly	see Mini_RSL	8	speakers	H1330
2	center control cover	H1371	9	hard drive	see Mini_RSL

3	palm rest (with touch pad)	D1482	10	fan	J1043
4	system board	W3344	11	microprocessor	see Mini RSL
5	computer base		12	microprocessor thermal-cooling assembly	H1309
6	battery	see Mini RSL	13	keyboard	1M709
7	reserve battery	3R459	14	display cable	

[Back to Contents Page](#)


Reserve Battery

Dell™ Latitude™ D505 Service Manual

⚠ CAUTION: Before working inside your Dell™ computer, read the safety instructions in your *Product Information Guide*.

⚠ CAUTION: To prevent static damage to components inside your computer, discharge static electricity from your body before you touch any of your computer's electronic components. You can do so by touching an unpainted metal surface.

1. Follow the instructions in "[Preparing to Work Inside the Computer](#)."
2. Remove the [battery](#).
3. Depress the battery latch and rotate it out to remove the reserve battery cover.

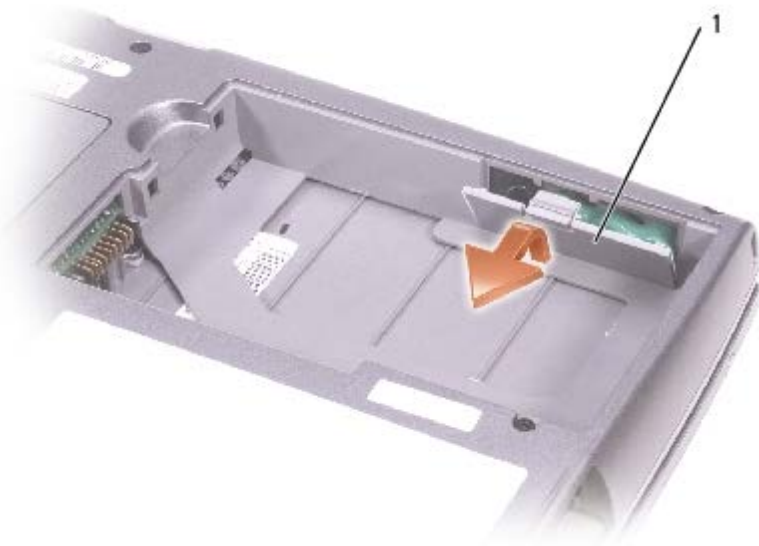

1	reserve battery cover	6R456
---	-----------------------	-------

4. Pull the reserve battery straight out of the computer base.
5. Disconnect the reserve-battery cable connector from the battery connector.








1	battery connector	
2	reserve battery	3R459

[Back to Contents Page](#)

Hard Drive


Dell™ Latitude™ D505 Service Manual

-  **CAUTION:** If you remove the hard drive from the computer when the drive is hot, do not touch the metal housing of the hard drive.
-  **CAUTION:** Before working inside your computer, read the safety instructions in your *Product Information Guide*.
-  **NOTICE:** To prevent data loss, shut down your computer before removing the hard drive. Do not remove the hard drive while the computer is on, in standby mode, or in hibernate mode.
-  **NOTICE:** Hard drives are extremely fragile; even a slight bump can damage the drive.
-  **NOTE:** Dell does not guarantee compatibility or provide support for hard drives from sources other than Dell.


1. Follow the instructions in "[Preparing to Work Inside the Computer](#)."
2. Turn the computer over. Use a standard #1 Phillips screwdriver to remove the two M2.5 x 5-mm screws.



1	M2.5 x 5-mm screws (2)	63PDH
---	------------------------	-------

-  **NOTICE:** When the hard drive is not in the computer, store it in protective antistatic packaging. See "Protecting Against Electrostatic Discharge" in your *Product Information Guide*.
3. Slide the hard drive out of the computer.
 4. Remove the new drive from its packaging.

Save the original packaging to use when storing or shipping the hard drive.

-  **NOTICE:** Use firm and even pressure to slide the drive into place. If you force the hard drive into place using excessive force, you may damage the connector.

5. Press the hard drive cover down until it is fully seated in the bay, and then replace and tighten the two screws.
 6. Use the *Operating System* CD to install the operating system for your computer.
 7. Use the *Drivers and Utilities* CD to install the drivers and utilities for your computer.
-

[Back to Contents Page](#)

PC Card With Bluetooth® Wireless Technology


Dell™ Latitude™ D505 Service Manual

⚠ CAUTION: Before performing the following procedures, read the safety instructions in your *Product Information Guide*.

➡ NOTICE: To avoid electrostatic discharge, ground yourself by using a wrist grounding strap or by periodically touching an unpainted metal surface (such as the back panel) on the computer.

1. Follow the instructions in "[Preparing to Work Inside the Computer](#)."
2. Remove the [hard drive](#).
3. Pull the connector of the PC Card with Bluetooth wireless technology out of the system board connector.
4. Pull the cable to remove the PC Card with Bluetooth wireless technology from the computer.


➡ NOTICE: When replacing the PC Card with Bluetooth wireless technology, ensure that the cable of the PC Card with Bluetooth wireless technology is routed correctly so that you do not damage the cable when you install the hard drive.

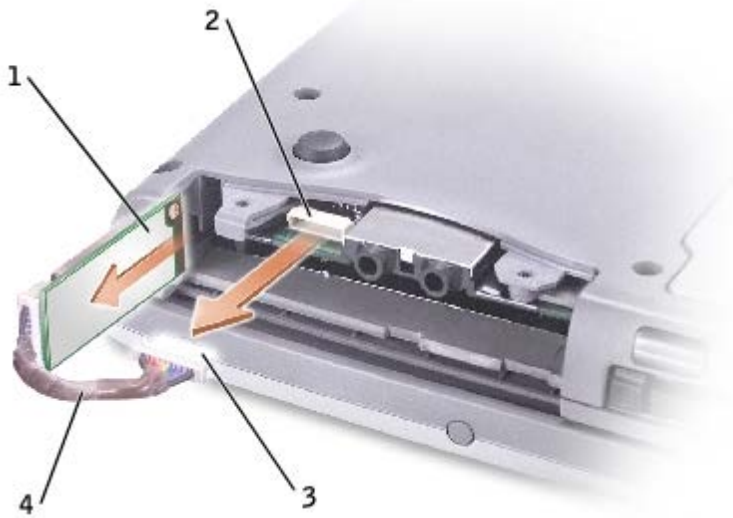

1	PC Card with Bluetooth wireless technology	2U381
2	system board connector	
3	connector of PC Card with Bluetooth wireless technology	
4	cable of PC Card with Bluetooth wireless technology	5X617

To replace a PC Card with Bluetooth wireless technology:

1. Insert the PC Card with Bluetooth wireless technology.
2. Ensure that the cable is routed under the tab.

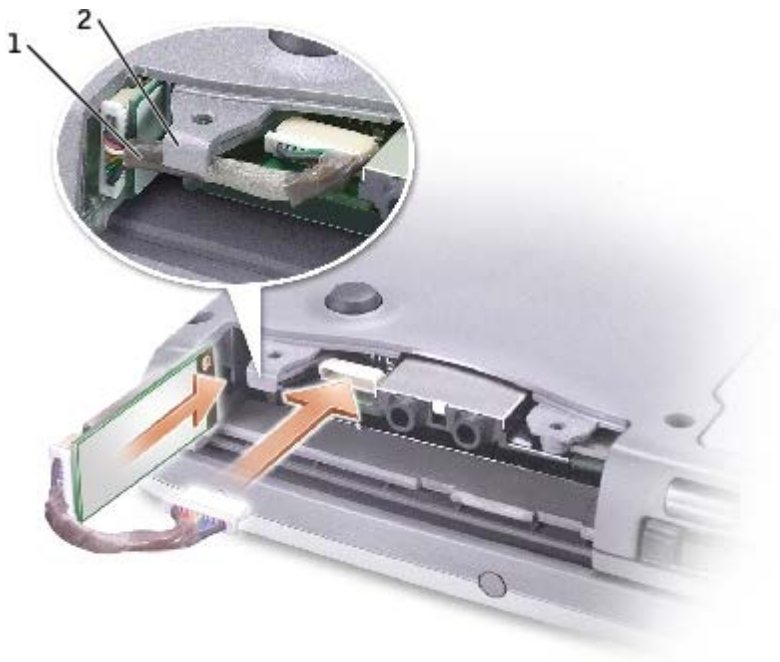

1	cable	5X617
2	tab	

3. Connect the cable.
4. Replace the hard drive.

[Back to Contents Page](#)

Keyboard

Dell™ Latitude™ D505 Service Manual

⚠ CAUTION: Before performing the following procedures, read the safety instructions in your *Product Information Guide*.

👉 NOTICE: To avoid electrostatic discharge, ground yourself by using a wrist grounding strap or by periodically touching an unpainted metal surface (such as the back panel) on the computer.

1. Follow the instructions in "[Preparing to Work Inside the Computer](#)."
2. Turn the computer top-side up and open it.



1	display	see Mini_RSL
2	center control cover	H1371
3	palm rest (with touch pad)	D1482

3. Remove the center control cover:
 - a. Open the display all the way (180 degrees) so that it lies flat against your work surface.
 - b. Starting on the right side of the computer, use a plastic scribe to pry up the center control cover. Lift it away from the computer, and lay it aside.



1	center control cover	H1371
---	----------------------	-------

4. Remove the keyboard:

a. Remove the two M2.5 x 5-mm screws across the top of the keyboard.

NOTICE: The keycaps on the keyboard are fragile, easily dislodged, and time-consuming to replace. Be careful when removing and handling the keyboard.


b. Rotate the keyboard up and slide it forward.

c. Hold the keyboard up and slightly forward to allow access to the keyboard connector.

d. Pull up on the keyboard connector tab to disconnect the keyboard connector from the system board.



1	M2.5 x 5-mm screws (2)	63PDH
2	keyboard connector	
3	keyboard connector tab	

 **NOTE:** When you replace the keyboard, ensure that the keyboard tabs are completely in place to avoid scratching the palm rest.

[Back to Contents Page](#)

Modem


Dell™ Latitude™ D505 Service Manual

Removing the Modem

⚠ CAUTION: Before performing the following procedures, read the safety instructions in your *Product Information Guide*.

➡ NOTICE: To avoid electrostatic discharge, ground yourself by using a wrist grounding strap or by periodically touching an unpainted metal surface (such as the back panel) on the computer.

1. Follow the instructions in "[Preparing to Work Inside the Computer](#)."
2. Remove the [keyboard](#).
3. Disconnect the display cable from the display cable connector on the system board.
4. Remove the M2 x 3-mm screw.

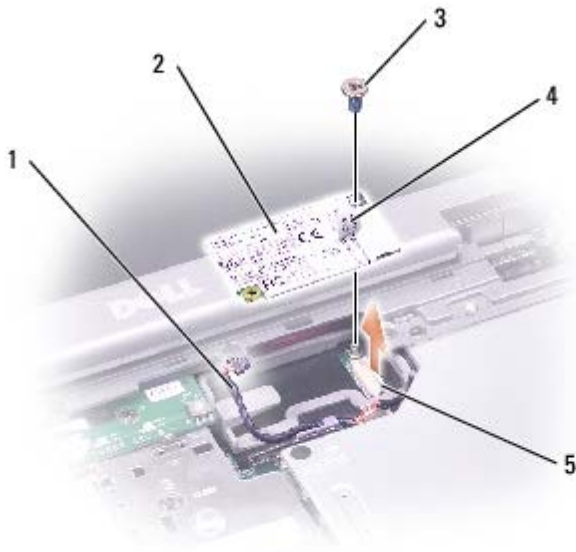

1	modem cable		4	pull-tab	
2	modem	Y0231	5	modem connector on system board	
3	M2 x 3-mm screw	4270E			

5. Pull up on the pull-tab to disconnect the modem from the modem connector on the system board.

➡ NOTICE: Do not disconnect the modem cable from the system board.

6. Disconnect the modem cable from the modem.

Installing the Modem


1. Connect the modem cable to the modem.
2. Slip the left end of the modem and the modem cable underneath the metal modem-securing clip.

➡ **NOTICE:** Ensure that the modem cable is routed correctly when you replace the modem.

3. Ensure that the modem cable is properly routed under its routing clip.

➡ **NOTICE:** Do not press down on the left side of the modem while installing it.

4. Align the connector on the bottom of the modem with the modem connector on the system board and then press down on the right side of the modem to seat both connectors.

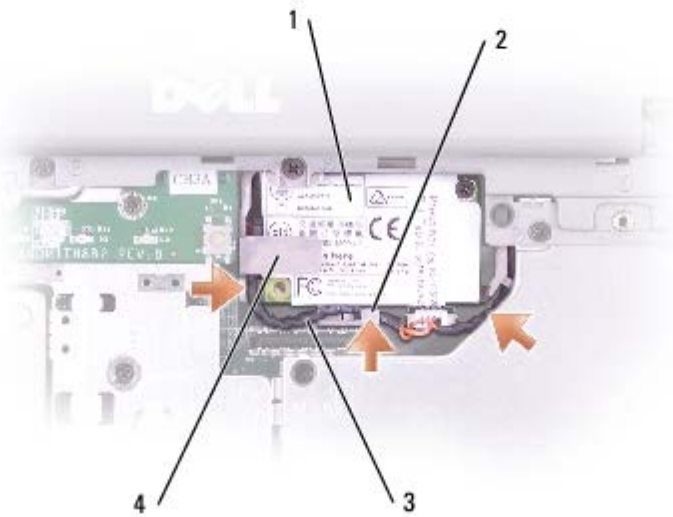

1	modem	Y0231
2	modem-cable routing clip	
3	modem cable	
4	modem-securing clip	

5. Replace the M2 x 3-mm screw.
6. Reconnect the display cable to the display cable connector and then secure the display cable in its three display-cable routing clips.

[Back to Contents Page](#)

Microprocessor Thermal-Cooling Assembly

Dell™ Latitude™ D505 Service Manual


Removing the Microprocessor Thermal-Cooling Assembly

⚠ CAUTION: Before performing the following procedures, read the safety instructions in your *Product Information Guide*.

➡ NOTICE: To avoid electrostatic discharge, ground yourself by using a wrist grounding strap or by periodically touching an unpainted metal surface (such as the back panel) on the computer.


➡ NOTICE: Disconnect the computer and any attached devices from electrical outlets, and remove any installed batteries.

1. Follow the instructions in "[Preparing to Work Inside the Computer](#)."
2. Remove the [keyboard](#).
3. Disconnect the display cable from the display cable connector on the system board.
4. Release the two antenna cables from the two antenna-securing clips.
5. Disconnect one antenna cable from the display by holding the two gold antenna connectors and gently pulling them apart. Then disconnect the other antenna cable. (The gold antenna connectors on each cable are keyed to ensure that they are correctly reconnected.)

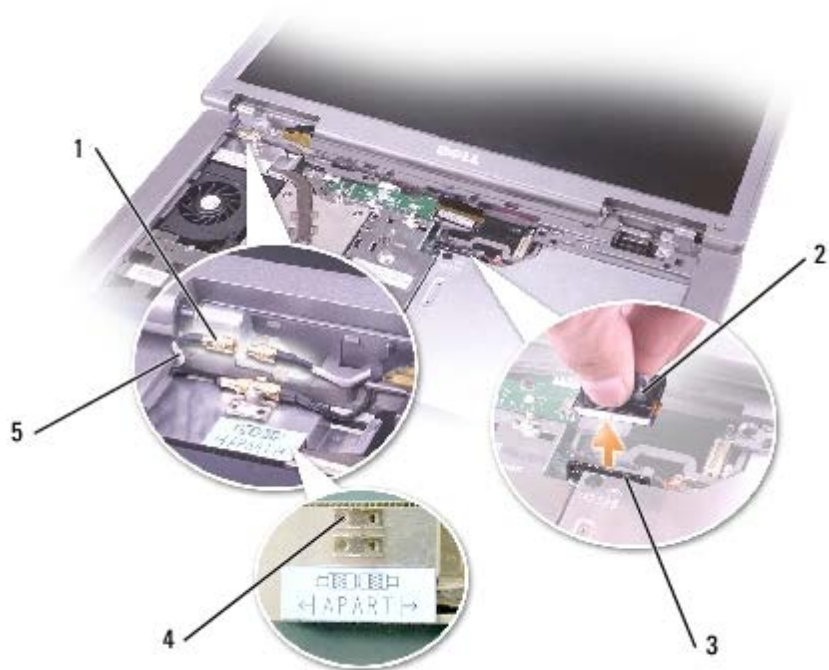


1	antenna connectors (4)
2	display cable connector
3	display cable connector on system board

4	antenna securing clips (2)
5	antenna cables (2)

 **NOTE:** You can remove the microprocessor thermal-cooling assembly with the fan attached.

- Loosen in consecutive order the four captive screws, labeled "1" through "4," that secure the microprocessor thermal-cooling assembly to the system board.

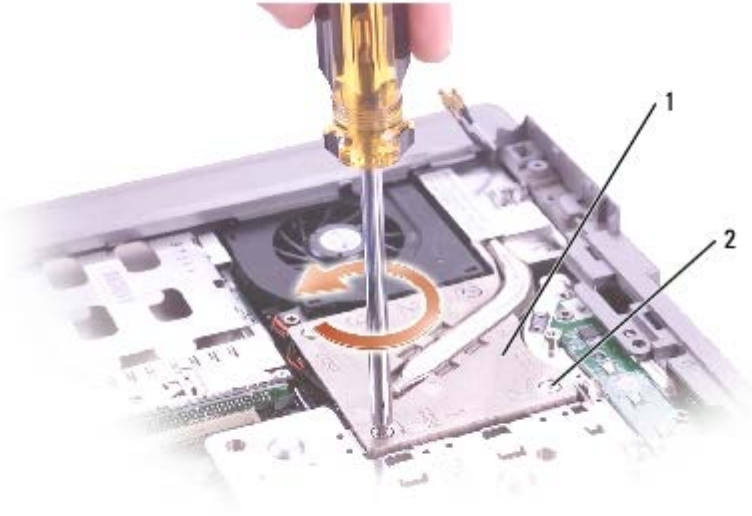

1	microprocessor thermal-cooling assembly	H1309
2	captive screws (4)	


- Lift up the microprocessor thermal-cooling assembly and remove it from the system board.



1	microprocessor thermal-cooling assembly	H1309
---	---	-------

Installing the Microprocessor Thermal-Cooling Assembly

1. Slip the left side of the microprocessor thermal-cooling assembly underneath the palm rest and then place the assembly over the microprocessor.
2. Tighten the four captive screws, labeled "1" through "4," in consecutive order. While tightening the screws, ensure that the cooler plate is not higher than the captive screw head.

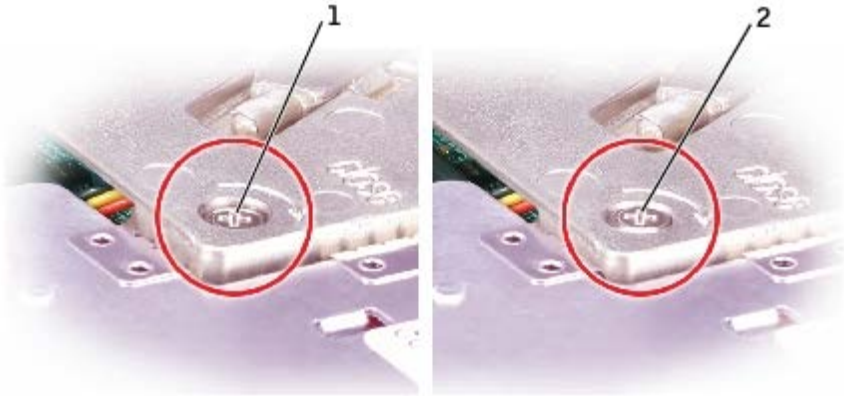

1	incorrectly installed heat sink
2	correctly installed heat sink

3. Reconnect the two antenna cables and then secure them into the two antenna-securing clips.
4. Reconnect the display cable to the display cable connector and then secure the display cable in its three display-cable routing clips.

Microprocessor Module

Dell™ Latitude™ D505 Service Manual

Removing the Microprocessor Module

⚠ CAUTION: Before performing the following procedures, read the safety instructions in your *Product Information Guide*.

➡ **NOTICE:** To avoid electrostatic discharge, ground yourself by using a wrist grounding strap or by periodically touching an unpainted metal surface (such as the back panel) on the computer.

➡ **NOTICE:** Do not touch the processor die. Press and hold the microprocessor down on the substrate on which the die is mounted while turning the cam screw to prevent intermittent contact between the cam screw and microprocessor.

➡ **NOTICE:** To avoid damage to the microprocessor, hold the screwdriver so that it is perpendicular to the microprocessor when turning the cam screw.


1. Follow the instructions in "[Preparing to Work Inside the Computer](#)."
2. Remove the [keyboard](#).


➡ **NOTICE:** To ensure maximum cooling for the microprocessor, do not touch the heat transfer areas on the microprocessor thermal-cooling assembly. The oils in your skin reduce the heat transfer capability of the thermal pads.

3. Remove the [microprocessor thermal-cooling assembly](#).

➡ **NOTICE:** When removing the microprocessor module, pull the module straight up. Be careful not to bend the pins on the microprocessor module.


4. To loosen the ZIF socket, use a small, flat-blade screwdriver and rotate the ZIF-socket cam screw counterclockwise until it comes to the cam stop.

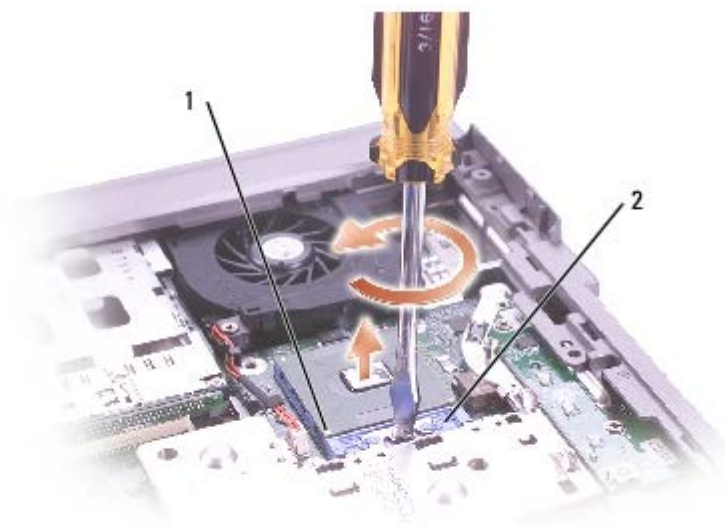


 **NOTE:** The ZIF-socket cam screw secures the microprocessor to the system board. Take note of the arrow on the ZIF-socket cam screw.


5. Lift out the microprocessor module.


Installing the Microprocessor Module

 **NOTICE:** Ensure that the cam lock is in the fully open position before seating the microprocessor module. Seating the microprocessor module properly in the ZIF socket does not require force.

 **NOTICE:** A microprocessor module that is not properly seated can result in an intermittent connection or permanent damage to the microprocessor and ZIF socket.

1. Align the pin-1 corner of the microprocessor module with the pin-1 corner of the ZIF socket, and insert the microprocessor module.

 **NOTE:** The pin-1 corner of the microprocessor module has a triangle that aligns with the triangle on the pin-1 corner of the ZIF socket.

 **NOTICE:** You must position the microprocessor module correctly in the ZIF socket to avoid permanent damage to the module and the socket.

When the microprocessor module is correctly seated, all four corners are aligned at the same height. If one or more corners of the module are higher than the others, the module is not seated correctly.

2. Tighten the ZIF socket by turning the cam screw clockwise to secure the microprocessor module to the system board.
3. Replace the other computer parts you removed earlier in this procedure.
4. Update the BIOS using a flash BIOS update program floppy disk or CD. For instructions on how to flash the BIOS, see "[Flashing the BIOS.](#)"

Display Assembly and Display Latch

Dell™ Latitude™ D505 Service Manual

- [Display Assembly](#)
- [Display Bezel](#)
- [Display Panel](#)
- [Display Latch](#)

Display Assembly

⚠ CAUTION: Before performing the following procedures, read the safety instructions in your *Product Information Guide*.


⬇ NOTICE: To avoid electrostatic discharge, ground yourself by using a wrist grounding strap or by periodically touching an unpainted metal surface (such as the back panel) on the computer.

⬇ NOTICE: You must remove the display assembly before you remove the palm rest.

1. Follow the instructions in "[Preparing to Work Inside the Computer](#)."
2. Remove the [keyboard](#).
3. Open the display assembly approximately 180 degrees, and support the display assembly so that it does not open past this position.
4. Pull up on the pull-tab that is attached to the display cable connector to remove the connector from the system board.
5. Release the display cable from the three display-cable routing clips.



6. Release the two antenna cables from the two antenna-securing clips.
7. Disconnect one antenna cable from the display by holding the two gold antenna connectors and gently pulling them apart. Then disconnect the other antenna cable. (The gold antenna connectors on each cable are keyed to ensure that they are correctly reconnected.)

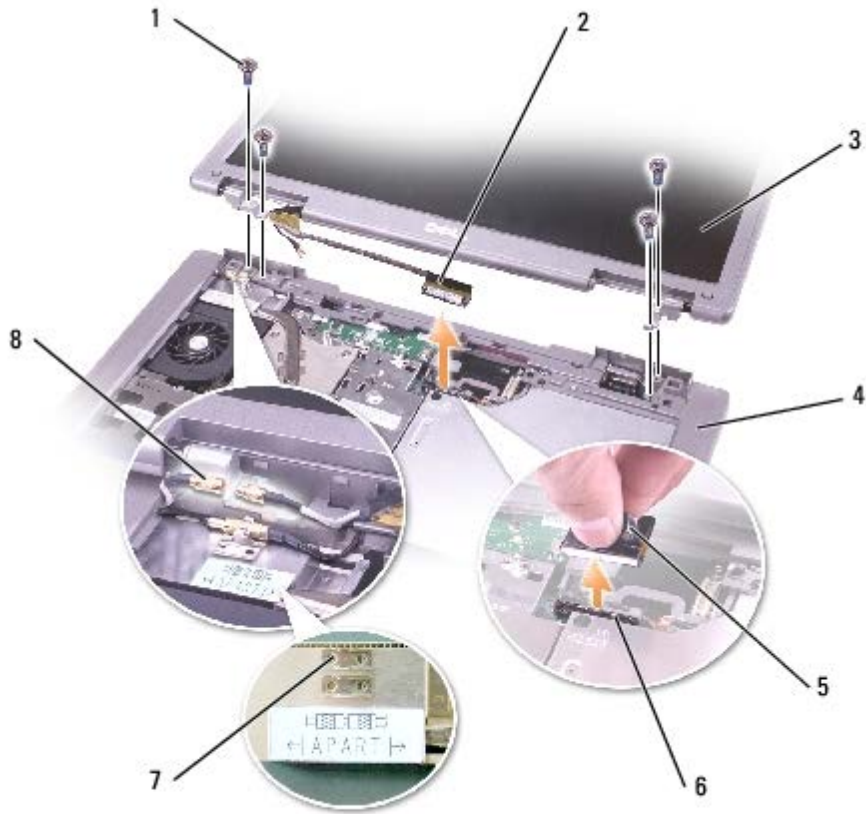


1	M2.5 x 5-mm screws (4)	63PDH	5	pull-tab	
2	display cable connector		6	system board connector	
3	display	see Mini RSL	7	antenna securing clips (2)	
4	computer base		8	antenna connectors (4)	

8. Remove the four M2.5 x 5-mm screws.


9. Rotate the display assembly to a 90-degree angle, and lift the display assembly up and out of the computer base.

14.1-Inch Display

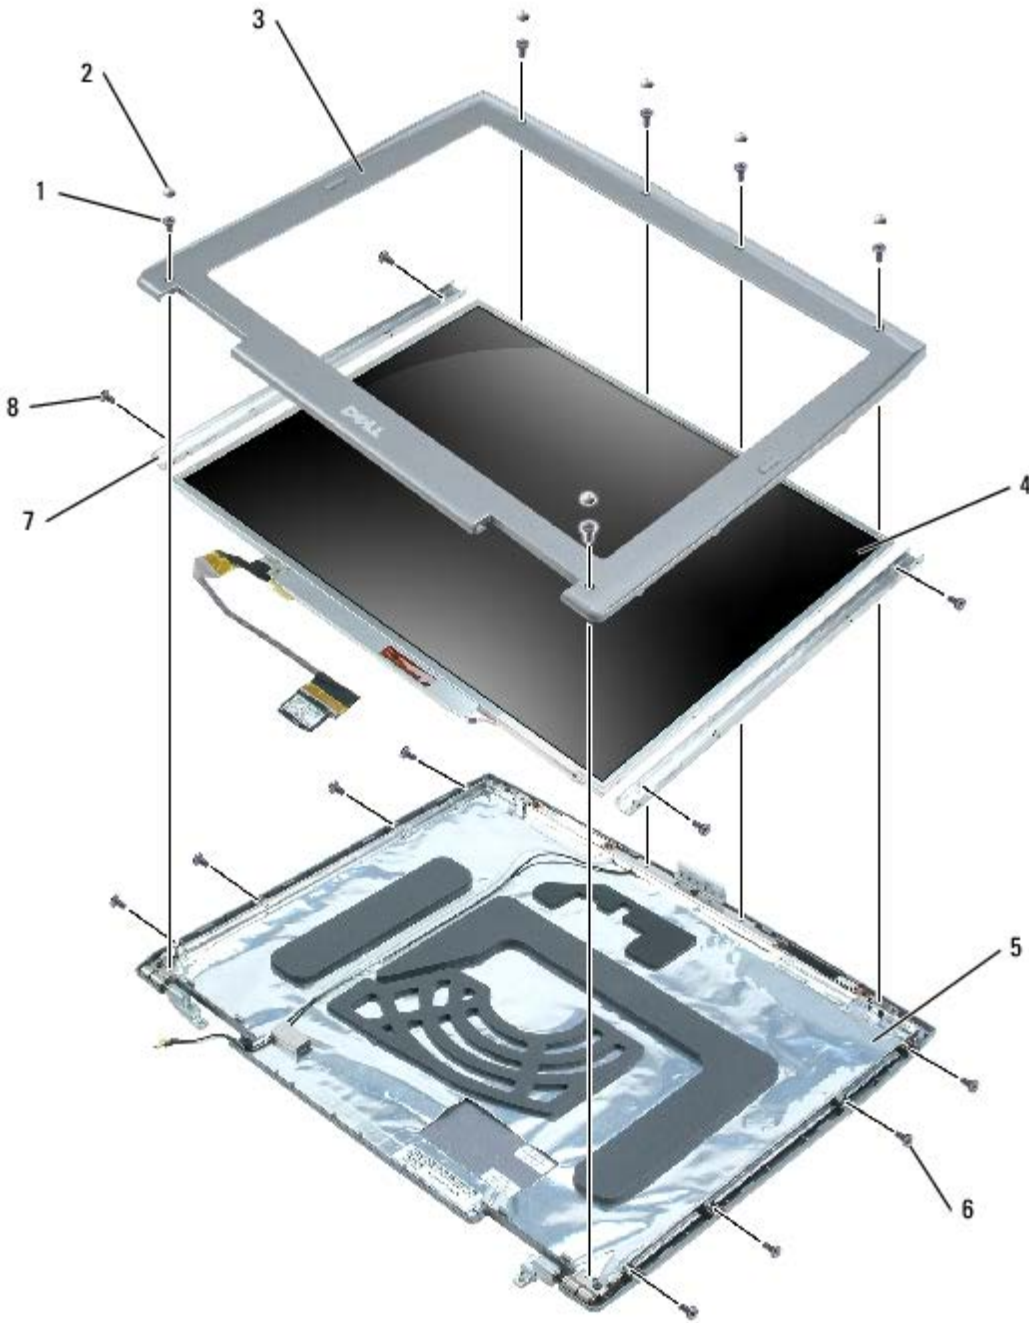

1	M2 x 5-mm screws (6)	1428U	5	top cover	H1375
2	display bumpers (6)	K1681	6	M2 x 5-mm screws (8)	1428U
3	display bezel	X1261	7	adapter rails (2)	F3774
4	display panel	F1788	8	M2 x 3-mm screws (4)	4270E

15-Inch Display

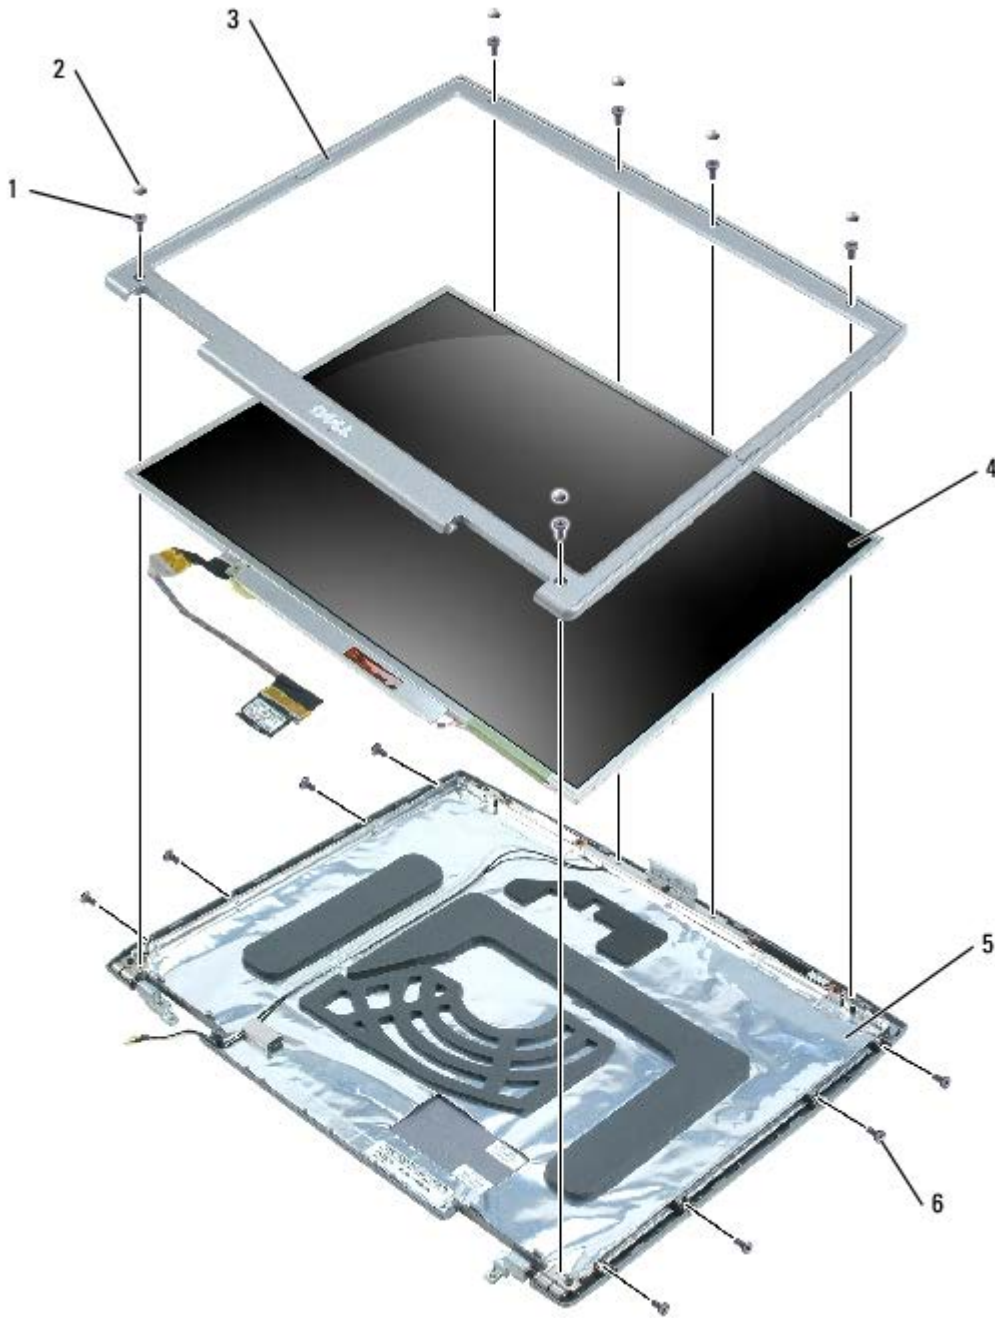


1	M2 x 5-mm screws (6)	1428U	4	display panel	D1724
2	display bumpers (6)	K1681	5	top cover	H1375
3	display bezel	H1370	6	M2 x 5-mm screws (8)	1428U

Display Bezel

CAUTION: Before performing the following procedures, read the safety instructions in your *Product Information Guide*.

NOTICE: To avoid electrostatic discharge, ground yourself by using a wrist grounding strap or by periodically touching an unpainted metal surface (such as the back panel) on the computer.

1. Follow the instructions in "[Preparing to Work Inside the Computer](#)."
2. Remove the [keyboard](#).
3. Remove the [display assembly](#).
4. Use a plastic scribe to pry the six display bumpers out of the screw holes located on the front of the bezel.
5. Remove the six M2 x 5-mm screws located on the front of the bezel.


 **NOTICE:** Carefully separate the bezel from the top cover to avoid damage to the bezel.

6. Starting at the bottom of the display panel (by the DELL™ logo), use your fingers to separate the bezel from the top cover by lifting the inside edge of the bezel away from the top cover.
-

Display Panel


14.1-Inch Display Panel

 **CAUTION:** Before performing the following procedures, read the safety instructions in your *Product Information Guide*.

 **NOTICE:** To avoid electrostatic discharge, ground yourself by using a wrist grounding strap or by touching an unpainted metal surface on the computer.

1. Follow the instructions in "[Preparing to Work Inside the Computer](#)."
2. Remove the [keyboard](#).
3. Remove the [display bezel](#).
4. Remove the eight M2 x 5-mm screws from each side of the display-panel adapter rails.
5. Lift the display panel, and rotate the display panel out of the display cover.
6. Remove the four M2 x 3-mm screws from each side of the display panel to remove the adapter rails.


When reinstalling the adapter rails to the replacement display panel, orient the rails so that the "This side up" markings are facing you, and then reattach the rails with the four M2 x 3-mm screws. (The "This side down" markings on the rails should be visible from the rear side of the display panel.)

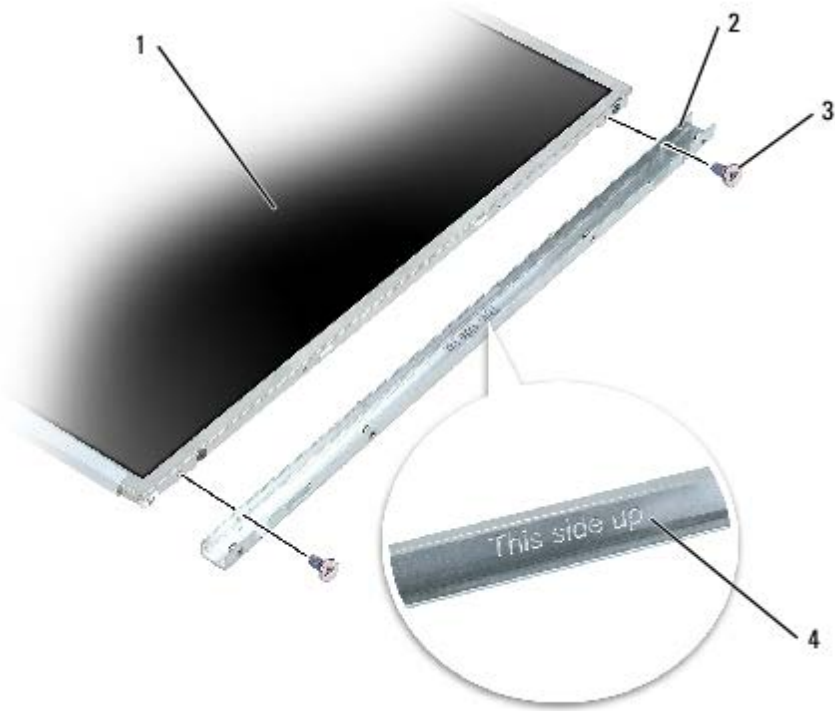

1	14.1-inch display panel	F1788
2	adapter rails (2)	F3774
3	M2 x 3-mm screws (4)	4270E
4	"This side up" markings	

7. Press in both sides of the top flex-cable connector, and pull the top flex-cable connector away from the display connector.

8. Use the pull-tab to disconnect the bottom flex-cable connector from the inverter connector.

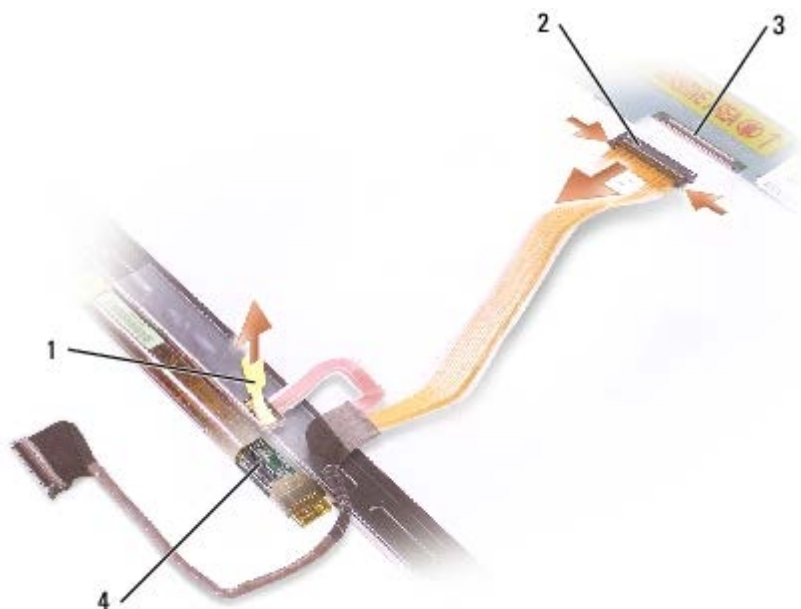


1	pull-tab on bottom flex-cable connector
2	top flex-cable connector
3	display connector
4	inverter connector

15-Inch Display Panel

⚠ CAUTION: Before performing the following procedures, read the safety instructions in your *Product Information Guide*.

👉 NOTICE: To avoid electrostatic discharge, ground yourself by using a wrist grounding strap or by touching an unpainted metal surface on the computer.

1. Follow the instructions in "[Preparing to Work Inside the Computer](#)."
2. Remove the [keyboard](#).
3. Remove the [display bezel](#).
4. Remove the eight M2 x 5-mm screws from each side of the display panel.
5. Lift the display panel, and rotate the display panel out of the display cover.
6. Press in both sides of the top flex-cable connector, and pull the top flex-cable connector away from the display connector.
7. Use the pull-tab to disconnect the bottom flex-cable connector from the inverter connector.

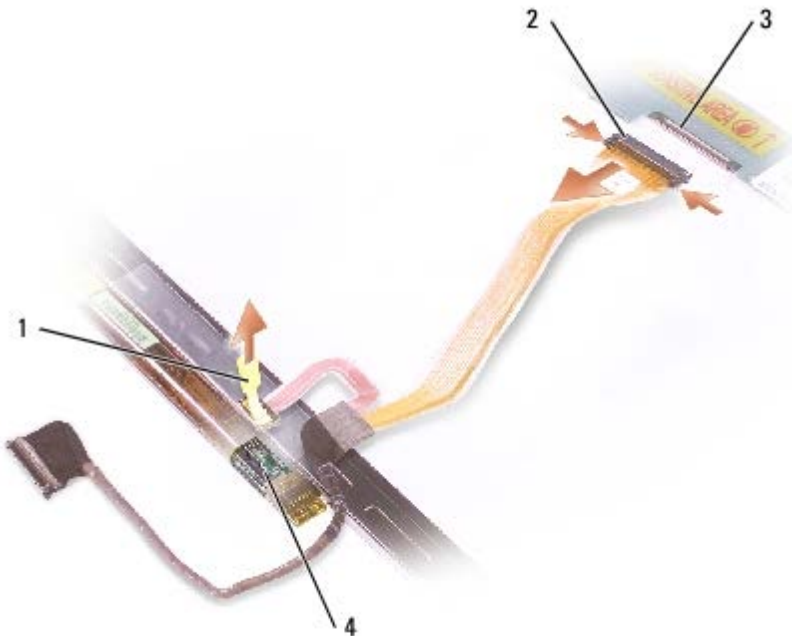

1	pull-tab on bottom flex-cable connector
2	top flex-cable connector
3	display connector
4	inverter connector


Display Latch

➡ **NOTICE:** Disconnect the computer and any attached devices from electrical outlets, and remove any installed batteries.

➡ **NOTICE:** To avoid electrostatic discharge, ground yourself by using a wrist grounding strap or by touching an unpainted metal surface on the computer.

1. Remove the [keyboard](#).
2. Remove the [display assembly](#).
3. Remove the [display bezel](#).
4. Remove the M2 x 5-mm screw that secures the display bracket to the top cover.
5. Lift the display bracket out of the top cover, and then remove the display latch.

🔧 **NOTE:** Ensure that the display bracket is upright when you replace the display latch.

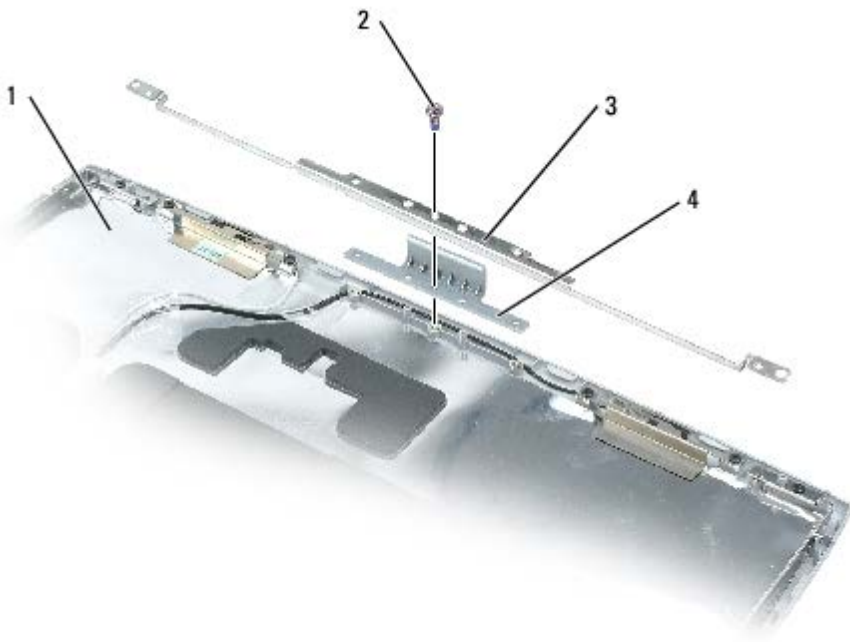

1	top cover	H1375
2	M2 x 5-mm screw (1)	1428U
3	display bracket	
4	display latch	F1484

Palm Rest

Dell™ Latitude™ D505 Service Manual


⚠ CAUTION: Before performing the following procedures, read the safety instructions in your *Product Information Guide*.

➡ NOTICE: To avoid electrostatic discharge, ground yourself by using a wrist grounding strap or by periodically touching an unpainted metal surface (such as the back panel) on the computer.

1. Follow the instructions in "[Preparing to Work Inside the Computer](#)."
2. Remove the [keyboard](#).


➡ NOTICE: You must remove the display assembly before you remove the palm rest; the display hinges pass through the back of the palm rest.

3. Remove the [display assembly](#).
4. Remove the three M2.5 x 5-mm screws labeled "circle P" from the top of the palm rest.
5. Remove the M2.5 x 5-mm screw labeled "M2.5x5" from the metal shield.

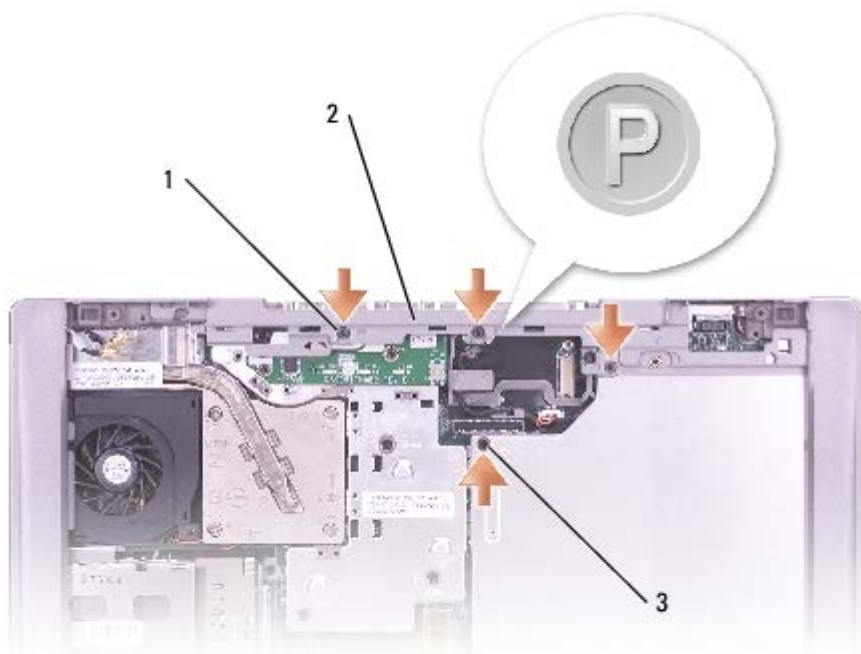


1	M2.5 x 5-mm screws labeled "circle P" (3)	63PDH
2	top of the palm rest	
3	M2.5 x 5-mm screw labeled "M2.5x5"	63PDH

6. Turn over the computer and remove the 13 M2.5 x 8-mm screws.

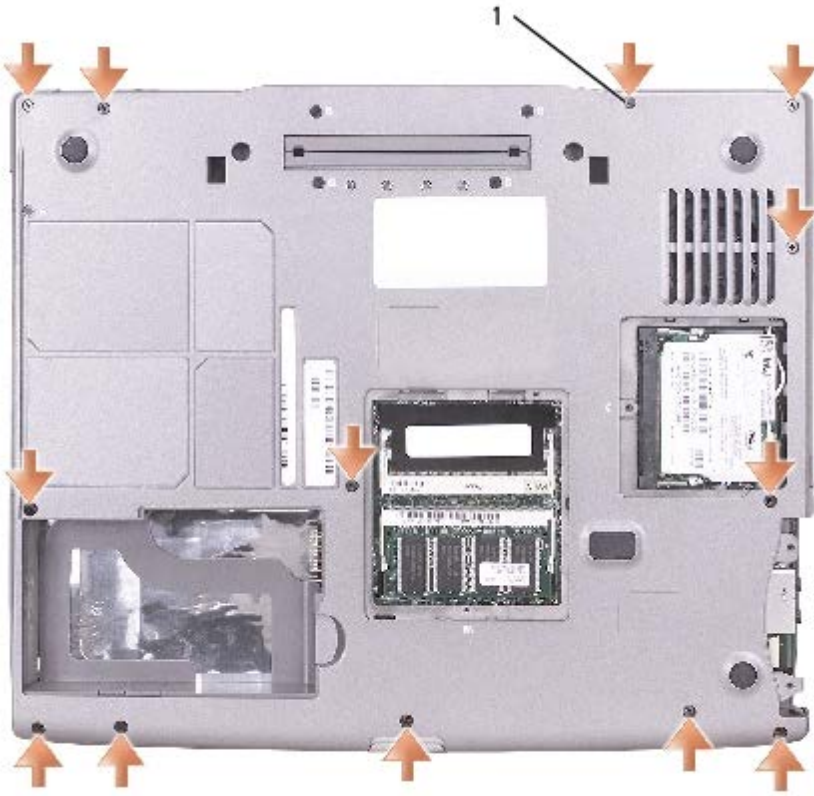


1	M2.5 x 8-mm screws (13)	3R690
---	-------------------------	-------


7. Disconnect the touch pad connector from the system board.

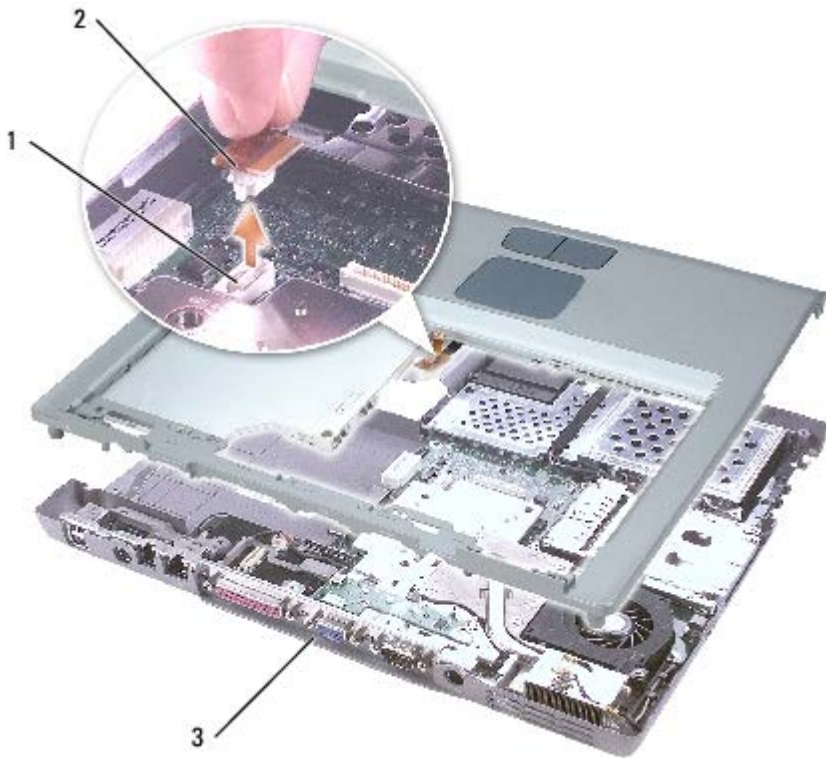

1	system board connector
2	touch pad connector
3	computer base

 **NOTICE:** Carefully separate the palm rest from the computer base to avoid damage to the palm rest.

8. Starting at the back center of the palm rest, use your fingers to separate the palm rest from the computer base by gently lifting up the palm rest while pressing down on the back of the computer base.

 **NOTE:** When you reinstall the palm rest, attach the right side of the palm rest first.

[Back to Contents Page](#)

Docking Doors

Dell™ Latitude™ D505 Service Manual

Removing the Docking Doors

⚠ CAUTION: Before working inside your computer, read the safety instructions in your *Product Information Guide*.

➡ NOTICE: To avoid electrostatic discharge, ground yourself by using a wrist grounding strap or by periodically touching an unpainted metal surface (such as the back panel) on the computer.

1. Follow the instructions in "[Preparing to Work Inside the Computer](#)."
2. Gently bend the docking doors and lift them away from the computer base.



1	docking doors	7R316
---	---------------	-------

Installing the Docking Doors

Slide the side of the docking doors with the spring over the longer posts.




1	docking doors with spring	7R316
2	longer post	

[Back to Contents Page](#)


Speakers

Dell™ Latitude™ D505 Service Manual

 **CAUTION:** Before performing the following procedures, read the safety instructions in your *Product Information Guide*.

 **NOTICE:** To avoid electrostatic discharge, ground yourself by using a wrist grounding strap or by periodically touching an unpainted metal surface (such as the back panel) on the computer.


1. Follow the instructions in "[Preparing to Work Inside the Computer](#)."
2. Remove the [keyboard](#).
3. Remove the [display assembly](#).
4. Remove the [palm rest](#).
5. Remove the speaker cable from the speaker-cable routing clip.

 **NOTICE:** To avoid damaging the speaker cable when inserting it back into the routing clip, slightly bend open the clip with your finger, insert the cable, and then press the clip closed.

6. Disconnect the speaker connector from the system board connector.

 **NOTICE:** Handle the speakers with care to avoid damaging them.

7. Remove the M2.5 x 5-mm screw labeled "M2.5x5" from the speakers.
8. Gently pull out on the front plastic computer base while pulling up the speakers.
9. Remove the [reserve battery](#) from the speakers.

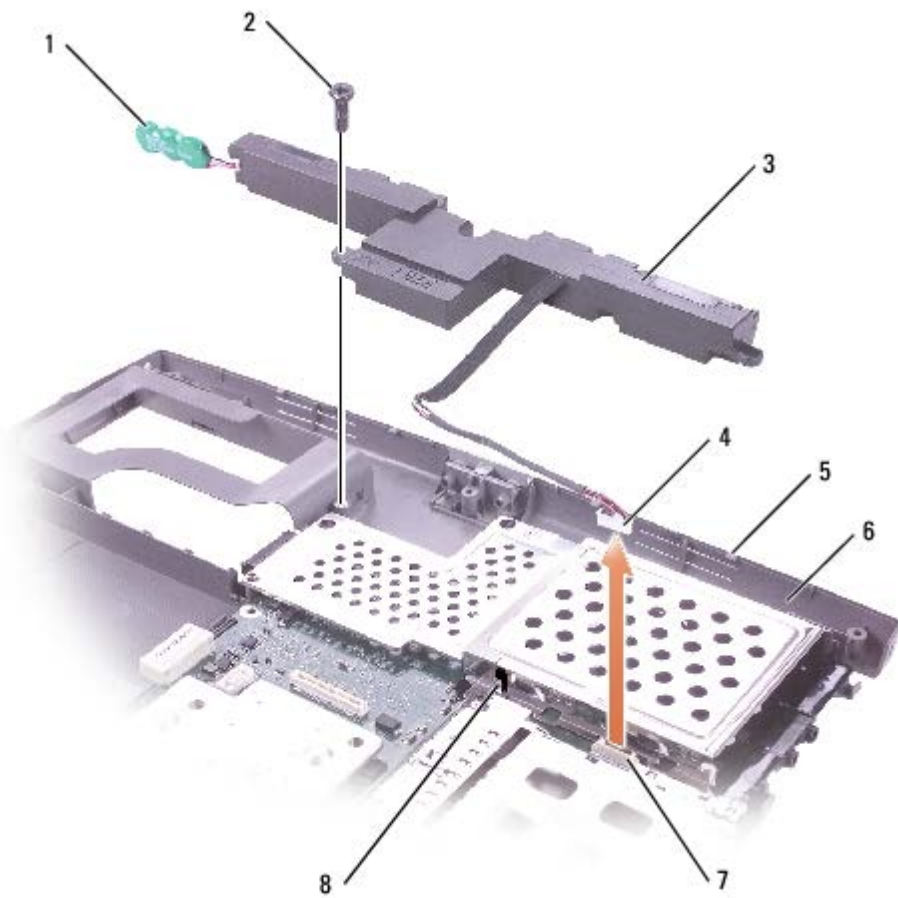

1	reserve battery	3R459	5	speaker latches	
2	M2.5 x 5-mm screw labeled "M2.5x5"	63PDH	6	computer base	
3	speakers	H1330	7	system board connector	
4	speaker connector		8	speaker-cable routing clip	

[Back to Contents Page](#)


Base Latch

Dell™ Latitude™ D505 Service Manual

⚠ CAUTION: Before performing the following procedures, read the safety instructions in your *Product Information Guide*.

🔄 NOTICE: To avoid electrostatic discharge, ground yourself by using a wrist grounding strap or by periodically touching an unpainted metal surface (such as the back panel) on the computer.

1. Follow the instructions in "[Preparing to Work Inside the Computer](#)."
2. Remove the [keyboard](#).
3. Remove the [display assembly](#).
4. Remove the [palm rest](#).
5. Remove the [speakers](#).
6. Press in the release button, slightly press together the two securing clips nearest the back of the computer, and then pull the base latch straight up and away from the computer base.

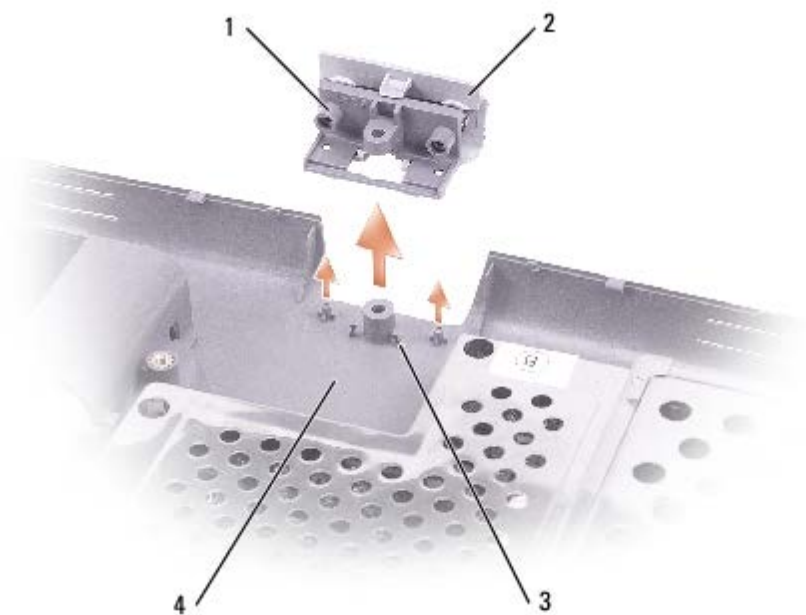

1	base latch	U2983
2	release button	
3	securing clips (2)	
3	computer base	


Fan

Dell™ Latitude™ D505 Service Manual

⚠ CAUTION: Before performing the following procedures, read the safety instructions in your *Product Information Guide*.

👉 NOTICE: To avoid electrostatic discharge, ground yourself by using a wrist grounding strap or by periodically touching an unpainted metal surface (such as the back panel) on the computer.

1. Follow the instructions in "[Preparing to Work Inside the Computer](#)."
2. Remove the [keyboard](#).
3. Remove the [palm rest](#).
4. Remove the [microprocessor thermal-cooling assembly](#).
5. Pull straight up on the fan cable connector to disconnect it from the system board connector.

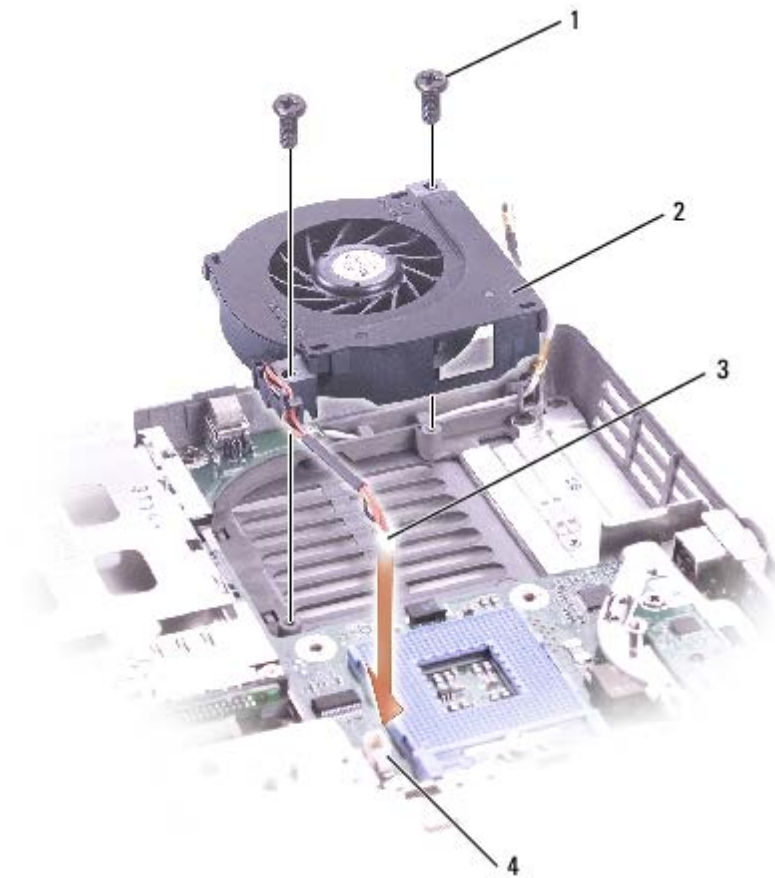

1	M2.5 x 8-mm screws (2)	3R690
2	fan	J1043
3	fan cable connector	
4	system board connector	

6. Remove the two M2.5 x 8-mm screws from the fan, and pull the fan away from the system board.


[Back to Contents Page](#)

System Board


Dell™ Latitude™ D505 Service Manual


Removing the System Board

 **CAUTION:** Before performing the following procedures, read the safety instructions in your *Product Information Guide*.


 **NOTICE:** To avoid electrostatic discharge, ground yourself by using a wrist grounding strap or by periodically touching an unpainted metal surface (such as the back panel) on the computer.

The system board's BIOS chip contains the Service Tag, which is also visible on a barcode label on the bottom of the computer. The replacement kit for the system board includes a CD that provides a utility for transferring the Service Tag to the replacement system board.

 **NOTICE:** Disconnect the computer and any attached devices from electrical outlets, and remove any installed batteries.


 **NOTICE:** To avoid electrostatic discharge, ground yourself by using a wrist grounding strap or by touching an unpainted metal surface on the computer.

1. Follow the instructions in "[Preparing to Work Inside the Computer](#)."
2. Remove the [keyboard](#).
3. Remove the [modem](#).
4. Remove the [display assembly](#).
5. Remove the [palm rest](#).
6. Remove the [microprocessor thermal-cooling assembly](#).
7. Remove the [microprocessor](#).
8. Remove the [speakers](#).
9. Remove the two M2.5 x 5-mm screws labeled "B."

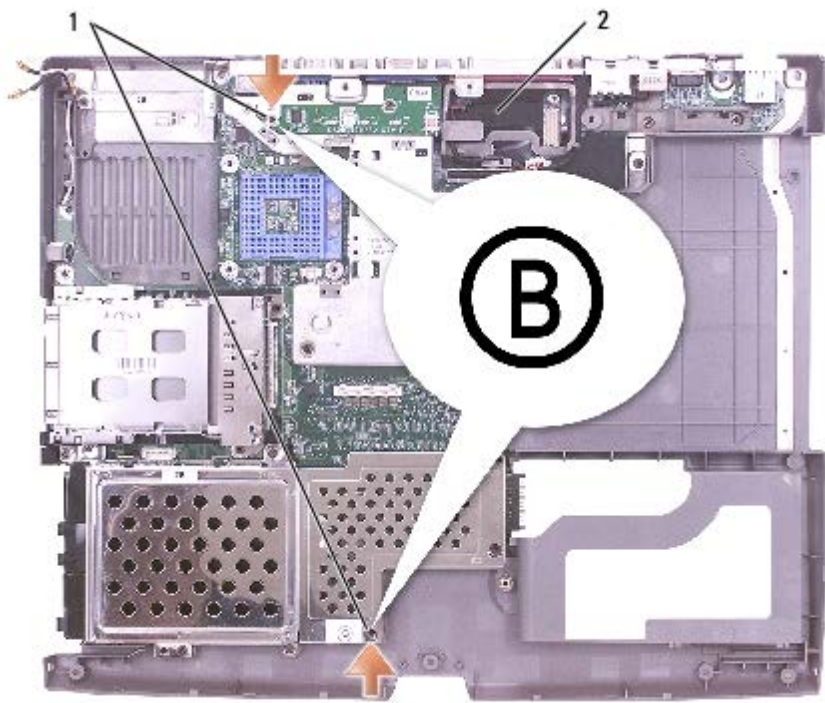


1	M2.5 x 5-mm screws labeled "B" (2)	63PDH
2	system board	W3344

10. Turn over the computer and remove the four M2 x 4-mm screws labeled "B" that secure the system board to the computer base.

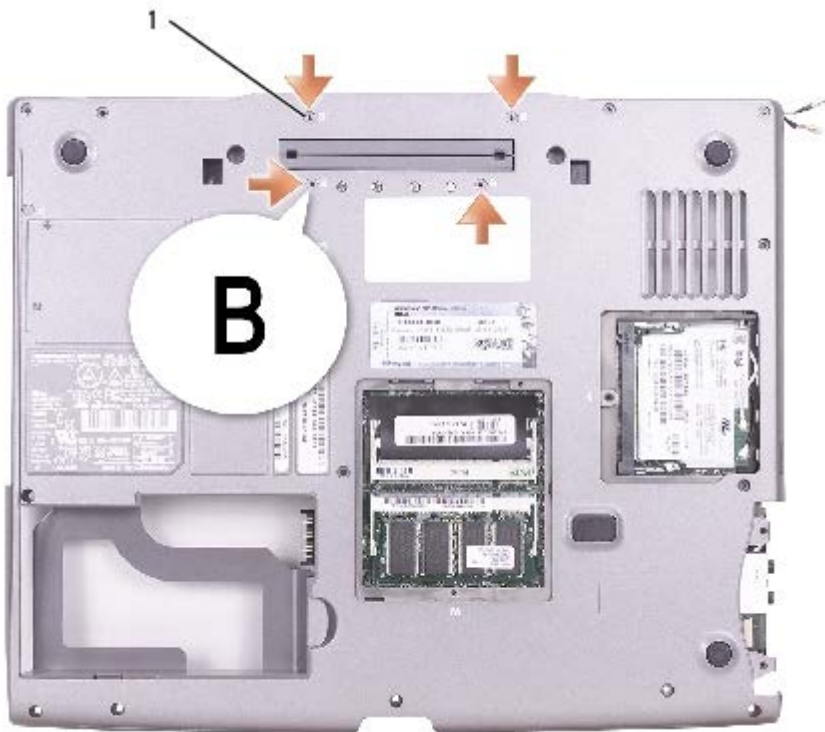

1	M2 x 4-mm screws labeled "B" (4)	98MKC
---	----------------------------------	-------


11. Gently push down near the middle of the back plastic computer base so that the two system-board securing clips clear their slots, and then pull out the system board.

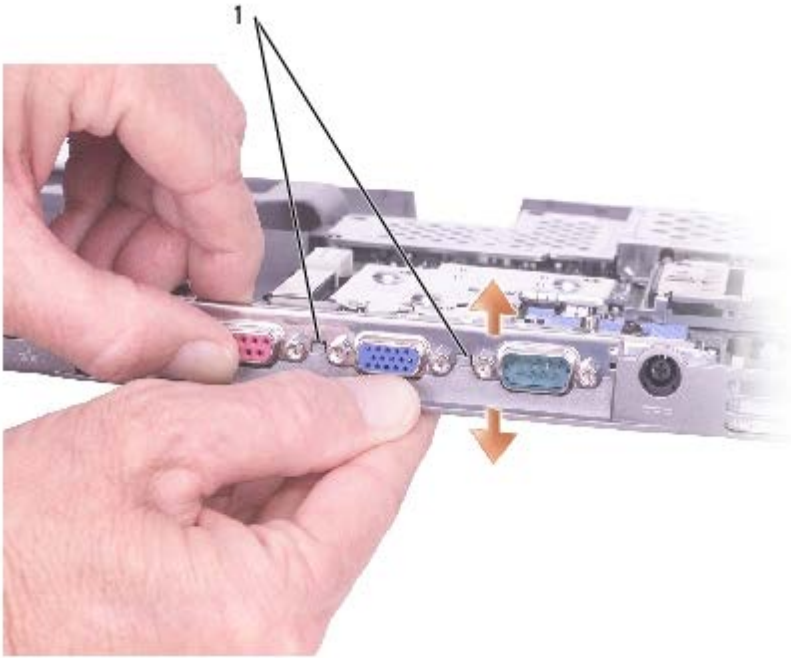


1 system-board securing clips (2)

Installing the System Board

1. Follow all of the steps in "[Removing the System Board](#)" in reverse order.

 **NOTICE:** Before turning on the computer, replace all screws and ensure that no stray screws remain inside the computer. Failure to do so may result in damage to the computer.

2. Turn on the computer.

 **NOTE:** After replacing the system board, enter the computer Service Tag into the BIOS of the replacement system board.

3. Insert the floppy disk or CD that accompanied the replacement system board into the appropriate drive. Follow the instructions that appear on the screen.

[Back to Contents Page](#)

Flashing the BIOS

Dell™ Latitude™ D505 Service Manual

1. Ensure that the AC adapter is plugged in and that the main battery is installed properly.



NOTE: If you use a BIOS update program CD to flash the BIOS, set up the computer to boot from a CD before inserting the CD.

2. Insert the BIOS update program floppy disk or CD, and turn on the computer.

Follow the instructions that appear on the screen. The computer continues to boot and updates the new BIOS. When the flash update is complete, the computer will automatically reboot.


3. Press <F2> during POST to enter the system setup program.
4. Press <Alt> and <F> to reset the computer defaults.
5. Press <Esc Suspend>, select **Save changes and reboot**, and press <Enter> to save configuration changes.
6. Remove the flash BIOS update program floppy disk or CD from the drive and restart the computer.

Pin Assignments for I/O Connectors

Dell™ Latitude™ D505 Service Manual


- [USB Connector](#)
 - [Video Connector](#)
 - [Parallel Connector](#)
 - [S-Video TV-Out Connector](#)
 - [Serial Connector](#)
 - [IEEE 1394 Connector](#)
-

USB Connector

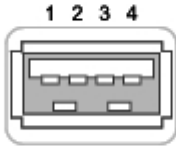

Pin	Signal
1	USB5V+
2	USBP-
3	USBP+
4	GND


Video Connector

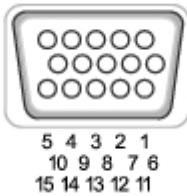

Pin	Signal	Pin	Signal
1	CRT_R	9	5V+
2	CRT_G	10	GND
3	CRT_B	11	MONITOR_DETECT-
4	NC	12	DDC_DATA


5	GND	13	CRT_HS
6	GND	14	CRT_VS
7	GND	15	DDC_CLK
8	GND		

Parallel Connector

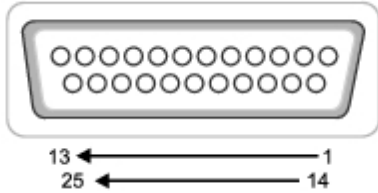

Pin	Signal	Pin	Signal
1	STROBE-	10	ACK-
2	PD0	11	BUSY
3	PD1	12	PE
4	PD2	13	SLCT
5	PD3	14	AFD/3M-
6	PD4	15	ERROR-
7	PD5	16	INIT-
8	PD6	17	SLIN-
9	PD7	18-25	GND

S-Video TV-Out Connector

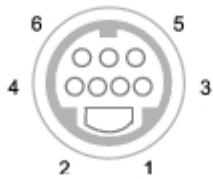

S-Video	
Pin	Signal
1	GND
2	GND
3	DLUMA-L
4	DCRMA-L

Composite Video

Pin	Signal
5	NC
6	DCMPS-L
7	GND

Serial Connector



Pin	Signal	Pin	Signal
1	DCD	6	DSR
2	RXDA	7	RTS
3	TXDA	8	CTS
4	DTR	9	RI
5	GND		


IEEE 1394 Connector



Pin	Signal
1	TPB-
2	TPB+
3	TPA-
4	TPA+

Mini Recommended Spares List

- [Bottom Base Parts](#)
- [CD](#)
- [DVD](#)
- [Fan](#)
- [Floppy Drive](#)
- [Hard Drive and Accessories](#)
- [Keyboard](#)
- [LCD Display Assembly](#)
- [Memory](#)
- [Modem](#)
- [Power Source](#)
- [Processors](#)
- [Speaker](#)
- [Microprocessor Thermal-Cooling Assembly](#)
- [Wireless](#)

 **NOTE:** The part numbers listed below are subject to change.

Bottom Base Parts	
U2984	memory door
U2985	Mini PCI door
U2982	rubber foot for HDD strike zone (1)
2N401	rubber feet (3)
F1438	bottom base plastic assembly
U2983	bottom latch with spring (latch release for LCD)
7R316	docking doors with spring

CD	
OR115	24X CD, D-module

DVD	
R1697	8X DVD, D-module
G0426	CD-RW/DVD Combo, D-Module
T1420	4X DVD+RW, +R, D-module

Fan	
J1043	fan

Floppy Drive	
2R152	floppy drive, D-module

Hard Drive and Accessories	
1E321	20-G HDD
W1081	30-G HDD

J1749	40-G HDD
9Y273	60-G HDD
OR854	primary HDD carrier with bezel
5X488	HDD mounting screws (4)
63PDH	HDD security screws (2)
8267R	HDD connector
4P124	D-module housing only (no HDD)

Keyboard	
1M709	English, US-international, single pointing
H1371	center hinge cover
63PDH	M2.5 x 5-mm screw

LCD Display Assembly	
F1788	XGA panel, 14.1-inch
D1724	XGA panel, 15-inch
W3434	SXGA panel, 15-inch
F1484	display latch
X1261	display bezel, 14.1-inch
H1370	display bezel, 15-inch
H1375	top cover, 14.1- and 15-inch (includes latch)

Memory	
6G647	128-MB DIMM
6G648	256-MB DIMM
6G649	512-MB DIMM
1Y255	1-G DIMM

Modem	
Y0231	modem daughter card (MDC)

Power Source	
OR160	primary battery, 12.6 V, 6 cell
OM787	D-module second battery, 12.6 V, 6 cell
3R459	reserve battery

5U092	AC power brick only, 65 W
9T215	AC adapter PA10, 90 W (must be used with D-Dock and D-Port)
7Y295	power cord, flat, US, 1 m (3 ft)
K2490	power cord (for D-Docks only), US, 2 m (6 ft)
H0286	rubber strap for power cord management

Processors	
Intel® Pentium® M	
F2280	service kit, 1.4 GHZ
G2518	service kit, 1.5 GHZ
G2238	service kit, 1.6 GHZ
H2100	service kit, 1.7 GHZ
Intel Celeron® M	
N3508	service kit, 1.2 GHZ
N3507	service kit, 1.3 GHZ
	service kit, 1.4 GHZ

Speaker	
H1330	speaker

Microprocessor Thermal-Cooling Assembly	
H1309	microprocessor thermal-cooling assembly

Wireless	
3X548	TM1400 dual-band a/b combo card MPC I
J4781	Wireless 1450 dual-band 802.11a/b/g WLAN MPC I
9Y200	Intel Pro Wireless 2100 802.11b MPC I
K3444	Pro Wireless 2200 802.11b/g MPC I
J0846	TM1300 802.11b/g MPC I
M4479	Wireless 1350 802.11b/g WLAN MPC I
2U381	PC Card with Bluetooth® wireless technology, internal

[Back to Contents Page](#)