


# Dell S2417DG Monitor User's Guide

Model: S2417DG  
Regulatory model: S2417DGb



# Notes, cautions, and warnings

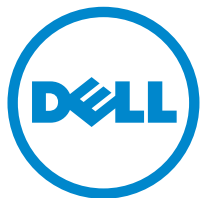

**NOTE:** A NOTE indicates important information that helps you make better use of your computer.



**CAUTION:** A CAUTION indicates potential damage to hardware or loss of data if instructions are not followed.



**WARNING:** A WARNING indicates a potential for property damage, personal injury, or death.

-----  
**Copyright © 2016 Dell Inc. All rights reserved.**

This product is protected by U.S. and international copyright and intellectual property laws. Dell™ and the Dell logo are trademarks of Dell Inc. in the United States and/or other jurisdictions. All other marks and names mentioned herein may be trademarks of their respective companies.

# Contents

<b>About Your Monitor</b> .....	<b>5</b>
Package Contents .....	5
Product Features .....	6
Identifying Parts and Controls .....	7
Monitor Specifications .....	11
Plug and Play Capability .....	17
Universal Serial Bus (USB) Interface .....	18
LCD Monitor Quality and Pixel Policy .....	20
Maintenance Guidelines .....	20
<b>Setting Up the Monitor</b> .....	<b>21</b>
Attaching the Stand .....	21
Connecting Your Monitor .....	23
Organizing Your Cables .....	24
Removing the Monitor Stand .....	25
Wall Mounting (Optional) .....	26
<b>Operating the Monitor</b> .....	<b>27</b>
Power On the Monitor .....	27
Using the Front-Panel Controls .....	27


Using the On-Screen Display (OSD) Menu .....	29
Setting the Maximum Resolution.....	35
Using the Tilt, Swivel, and Vertical Extension .....	36
Rotating the Monitor.....	37
Adjusting the Rotation Display Settings of Your System .....	38
<b>Troubleshooting .....</b>	<b>39</b>
Self-Test .....	39
Built-in Diagnostics .....	40
Common Problems .....	41
Product Specific Problems .....	43
Universal Serial Bus (USB) Specific Problems .....	44
<b>Appendix .....</b>	<b>45</b>
FCC Notices (U.S. Only) and Other Regulatory Information .....	45
Contact Dell.....	45


# About Your Monitor




---




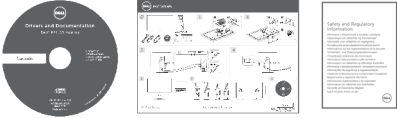
## Package Contents

Your monitor ships with the components shown below. Ensure that you have received all the components and [Contact Dell](#) if something is missing.

 **NOTE:** Some items may be optional and may not ship with your monitor. Some features or media may not be available in certain countries.

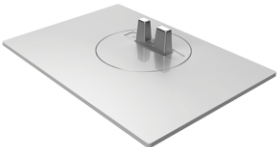 **NOTE:** To set up with any other stand, please refer to the respective stand setup guide for setup instructions.

	Monitor
	Stand Riser
	Stand Base

	Power Cable (Varies by Countries)
	DP Cable
	USB 3.0 Upstream Cable (Enables the USB Ports on the Monitor)
	<ul style="list-style-type: none"> <li>• Drivers and Documentation Media</li> <li>• Quick Setup Guide</li> <li>• Safety, Environmental, and Regulatory Information</li> </ul>

## Product Features


The **Dell S2417DG** flat panel display has an active matrix, Thin-Film Transistor (TFT), Liquid Crystal Display (LCD) and LED backlight. The monitor features include:

- 60.47 cm (23.8-inch) viewable area (measured diagonally).  
Resolution: Up to 2560 x 1440 through DisplayPort and HDMI, with full-screen support or lower resolutions.
- Nvidia G-Sync-enabled and 3D Vision Ready monitor, with a extremely high refresh rate of 144 Hz (165Hz with overclock) and a rapid response time of 1 ms.
- Color gamut of 72% NTSC.
- Tilt, Swivel, Pivot, Height Adjustment capability
- Removable stand and Video Electronics Standards Association (VESA™) 100 mm mounting holes for flexible mounting solutions.
- Digital connectivity with DisplayPort and HDMI.
- Equipped with 1 USB upstream port and 4 USB downstream ports.
- Plug and play capability if supported by your system.
- On-Screen Display (OSD) adjustments for ease of set-up and screen optimization.

- The color modes also offers different game modes, including FPS (First-Person Shooter), RTS (Real-Time Strategy), and RPG (Role-Playing Game).
- Software and documentation media includes an Information File (INF), Image Color Matching File (ICM), and product documentation.
- Security lock slot.
- Stand lock.
- Arsenic-Free glass and Mercury-Free for the panel only.
- 0.5 W standby power when in sleep mode.
- Energy Gauge shows the energy level being consumed by the monitor in real time.
- Analog backlight dimming control for flicker-free display.

## Identifying Parts and Controls

### Front View

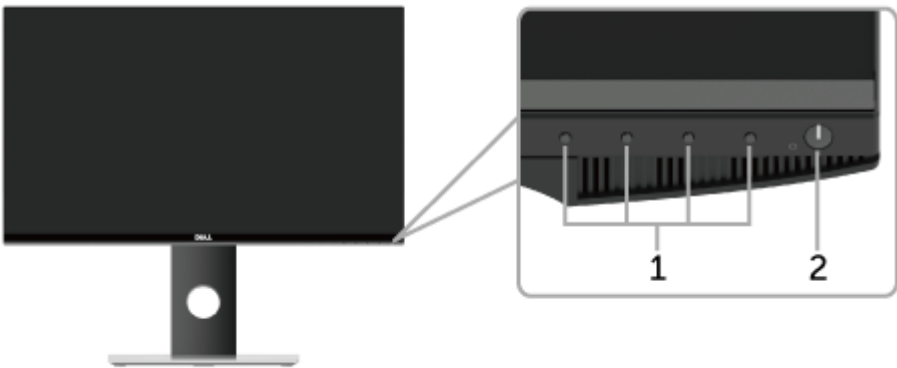


Label	Description
1	Function buttons (For more information, see <a href="#">Operating the Monitor</a> )
2	Power On/Off button (with LED indicator)



**NOTE:** For displays with glossy bezels the user should consider the placement of the display as the bezel may cause disturbing reflections from surrounding light and bright surfaces.

## Back View

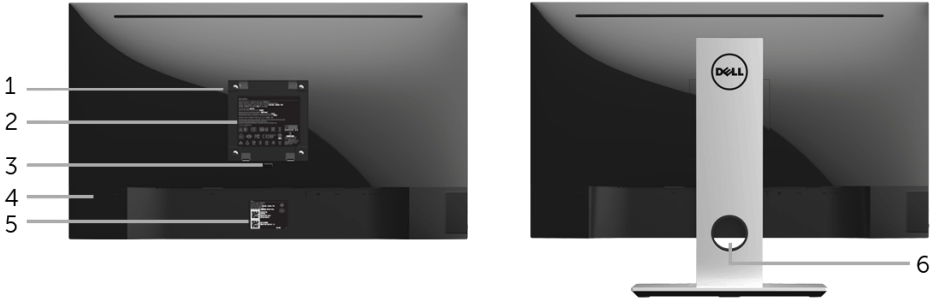


Back view with monitor stand

Label	Description	Use
1	VESA mounting holes (100 mm x 100 mm - behind attached VESA Cover)	Wall mount monitor using VESA-compatible wall mount kit (100 mm x 100 mm).
2	Regulatory label	Lists the regulatory approvals.
3	Stand release button	Releases stand from monitor.
4	Security lock slot	Secures monitor with security lock (security lock not included).
5	Barcode serial number label	Refer to this label if you need to contact Dell for technical support.
6	Cable-management slot	Use to organize cables by placing them through the slot.




## Side View

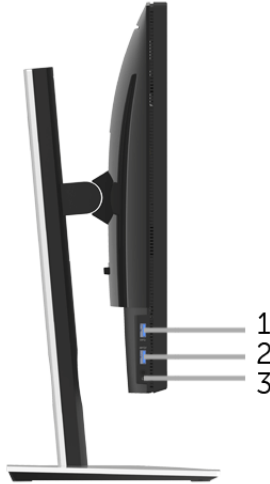

Label	Description	Use
1	USB 3.0 port	Connect your USB device. <b>NOTE:</b> To use this port, you must connect the USB cable (shipped with your monitor) from the USB-upstream port on the monitor to your computer.
2	USB 3.0 port with PowerShare	Connect your USB device (also supports fast charging).
3	Headphone-out jack	Connect the headphones.

## Bottom View

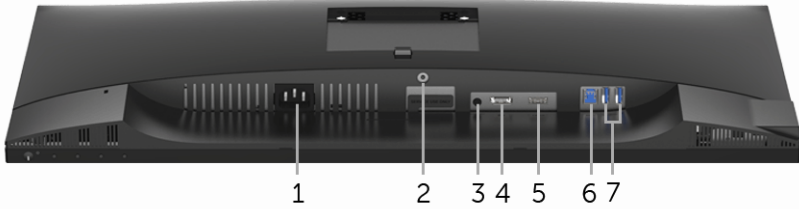

Bottom view without monitor stand

Label	Description	Use
1	Power cable connector	Connect the power cable (shipped with your monitor).
2	Stand lock feature	To lock the stand to the monitor using a M3 x 6 mm screw (screw not included).
3	Line-out port	Connect your speakers. <b>NOTE:</b> This port does not support headphones.
4	DisplayPort	Connect to your computer using the DP cable (shipped with your monitor).
5	HDMI port	Connect to your computer using the HDMI cable.
6	USB upstream port	Connect the USB cable (shipped with your monitor) to this port and your computer to enable the USB ports on your monitor.
7	USB 3.0 ports (2)	Connect USB device. <b>NOTE:</b> To use this port, you must connect the USB cable (shipped with your monitor) from the USB-upstream port on the monitor to your computer.

# Monitor Specifications

## Flat Panel Specifications

Model	S2417DG
Screen type	Active matrix - TFT LCD
Panel technology	TN
Aspect ratio	16:9
Viewable image	
Diagonal	604.7 mm (23.8 inches)
Horizontal, Active Area	526.85 mm (20.74 inches)
Vertical, Active Area	296.35 mm (11.67 inches)
Area	156131.99 mm <sup>2</sup> (242.04 inch <sup>2</sup> )
Pixel pitch	0.2058 mm x 0.2058 mm
Pixel per inch (PPI)	123
Viewing angle	160° (vertical) typical 170° (horizontal) typical
Brightness	350 cd/m <sup>2</sup> (typical)
Contrast ratio	1000 to 1 (typical)
Display screen coating	Anti-Glare with 3H hardness
Backlight	LED edgelight system
Response time (typical)	1 ms gray-to-gray
Color depth	16.7 million colors
Color gamut	72%* (CIE1931)
Built-in devices	<ul style="list-style-type: none"><li>• USB 3.0 super-speed hub (with 1 x USB 3.0 upstream port)</li><li>• 4 x USB 3.0 downstream ports (including 1 port which supports power-charging)</li></ul>
Connectivity	<ul style="list-style-type: none"><li>• 1 x DP 1.2</li><li>• 1 x HDMI 1.4</li><li>• 1 x USB 3.0 upstream port - Bottom</li><li>• 2 x USB 3.0 port - Side</li><li>• 2 x USB 3.0 port - Bottom</li><li>• 1 x Headphone-out jack - Side</li><li>• 1 x Audio line-out jack - Bottom</li></ul>
Adjustability	

Height adjustable stand	0 to 130 mm
Tilt	-5° to 21°
Swivel	-45° to 45°
Pivot	-90° to 90°
Dell Display Manager Compatibility	No
Security	Security lock slot (cable lock sold separately)

\* Color gamut (typical) is based on CIE1976 (82%) and CIE1931 (72%) test standards.

## Resolution Specifications

<b>Model</b>	<b>S2417DG</b>
Horizontal scan range	30 kHz to 160 kHz (automatic)
Vertical scan range	30 Hz to 150 Hz (automatic) 165 Hz with overclock
Maximum preset resolution	2560 X 1440 at 165 Hz (with overclock)

## Supported Video Modes

<b>Model</b>	<b>S2417DG</b>
Video display capabilities (HDMI & DP playback)	480p, 480i, 576p, 720p, 1080p, 576i, 1080i, 1080p, QHD

## Preset Display Modes

### HDMI Display Modes

Display Mode	Horizontal Frequency (kHz)	Vertical Frequency (Hz)	Pixel Clock (MHz)	Sync Polarity (Horizontal/ Vertical)
IBM VGA, 640 x 480p	31.5	60	25.2	-/-
VESA, 720 x 480p	29.83	60	26.25	+/-
VESA, 720 x 576p	29.55	50	26	+/-
VESA, 800 x 600p	37.88	60	40	+/+
VESA, 1024 x 768p	48.36	60	65	-/-
HDTV, 1280 x 720p	37.5	50	74.25	+/+

HDTV, 1280 x 720p	45	60	74.25	+/+
HDTV, 1920 x 1080p	55.6	50	141.5	-/+
HDTV, 1920 x 1080p	67.5	60	148.5	+/+
VESA, 2560 x 1440p	88.8	60	241.5	+/-

### DP Display Modes

Display Mode	Horizontal Frequency (kHz)	Vertical Frequency (Hz)	Pixel Clock (MHz)	Sync Polarity (Horizontal/Vertical)
VESA, 640 x 480	31.5	60	25.2	-/-
VESA, 800 x 600	37.88	60	40	+/+
VESA, 1024 x 768	48.36	60	65	-/-
VESA, 2560 x 1440	88.8	60	241.5	+/-
VESA, 2560 x 1440	127.4	85	346.5	+/-
VESA, 2560 x 1440	150.9	100	410.5	+/-
VESA, 2560 x 1440	182.9	120	497.75	+/-
VESA, 2560 x 1440	209.5	144	569.75	+/+
VESA, 2560 x 1440	34.9	24	95	+/-
VESA, 2560 x 1440	232.05	150	612.61	+/-
VESA, 2560 x 1440	240.40	155	634.66	+/-
VESA, 2560 x 1440	240.64	160	635.28	+/+
VESA, 2560 x 1440	240.74	165	635.54	+/+



**NOTE:** This monitor supports NVIDIA G-Sync and NVIDIA 3D Vision Ready. Please visit <http://www.geforce.com> to know whether your NVIDIA graphics card supports the G-SYNC feature.

## Electrical Specifications

Model	S2417DG
Video input signals	<ul style="list-style-type: none"> <li>HDMI 1.4, 600 mV for each differential line, 100 ohm input impedance per differential pair</li> <li>DisplayPort 1.2, 600 mV for each differential line, 100 ohm input impedance per differential pair</li> </ul>
Synchronization input signals	Separate horizontal and vertical synchronization, polarity-free TTL level, SOG (Composite SYNC on green)

AC input voltage/frequency/ current	100 VAC to 240 VAC / 50 Hz or 60 Hz $\pm$ 3 Hz / 1.5 A (typical)
Inrush current	<ul style="list-style-type: none"> <li>• 120 V: 30 A (Max.) at 0 °C (cold start)</li> <li>• 220 V: 60 A (Max.) at 0 °C (cold start)</li> </ul>

## Physical Characteristics

<b>Model</b>	<b>S2417DG</b>
<b>Signal cable type</b>	<ul style="list-style-type: none"> <li>• Digital: HDMI, 19 pins (cable not included)</li> <li>• Digital: DisplayPort, 20 pins</li> <li>• Universal Serial Bus: USB, 9 pins</li> </ul>
<b>Dimensions (with stand)</b>	
Height (extended)	493.9 mm (19.44 inches)
Height (compressed)	363.9 mm (14.33 inches)
Width	540.4 mm (21.28 inches)
Depth	180.0 mm (7.09 inches)
<b>Dimensions (without stand)</b>	
Height	322.7 mm (12.70 inches)
Width	540.4 mm (21.28 inches)
Depth	55.8 mm (2.20 inches)
<b>Stand dimensions</b>	
Height (extended)	400.8 mm (14.78 inches)
Height (compressed)	354.4 mm (13.95 inches)
Width	242.6 mm (9.55 inches)
Depth	180.0 mm (7.09 inches)
<b>Weight</b>	
Weight with packaging	8.23 kg (18.11 lb)
Weight with stand assembly and cables	6.09 kg (13.40 lb)
Weight without stand assembly (For wall mount or VESA mount considerations - no cables)	3.84 kg (8.45 lb)
Weight of stand assembly	1.93 kg (4.25 lb)
Front frame gloss	Black Frame - 30 gloss unit (max.)

# Environmental Characteristics

<b>Model</b>	<b>S2417DG</b>	
<b>Compliant Standards</b>		
<ul style="list-style-type: none"> <li>• RoHS-compliant</li> <li>• Arsenic-Free glass and Mercury-Free for the panel only</li> </ul>		
<b>Temperature</b>		
Operating	0 °C to 40 °C (32 °F to 104 °F)	
Non-operating	<ul style="list-style-type: none"> <li>• Storage: -20 °C to 60 °C (-4 °F to 140 °F)</li> <li>• Shipping: -20 °C to 60 °C (-4 °F to 140 °F)</li> </ul>	
<b>Humidity</b>		
Operating	10% to 80% (non-condensing)	
Non-operating	<ul style="list-style-type: none"> <li>• Storage: 5% to 90% (non-condensing)</li> <li>• Shipping: 5% to 90% (non-condensing)</li> </ul>	
<b>Altitude</b>		
Operating	5,000 m (16,404 ft) (maximum)	
Non-operating	12,192 m (40,000 ft) (maximum)	
<b>Thermal dissipation</b>	<ul style="list-style-type: none"> <li>• 249.1 BTU/hour (maximum)</li> <li>• 112.6 BTU/hour (typical)</li> </ul>	

## Power Management Modes

If you have VESA's DPM™ compliance display card or software installed in your PC, the monitor can automatically reduce its power consumption when not in use. This is referred to as *Power Save Mode*\*. If the computer detects input from the keyboard, mouse, or other input devices, the monitor automatically resumes functioning. The following table shows the power consumption and signaling of this automatic power saving feature.


VESA Modes	Horizontal Sync	Vertical Sync	Video	Power Indicator	Power Consumption
Normal operation	Active	Active	Active	White	73 W (maximum)** 33 W (typical)
Active-off mode	Inactive	Inactive	Blanked	White (blinking)	Less than 0.5 W
Switch off	-	-	-	Off	Less than 0.3 W

\* Zero power consumption in OFF mode can only be achieved by disconnecting the main cable from the monitor.

\*\* Maximum power consumption with max luminance, and USB active.

# Pin Assignments


## DisplayPort Connector



Pin Number	20-pin Side of the Connected Signal Cable
1	ML0(p)
2	GND
3	ML0(n)
4	ML1(p)
5	GND
6	ML1(n)
7	ML2(p)
8	GND
9	ML2(n)
10	ML3(p)
11	GND
12	ML3(n)
13	GND
14	GND
15	AUX(p)
16	GND
17	AUX(n)
18	GND
19	Re-PWR
20	+3.3 V DP_PWR



## HDMI Connector

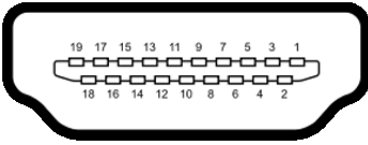


Pin Number	19-pin Side of the Connected Signal Cable
1	TMDS DATA 2+
2	TMDS DATA 2 SHIELD
3	TMDS DATA 2-
4	TMDS DATA 1+
5	TMDS DATA 1 SHIELD
6	TMDS DATA 1-
7	TMDS DATA 0+
8	TMDS DATA 0 SHIELD
9	TMDS DATA 0-
10	TMDS CLOCK+
11	TMDS CLOCK SHIELD
12	TMDS CLOCK-
13	CEC
14	Reserved (N.C. on device)
15	DDC CLOCK (SCL)
16	DDC DATA (SDA)
17	DDC/CEC Ground
18	+5V POWER
19	HOT PLUG DETECT

## Plug and Play Capability


You can install the monitor in any Plug and Play-compatible system. The monitor automatically provides the computer system with its Extended Display Identification Data (EDID) using Display Data Channel (DDC) protocols so that the system can configure itself and optimize the monitor settings. Most monitor installations are automatic; you can select different settings if desired. For more information about changing the monitor settings, see [Operating the Monitor](#).

# Universal Serial Bus (USB) Interface


This section gives you information about the USB ports that are available on the monitor.

 **NOTE:** This monitor is Super-Speed USB 3.0 compatible.

Transfer Speed	Data Rate	Power Consumption*
Super-speed	5 Gbps	4.5 W (Max, each port)
High speed	480 Mbps	4.5 W (Max, each port)
Full speed	12 Mbps	4.5 W (Max, each port)

\* Up to 2 A on USB downstream port (port with  lightning icon) with BC1.2-compliant devices or normal USB devices.

## USB Upstream Connector

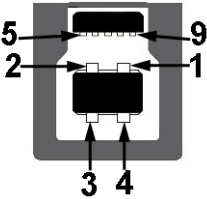

Pin Number	9-pin Side of the Connector
1	VCC
2	D-
3	D+
4	GND
5	SSTX-
6	SSTX+
7	GND
8	SSRX-
9	SSRX+

## USB Downstream Connector



Pin Number	9-pin Side of the Connector
1	VCC
2	D-
3	D+
4	GND
5	SSRX-
6	SSRX+
7	GND
8	SSTX-
9	SSTX+

## USB Ports

- 1 upstream - bottom
- 2 downstream - bottom
- 2 downstream - side
- Power Charging Port- the port with  lightning icon; supports fast current charging capability if the device is BC1.2 compatible.



**NOTE:** USB 3.0 functionality requires a USB 3.0-capable computer.



**NOTE:** The monitor's USB interface works only when the monitor is On or in the power save mode. If you turn Off the monitor and then turn it On, the attached peripherals may take a few seconds to resume normal functionality.

# LCD Monitor Quality and Pixel Policy

During the LCD Monitor manufacturing process, it is not uncommon for one or more pixels to become fixed in an unchanging state which are hard to see and do not affect the display quality or usability. For more information on Dell Monitor Quality and Pixel Policy, see Dell Support site at: <http://www.dell.com/support/monitors>.

## Maintenance Guidelines

### Cleaning Your Monitor



**CAUTION:** Read and follow the [Safety Instructions](#) before cleaning the monitor.



**WARNING:** Before cleaning the monitor, unplug the monitor power cable from the electrical outlet.



For best practices, follow the instructions in the list below while unpacking, cleaning, or handling your monitor:

- To clean your anti-static screen, lightly dampen a soft, clean cloth with water. If possible, use a special screen-cleaning tissue or solution suitable for the anti-static coating. Do not use benzene, thinner, ammonia, abrasive cleaners, or compressed air.
- Use a lightly-dampened, warm cloth to clean the monitor. Avoid using detergent of any kind as some detergents leave a milky film on the monitor.
- If you notice white powder when you unpack your monitor, wipe it off with a cloth.
- Handle your monitor with care as a darker-colored monitor may get scratched and show white scuff marks more than a lighter-colored monitor.
- To help maintain the best image quality on your monitor, use a dynamically changing screen saver and turn Off your monitor when not in use.

# Setting Up the Monitor

---

## Attaching the Stand

-  **NOTE:** The stand is detached when the monitor is shipped from the factory.
-  **NOTE:** This is applicable for a monitor with a stand. When any other stand is bought, please refer to the respective stand setup guide for the set up instructions.

To attach the monitor stand:


- 1 Remove the cover and place the monitor on it.
- 2 Insert the two tabs on the upper part of the stand to the groove on the back of the monitor.
- 3 Press the stand till it snaps into place.



- 4 Hold the stand base with the triangle mark, ▲, facing upward. Then, align the stand base protruded blocks to the matching slot on the stand.



- 5 Insert the stand base blocks fully into the stand slot.

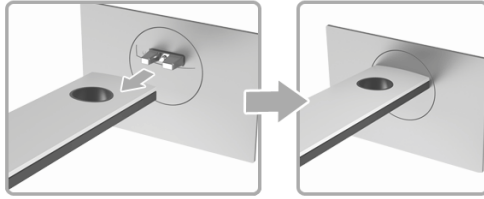



- 6 Lift the screw handle and turn the screw clockwise.



- 7 After fully tightening the screw, fold the screw handle flat within the recess.

# Connecting Your Monitor

 **WARNING:** Before you begin any of the procedures in this section, follow the [Safety Instructions](#).

 **NOTE:** Route the cables through the cable-management slot before connecting them.

 **NOTE:** Do not connect all cables to the computer at the same time.

To connect your monitor to the computer:


- 1 Turn Off your computer and disconnect the power cable.
- 2 Connect the DP or HDMI cable from your monitor to the computer.

## Connecting the DisplayPort (DP to DP) cable



## Connecting the HDMI cable (optional)




 **NOTE:** The graphics are used for the purpose of illustration only. Appearance of the computer may vary.

## Connecting the USB 3.0 cable

After you have completed connecting the DP/HDMI cable, follow the procedures below to connect the USB 3.0 cable to the computer and complete your monitor setup:

- 1 Connect the upstream USB 3.0 port (cable supplied) to an appropriate USB 3.0 port on your computer. (See [Bottom View](#) for details.)
- 2 Connect the USB 3.0 peripherals to the downstream USB 3.0 ports on the monitor.
- 3 Plug the power cables for your computer and monitor into a nearby outlet.
- 4 Turn On the monitor and the computer.  
If your monitor displays an image, installation is complete. If it does not display an image, see [Universal Serial Bus \(USB\) Specific Problems](#).
- 5 Use the cable slot on the monitor stand to organize the cables.

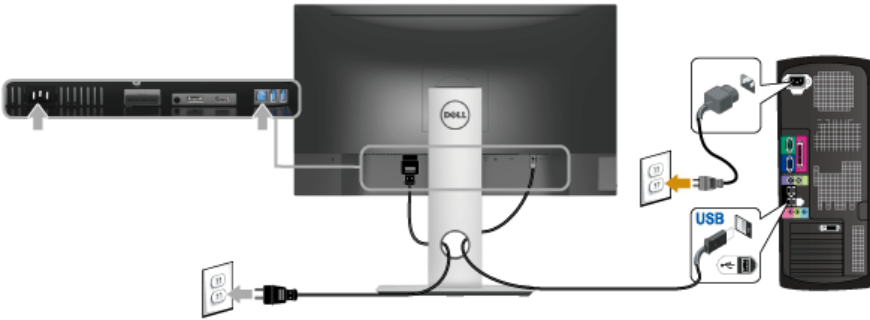



## Organizing Your Cables




After attaching all necessary cables to your monitor and computer, (See [Connecting Your Monitor](#) for cable attachment,) organize all cables as shown above.



## Removing the Monitor Stand

-  **NOTE:** To prevent scratches on the LCD screen while removing the stand, ensure that the monitor is placed on a soft, clean surface.
-  **NOTE:** This is applicable for a monitor with a stand. When any other stand is bought, please refer to the respective stand setup guide for the set-up instructions.

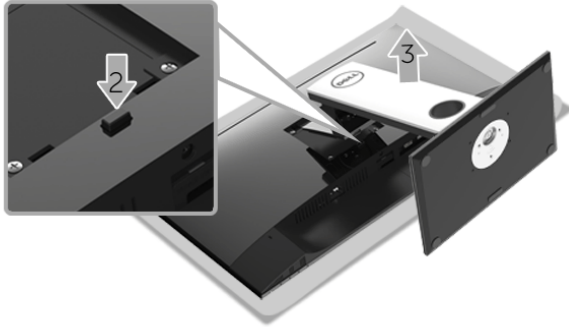

To remove the stand:

- 1 Place the monitor on a soft cloth or cushion.
- 2 Press and hold the stand release button.
- 3 Lift the stand up and away from the monitor.

## Wall Mounting (Optional)



(Screw dimension: M4 x 10 mm).

Refer to the instructions that come with the VESA-compatible wall mounting kit.

- 1 Place the monitor panel on a soft cloth or cushion on a stable, flat table.
- 2 Remove the stand.
- 3 Use a Phillips crosshead screwdriver to remove the four screws securing the plastic cover.
- 4 Attach the mounting bracket from the wall mounting kit to the monitor.
- 5 Mount the monitor on the wall by following the instructions that comes with the wall mounting kit.




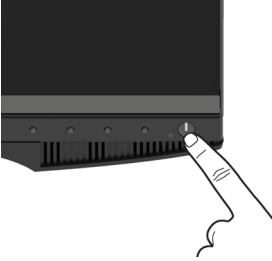
**NOTE:** For use only with UL-listed wall mount bracket with minimum weight/load bearing capacity of 3.84 kg.

# Operating the Monitor

---


## Power On the Monitor

Press the  button to turn On the monitor.





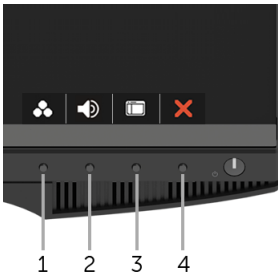


## Using the Front-Panel Controls

Use the control buttons on the front of the monitor to adjust the characteristics of the image being displayed. As you use these buttons to adjust the controls, an OSD shows the numeric values of the characteristics as they change.




The following table describes the front-panel buttons:





Front-Panel Button	Description
1  <b>Shortcut key/ Preset Modes</b>	Use this button to choose from a list of preset color modes.  <b>NOTE:</b> The function is disabled when you are under 3D mode or ULMB mode.

2		Use the buttons to adjust the volume. Minimum is 0 (-). Maximum is 100 (+).
	<b>Shortcut key/ Volume</b>	
3		Use the <b>MENU</b> button to launch the On-Screen Display (OSD) and select the OSD Menu. See <a href="#">Accessing the Menu System</a> .
	<b>Menu</b>	
4		Use this button to go back to the main menu or exit the OSD main menu.
	<b>Exit</b>	
5		Use the <b>Power</b> button to turn the monitor <b>On</b> and <b>Off</b> . The white light indicates the monitor is <b>On</b> and fully functional. A blinking white light indicates the power save mode.
	<b>Power (with power light indicator)</b>	

## Front-Panel Button


Use the buttons on the front of the monitor to adjust the image settings.




Front-Panel Button	Description
1  <b>Up</b>	Use the <b>Up</b> button to adjust (increase ranges) items in the OSD menu.
2  <b>Down</b>	Use the <b>Down</b> button to adjust (decrease ranges) items in the OSD menu.
3  <b>Select</b>	Use the <b>Select</b> button to confirm your selection.
4  <b>Back</b>	Use the <b>Back</b> button to go back to the previous menu.


# Using the On-Screen Display (OSD) Menu










## Accessing the Menu System

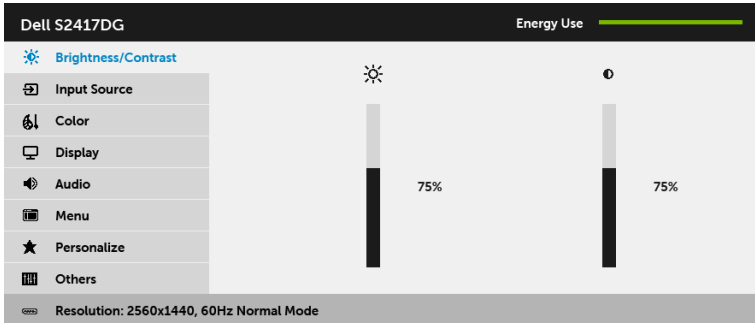 **NOTE:** If you change the settings and then either proceed to another menu or exit the OSD menu, the monitor automatically saves those changes. The changes are also saved if you change the settings and then wait for the OSD menu to disappear.

- 1 Press the  button to launch the OSD menu and display the main menu.


### Main Menu for digital (DP) input



- 2 Press the  and  buttons to move between the setting options. As you move from one icon to another, the option name is highlighted. See the following table for a complete list of all the options available for the monitor.
- 3 Press the  button once to activate the highlighted option.
- 4 Press the  and  buttons to select the desired parameter.
- 5 Press  to enter the slide bar and then use the  and  buttons, according to the indicators on the menu, to make your changes.
- 6 Select the  button to return to the main menu.

**Icon****Menu and Submenus****Description****Brightness/Contrast**

Use this menu to activate **Brightness/Contrast** adjustment.

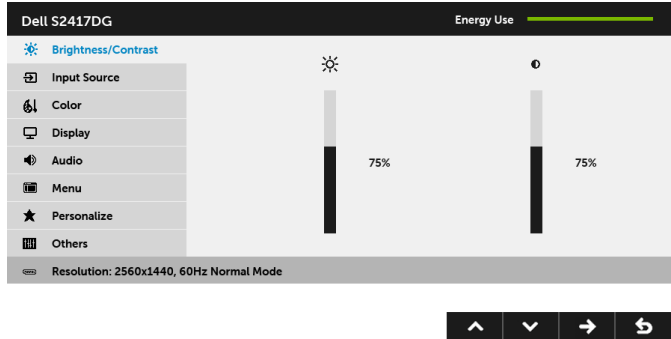**Brightness**

**Brightness** adjusts the luminance of the backlight.

Press the button to increase the brightness and press the button to decrease the brightness (min. 0 / max. 100).

**Contrast**


Adjust the **Brightness** first, and then adjust the **Contrast** only if further adjustment is necessary.

Press the button to increase the contrast and press the button to decrease the contrast (min. 0 / max. 100).

The **Contrast** function adjusts the degree of difference between darkness and lightness on the monitor screen.

**Input Source**

Use the **Input Source** menu to select between the different video signals that may be connected to your monitor.

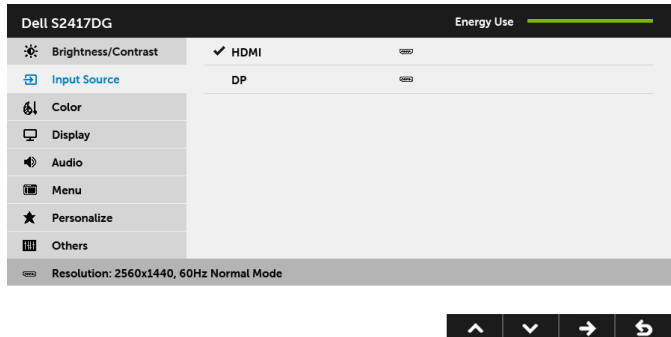**HDMI**

Select the **HDMI** input when you are using the HDMI connector. Press to select the HDMI input source.


**DP**

Select the **DP** input when you are using the DisplayPort (DP) connector. Press to select the DisplayPort input source.



## Color

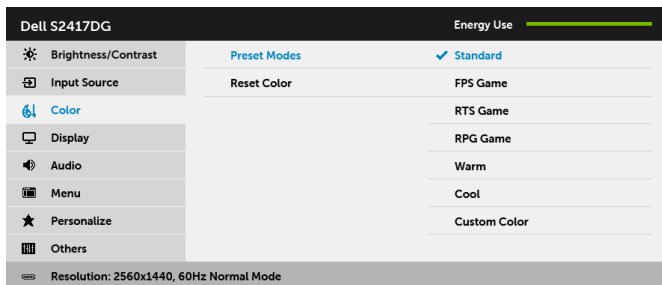

Use **Color** to adjust the color setting mode.



**NOTE:** The function is disabled when you are under 3D mode or ULMB mode.

**Preset Modes** When you select **Preset Modes**, you can choose **Standard**, **FPS Game**, **RTS Game**, **RPG Game**, **Warm**, **Cool**, or **Custom Color** from the list.

- **Standard:** Loads the monitor's default color settings. This is the default preset mode.
- **FPS Game:** Loads color settings ideal for First-Person Shooter games.
- **RTS Game:** Loads color settings ideal for Real-Time Strategy games.
- **RPG Game:** Loads color settings ideal for Role-Playing games.
- **Warm:** Increases the color temperature. The screen appears warmer with a red/yellow tint.
- **Cool:** Decreases the color temperature. The screen appears cooler with a blue tint.
- **Custom Color:** Allows you to manually adjust the color settings.


Press the  and  buttons to adjust the three colors (R, G, B) values and create your own preset color mode.





**Reset Color** Reset your monitor color settings to the factory settings.

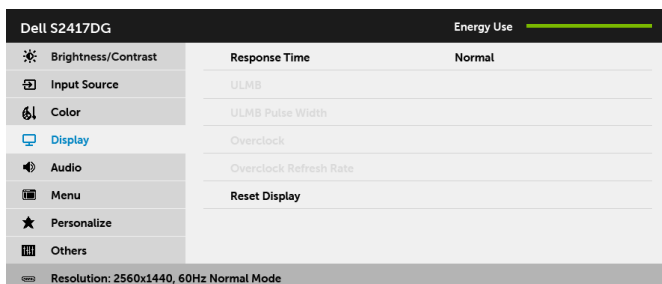

## Display

Use **Display** to adjust image.




<b>Response Time</b>	Allows you to set the <b>Response Time</b> to <b>Normal</b> or <b>Fast</b> .
<b>ULMB</b>	<p><b>ULMB</b> (Ultra Low Motion Blur) helps have less of a motion blur effect while you are watching fast-moving images. When the graphics card supports G-SYNC, make sure that the Enable G-SYNC function is not selected in the NVIDIA Control Panel, <b>ULMB</b> will be automatically enabled.</p> <p><b>NOTE:</b> This function is available when the refresh rate is 85 Hz, 100 Hz or 120 Hz.</p> <p><b>NOTE:</b> When ULMB is enabled, the message of ULMB Mode is displayed on the lower-left corner of the OSD. When G-SYNC is enabled in the NVIDIA Control Panel, the message of G-SYNC Mode is displayed instead. If your system doesn't support G-SYNC, then the message of Normal Mode is displayed.</p>
<b>ULMB Pulse Width</b>	Allows you to adjust the panel's backlight a bit, so as to reduce motion blur. Use  or  to adjust the level from 10 to 100. Smaller values decrease motion blur and brightness.
<b>Overclock</b>	<p>Allows you to operate the monitor at a higher refresh rate than specified by the panel specification.</p> <p><b>NOTE:</b> This function is only available when using DP (DisplayPort) input.</p> <p><b>NOTE:</b> Overclocking may cause screen flickering. To reduce such effects, try to setting a lower refresh rate in the <b>Overclock Refresh Rate</b> menu.</p>
<b>Overclock Refresh Rate</b>	<p>The function increases your displays refresh rate.</p> <p>Use  or  to adjust the frequency in 5 Hz increments, from 150 to 165 Hz.</p> <p>After you specify the refresh rate, the following message appears to guide you through the process:</p> <div data-bbox="406 959 992 1166" data-label="Image"> </div> <p><b>NOTE:</b> This function is only available when <b>Overclock</b> is enabled.</p> <p><b>NOTE:</b> Overclocking may cause screen flickering. To reduce such effects, try to setting a lower refresh rate.</p>
<b>Reset Display</b>	Select this option to restore default display settings.





## Audio

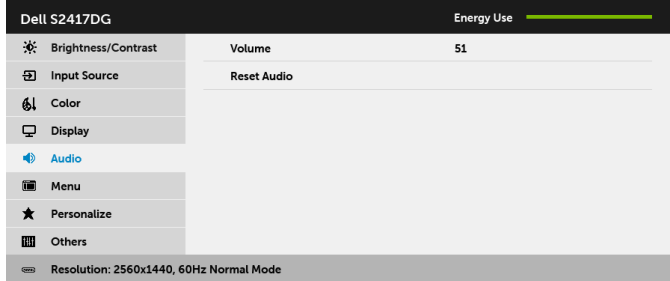

### Volume

Allows you to set the volume level of headphone output.

Use or to adjust the volume level from 0 to 100.


### Reset Audio

Select this option to restore default audio settings.



## Menu

Select this option to adjust the settings of the OSD, such as, the languages of the OSD, the amount of time the menu remains on screen, and so on.

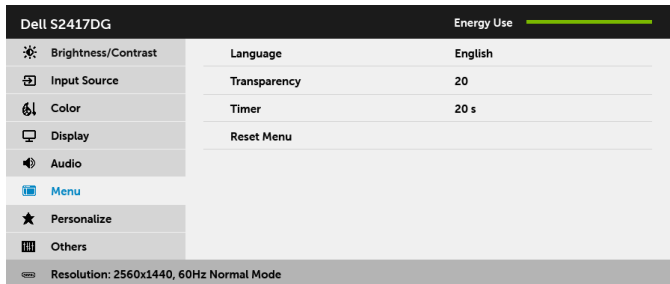

### Language

**Language** options set the OSD display to one of the eight languages (English, Spanish, French, German, Brazilian Portuguese, Russian, Simplified Chinese, or Japanese).

### Transparency

Select this option to change the menu transparency by pressing the and buttons (min. 0 / max. 100).

### Timer

Sets the length of time the OSD will remain active after the last time you pressed a button.

Use or to adjust the slider in 1 second increments, from 5 to 60 seconds.


### Reset Menu

Reset all OSD settings to the factory preset values.



## Personalize


Users can choose a feature from **Preset Modes**, **Brightness/Contrast**, **Input Source**, or **Volume** and set it as a shortcut key.

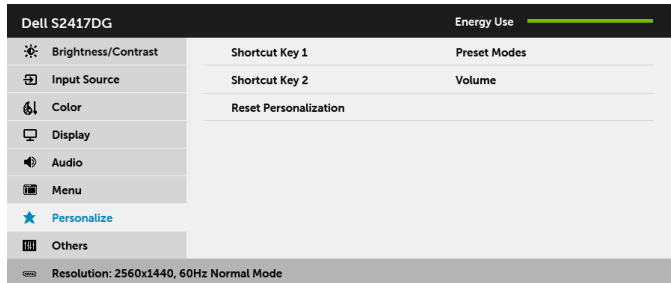

**NOTE:** When you are under 3D mode or ULMB mode, **Preset Modes** may not be set as a shortcut key.




## Others

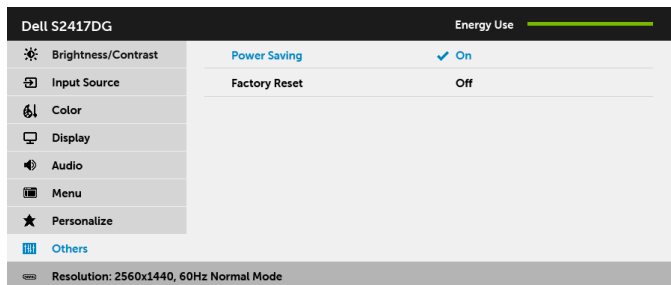

### Power Saving

The default setting is **On**, letting the monitor go to sleep as the system sleeps. Selecting **Off** may prevent the monitor from going into deep sleep and being unable to wake up.


**NOTE:** Pressing any button (except the  button) on the front panel of the monitor may also wake up the monitor after it goes into deep sleep.

### Factory Reset

Reset all settings to the factory preset values.

## OSD Warning Message

When the monitor enters the **Power Saving** mode, the following message appears:

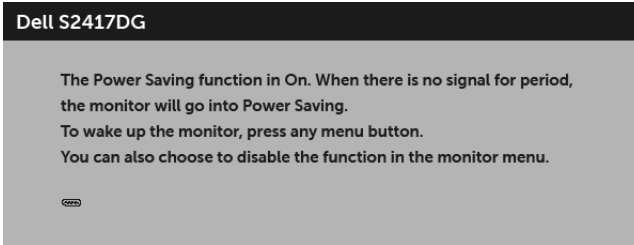

See [Troubleshooting](#) for more information.

## Setting the Maximum Resolution

To set the maximum resolution for the monitor:

In Windows<sup>®</sup> 7, Windows<sup>®</sup> 8, and Windows<sup>®</sup> 8.1:

- 1 For Windows<sup>®</sup> 8 and Windows<sup>®</sup> 8.1 only, select the Desktop tile to switch to classic desktop.
- 2 Right-click on the desktop and click **Screen Resolution**.
- 3 Click the Dropdown list of the Screen Resolution and select **2560 x 1440**.
- 4 Click **OK**.

In Windows<sup>®</sup> 10:

- 1 Right-click on the desktop and click **Display settings**.
- 2 Click **Advanced display settings**.
- 3 Click the dropdown list of **Resolution** and select **2560 x 1440**.
- 4 Click **Apply**.

If you do not see 2560 x 1440 as an option, you may need to update your graphics driver. Depending on your computer, complete one of the following procedures:

If you have a Dell desktop or portable computer:

- Go to <http://www.dell.com/support>, enter your service tag, and download the latest driver for your graphics card.

If you are using a non-Dell computer (portable or desktop):


- Go to the support site for your computer and download the latest graphic drivers.
- Go to your graphics card website and download the latest graphic drivers.

# Using the Tilt, Swivel, and Vertical Extension

**NOTE:** This is applicable for a monitor with a stand. When any other stand is bought, please refer to the respective stand setup guide for set up instructions.

## Tilt, Swivel

With the stand attached to the monitor, you can tilt and swivel the monitor for the most comfortable viewing angle.

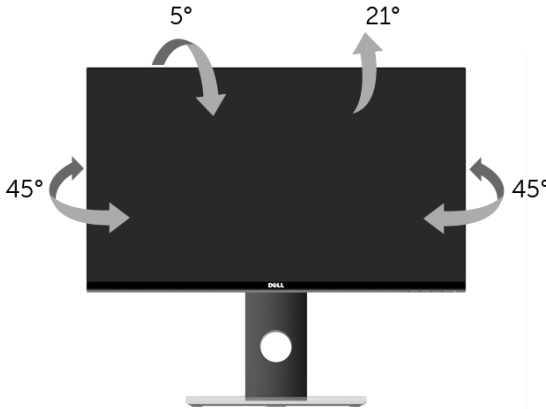

**NOTE:** The stand is detached when the monitor is shipped from the factory.


## Vertical Extension

**NOTE:** The stand extends vertically up to 130 mm. The figure below illustrates how to extend the stand vertically.




# Rotating the Monitor


Before you rotate the monitor, your monitor should be fully vertically extended ([Vertical Extension](#)) and fully tilted up to avoid hitting the bottom edge of the monitor.

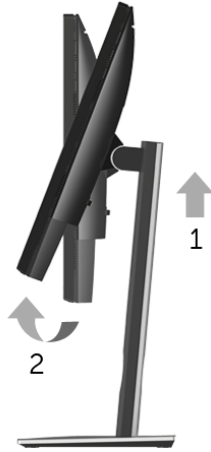


*Pivot clockwise*

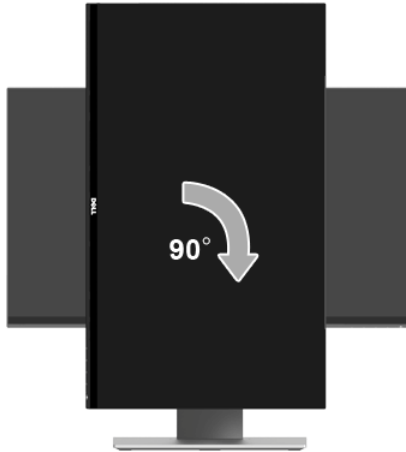

## Pivot counterclockwise

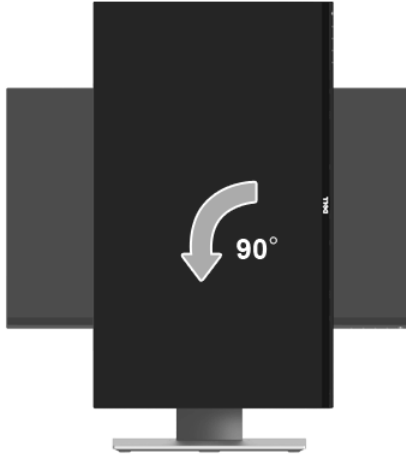


 **NOTE:** To use the Display Rotation function (Landscape versus Portrait view) with your Dell computer, you require an updated graphics driver that is not included with this monitor. To download the graphics driver, go to [www.dell.com/support](http://www.dell.com/support) and see the **Download** section for **Video Drivers** for latest driver updates.

 **NOTE:** When in the *Portrait View Mode*, you may experience performance degradation in graphic-intensive applications (3D Gaming and etc.).


## Adjusting the Rotation Display Settings of Your System

After you have rotated your monitor, you need to complete the procedure below to adjust the Rotation Display Settings of your system.

 **NOTE:** If you are using the monitor with a non-Dell computer, you need to go the graphics driver website or your computer manufacturer website for information on rotating the 'contents' on your display.

To adjust the Rotation Display Settings:

- 1 Right-click on the desktop and click **Properties**.
- 2 Select the **Settings** tab and click **Advanced**.
- 3 If you have an ATI graphics card, select the **Rotation** tab and set the preferred rotation.
- 4 If you have an nVidia graphics card, click the **nVidia** tab, in the left-hand column select **NVRotate**, and then select the preferred rotation.
- 5 If you have an Intel® graphics card, select the **Intel** graphics tab, click **Graphic Properties**, select the **Rotation** tab, and then set the preferred rotation.

 **NOTE:** If you do not see the rotation option or it is not working correctly, go to [www.dell.com/support](http://www.dell.com/support) and download the latest driver for your graphics card.

# Troubleshooting

---



**WARNING:** Before you begin any of the procedures in this section, follow the [Safety Instructions](#).


## Self-Test

Your monitor provides a self-test feature that allows you to check whether your monitor is functioning properly. If your monitor and computer are properly connected but the monitor screen remains dark, run the monitor self-test by performing the following steps:

- 1 Turn off both your computer and the monitor.
- 2 Unplug the video cable from the back of the computer. To ensure proper Self-Test operation, remove all digital cables from the back of computer.
- 3 Turn on the monitor.



**NOTE:** A dialog box should appear on-screen (against a black background), if the monitor cannot sense a video signal and is working correctly. While in self-test mode, the power LED blinks white.

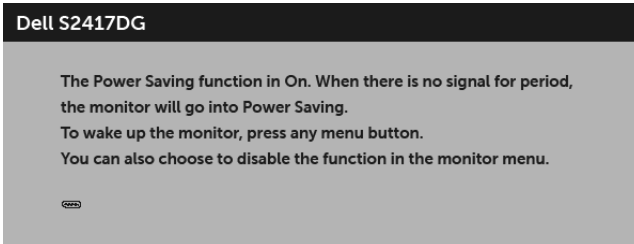

**NOTE:** This box also appears during normal system operation, if the video cable becomes disconnected or damaged.

- 4 Turn Off your monitor and reconnect the video cable; then turn On both your computer and the monitor.


If your monitor screen remains blank after you use the previous procedure, check your video controller and computer, because your monitor is functioning properly.

# Built-in Diagnostics

Your monitor has a built-in diagnostic tool that helps you determine if the screen abnormality you are experiencing is an inherent problem with your monitor, or with your computer and video card.



**NOTE:** You can run the built-in diagnostics only when the video cable is unplugged and the monitor is in *self-test mode*.

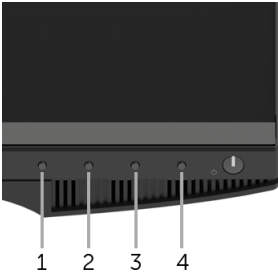

To run the built-in diagnostics:

- 1 Ensure that the screen is clean (no dust particles on the surface of the screen).
- 2 Unplug the video cable(s) from the back of the computer or monitor. The monitor then goes into the self-test mode.
- 3 Press and hold **Button 1** for 5 seconds. A gray screen appears.
- 4 Carefully inspect the screen for abnormalities.
- 5 Press **Button 1** again. The color of the screen changes to red.
- 6 Inspect the display for any abnormalities.
- 7 Repeat steps 5 and 6 to inspect the display in green, blue, black, and white screens.

The test is complete when the white screen appears. To exit, press **Button 1** again.

If you do not detect any screen abnormalities upon using the built-in diagnostic tool, the monitor is functioning properly. Check the video card and computer.



# Common Problems

The following table contains general information about common monitor problems you might encounter and the possible solutions:

Common Symptoms	What You Experience	Possible Solutions
No Video/Power LED off	No picture	<ul style="list-style-type: none"><li>• Ensure that the video cable connecting the monitor and the computer is properly connected and secure.</li><li>• Verify that the power outlet is functioning properly using any other electrical equipment.</li><li>• Ensure that the power button is depressed fully.</li><li>• Ensure that the correct input source is selected in the <a href="#">Input Source</a> menu.</li></ul>
No Video/Power LED on	No picture or no brightness	<ul style="list-style-type: none"><li>• Increase brightness &amp; contrast controls via OSD.</li><li>• Perform monitor self-test feature check.</li><li>• Check for bent or broken pins in the video cable connector.</li><li>• Run the built-in diagnostics.</li><li>• Ensure that the correct input source is selected in the <a href="#">Input Source</a> menu.</li></ul>
Poor Focus	Picture is fuzzy, blurry, or ghosting	<ul style="list-style-type: none"><li>• Eliminate video extension cables.</li><li>• Reset the monitor to factory settings.</li><li>• Change the video resolution to the correct aspect ratio.</li></ul>
Shaky/Jittery Video	Wavy picture or fine movement	<ul style="list-style-type: none"><li>• Reset the monitor to factory settings.</li><li>• Check environmental factors.</li><li>• Relocate the monitor and test in another room.</li></ul>
Missing Pixels	LCD screen has spots	<ul style="list-style-type: none"><li>• Cycle power On-Off.</li><li>• Pixel that is permanently Off is a natural defect that can occur in LCD technology.</li><li>• For more information on Dell Monitor Quality and Pixel Policy, see Dell Support site at: <a href="http://www.dell.com/support/monitors">http://www.dell.com/support/monitors</a>.</li></ul>
Stuck-on Pixels	LCD screen has bright spots	<ul style="list-style-type: none"><li>• Cycle power On-Off.</li><li>• Pixel that is permanently off is a natural defect that can occur in LCD technology.</li><li>• For more information on Dell Monitor Quality and Pixel Policy, see Dell Support site at: <a href="http://www.dell.com/support/monitors">http://www.dell.com/support/monitors</a>.</li></ul>
Brightness Problems	Picture too dim or too bright	<ul style="list-style-type: none"><li>• Reset the monitor to factory settings.</li><li>• Adjust brightness &amp; contrast controls via OSD.</li></ul>
Geometric Distortion	Screen not centered correctly	<ul style="list-style-type: none"><li>• Reset the monitor to factory settings.</li></ul>

Horizontal/ Vertical Lines	Screen has one or more lines	<ul style="list-style-type: none"> <li>• Reset the monitor to factory settings.</li> <li>• Perform monitor self-test feature check and determine if these lines are also in self-test mode.</li> <li>• Check for bent or broken pins in the video cable connector.</li> <li>• Run the built-in diagnostics.</li> </ul>
Synchronization Problems	Screen is scrambled or appears torn	<ul style="list-style-type: none"> <li>• Reset the monitor to factory settings.</li> <li>• Perform monitor self-test feature check to determine if the scrambled screen appears in self-test mode.</li> <li>• Check for bent or broken pins in the video cable connector.</li> <li>• Restart the computer in the <i>safe mode</i>.</li> </ul>
Safety Related Issues	Visible signs of smoke or sparks	<ul style="list-style-type: none"> <li>• Do not perform any troubleshooting steps.</li> <li>• Contact Dell immediately.</li> </ul>
Intermittent Problems	Monitor malfunctions on & off	<ul style="list-style-type: none"> <li>• Ensure that the video cable connecting the monitor to the computer is connected properly and is secure.</li> <li>• Reset the monitor to factory settings.</li> <li>• Perform monitor self-test feature check to determine if the intermittent problem occurs in self-test mode.</li> </ul>
Missing Color	Picture missing color	<ul style="list-style-type: none"> <li>• Perform monitor self-test feature check.</li> <li>• Ensure that the video cable connecting the monitor to the computer is connected properly and is secure.</li> <li>• Check for bent or broken pins in the video cable connector.</li> </ul>
Wrong Color	Picture color not good	<ul style="list-style-type: none"> <li>• Change the settings of the <b>Preset Modes</b> in the <b>Color</b> menu OSD depending on the application.</li> <li>• Adjust R/G/B value under <b>Custom Color</b> in <b>Color</b> menu OSD.</li> <li>• Run the built-in diagnostics.</li> </ul>
Image retention from a static image left on the monitor for a long period of time	Faint shadow from the static image displayed appears on the screen	<ul style="list-style-type: none"> <li>• Use the Power Management feature to turn off the monitor at all times when not in use (for more information, see <a href="#">Power Management Modes</a>).</li> <li>• Alternatively, use a dynamically changing screensaver.</li> </ul>

# Product Specific Problems

Specific Symptoms	What You Experience	Possible Solutions
Screen image is too small	Image is centered on screen, but does not fill entire viewing area	<ul style="list-style-type: none"><li>• Reset the monitor to factory settings.</li></ul>
Cannot adjust the monitor with the buttons on the front panel	OSD does not appear on the screen	<ul style="list-style-type: none"><li>• Turn Off the monitor, unplug the power cord, plug it back, and then turn On the monitor.</li></ul>
No Input Signal when user controls are pressed	No picture, the LED light is white	<ul style="list-style-type: none"><li>• Check the signal source. Ensure the computer is not in the power saving mode by moving the mouse or pressing any key on the keyboard.</li><li>• Check whether the signal cable is plugged in properly. Re-plug the signal cable if necessary.</li><li>• Reset the computer or video player.</li></ul>
The picture does not fill the entire screen	The picture cannot fill the height or width of the screen	<ul style="list-style-type: none"><li>• Due to different video formats (aspect ratio) of DVDs, the monitor may display in full screen.</li><li>• Run the built-in diagnostics.</li></ul>


# Universal Serial Bus (USB) Specific Problems

Specific Symptoms	What You Experience	Possible Solutions
USB interface is not working	USB peripherals are not working	<ul style="list-style-type: none"><li>• Check that your monitor is turned On.</li><li>• Reconnect the upstream cable to your computer.</li><li>• Reconnect the USB peripherals (downstream connector).</li><li>• Switch Off and then turn On the monitor again.</li><li>• Reboot the computer.</li><li>• Some USB devices like external portable HDD require higher electric current; connect the device directly to the computer system.</li></ul>
High Speed USB 3.0 interface is slow	High Speed USB 3.0 peripherals working slowly or not working at all	<ul style="list-style-type: none"><li>• Check that your computer is USB 3.0-capable.</li><li>• Some computers have USB 3.0, USB 2.0, and USB 1.1 ports. Ensure that the correct USB port is used.</li><li>• Reconnect the upstream cable to your computer.</li><li>• Reconnect the USB peripherals (downstream connector).</li><li>• Reboot the computer.</li></ul>
Wireless USB peripherals stop working when a USB 3.0 device is plugged in	Wireless USB peripherals responding slowly or only working as the distance between itself and its receiver decreases	<ul style="list-style-type: none"><li>• Increase the distance between the USB 3.0 peripherals and the wireless USB receiver.</li><li>• Position your wireless USB receiver as close as possible to the wireless USB peripherals.</li><li>• Use a USB-extender cable to position the wireless USB receiver as far away as possible from the USB 3.0 port.</li></ul>

# Appendix

---

## WARNING: Safety Instructions

 **WARNING: Use of controls, adjustments, or procedures other than those specified in this documentation may result in exposure to shock, electrical hazards, and/or mechanical hazards.**


For information on safety instructions, see the Safety, Environmental, and Regulatory Information (SERI).

## FCC Notices (U.S. Only) and Other Regulatory Information

For FCC notices and other regulatory information, see the regulatory compliance website located at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

## Contact Dell

For customers in the United States, call 800-WWW-DELL (800-999-3355).

 **NOTE:** If you do not have an active Internet connection, you can find contact information on your purchase invoice, packing slip, bill, or Dell product catalog.

**Dell provides several online and telephone-based support and service options. Availability varies by country and product, and some services may not be available in your area.**

- Online technical assistance — [www.dell.com/support/monitors](http://www.dell.com/support/monitors)
- Contacting Dell — [www.dell.com/contactdell](http://www.dell.com/contactdell)