

# Job Control Profile

1  
2  
3  
4  
5  
6  
7  
8  
9  
10  
11  
12  
13  
14  
15  
16  
17  
18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30

**Document Number: DCIM1034**  
**Document Type: Specification**  
**Document Status: Published**  
**Document Language: E**  
**Date: 2012-12-30**

**Version: 1.3.0**



31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65

THIS PROFILE IS FOR INFORMATIONAL PURPOSES ONLY, AND MAY CONTAIN TYPOGRAPHICAL ERRORS AND TECHNICAL INACCURACIES. THE CONTENT IS PROVIDED AS IS, WITHOUT EXPRESS OR IMPLIED WARRANTIES OF ANY KIND. ABSENT A SEPARATE AGREEMENT BETWEEN YOU AND DELL™ WITH REGARD TO FEEDBACK TO DELL ON THIS PROFILE SPECIFICATION, YOU AGREE ANY FEEDBACK YOU PROVIDE TO DELL REGARDING THIS PROFILE SPECIFICATION WILL BE OWNED AND CAN BE FREELY USED BY DELL.

© 2010 - 2012 Dell Inc. All rights reserved. Reproduction in any manner whatsoever without the express written permission of Dell, Inc. is strictly forbidden. For more information, contact Dell.

*Dell* and the *DELL* logo are trademarks of Dell Inc. *Microsoft* and *WinRM* are either trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries. Other trademarks and trade names may be used in this document to refer to either the entities claiming the marks and names or their products. Dell disclaims proprietary interest in the marks and names of others.

# CONTENTS

66			
67	1	Scope .....	5
68	2	Normative References.....	5
69	3	Terms and Definitions .....	5
70	4	Symbols and Abbreviated Terms .....	7
71	5	Synopsis .....	7
72	6	Description .....	8
73	6.1	Job Types .....	9
74	6.2	Creating Jobs .....	9
75	6.3	Grouping Jobs.....	9
76	6.4	Scheduling Jobs.....	10
77	6.5	Canceling Jobs .....	10
78	6.6	Auto-Deleting Completed Jobs .....	10
79	6.7	Maintenance Windows.....	10
80	6.8	Job Status Lifecycle .....	10
81	6.9	Completed Jobs Auto-deletion.....	14
82	7	Implementation Requirements .....	15
83	7.1	DCIM_JobService .....	15
84	7.2	DCIM_LifecycleJob .....	16
85	7.3	DCIM_LCRegisteredProfile .....	22
86	8	Methods.....	23
87	8.1	DCIM_JobService.SetupJobQueue() .....	26
88	8.2	DCIM_JobService.DeleteJobQueue() .....	28
89	8.3	DCIM_JobService.SetDeleteOnCompletionTimeout () .....	29
90	8.4	DCIM_JobService.CreateRebootJob () .....	30
91	8.5	DCIM_JobService.CreateJob .....	31
92	9	Use Cases .....	33
93	10	CIM Elements .....	33
94	11	Privilege and License Requirement .....	33
95			

96 **Figures**

97 Figure 1 – Job Control Profile: Class Diagram..... 9  
98 Figure 2 – Job Workflow for RAID Attributes ..... 11  
99 Figure 3 – Job Workflow for IDRAC Card Attributes..... 12  
100 Figure 4 – Configuration Job Timing Diagram ..... 13  
101 Figure 5 – Update Job Workflow..... 14  
102

103 **Tables**

104 Table 1 – Related Profiles..... 8  
105 Table 2 – CIM Elements: Job Control Profile..... 15  
106 Table 3 – DCIM\_JobService – Operations ..... 16  
107 Table 4 – Class: DCIM\_JobService ..... 16  
108 Table 5 – DCIM\_LifecycleJob - Operations ..... 16  
109 Table 6 – Class: DCIM\_LifecycleJob ..... 18  
110 Table 7 – Job Types..... 20  
111 Table 8 – JobStatus Property Values ..... 21  
112 Table 9 – DCIM\_LCRegisteredProfile - Operations..... 23  
113 Table 10 – Class: DCIM\_LCRegisteredProfile..... 23  
114 Table 11 – DCIM\_JobService.SetupJobQueue() Method: Return Code Values..... 27  
115 Table 12 – DCIM\_JobService.SetupJobQueue() Method: Parameters..... 27  
116 Table 13 – DCIM\_JobService.SetupJobQueue() Method: Standard Messages ..... 27  
117 Table 14 – DCIM\_JobService.DeleteJobQueue() Method: Return Code Values..... 28  
118 Table 15 – DCIM\_JobService.DeleteJobQueue() Method: Parameters..... 28  
119 Table 16 – DCIM\_JobService.DeleteJobQueue() Method: Standard Messages ..... 29  
120 Table 17 – DCIM\_JobService.CreateRebootJob() Method: Return Code Values..... 29  
121 Table 18 – DCIM\_JobService.CreateRebootJob() Method: Parameters ..... 29  
122 Table 19 – DCIM\_JobService.CreateRebootJob() Method: Standard Messages ..... 30  
123 Table 20 – DCIM\_JobService.CreateRebootJob() Method: Return Code Values..... 30  
124 Table 21 – DCIM\_JobService.CreateRebootJob() Method: Parameters ..... 30  
125 Table 22 – DCIM\_JobService.CreateRebootJob() Method: Standard Messages ..... 31  
126 Table 23 – DCIM\_JobService.CreateJob() Method: Return Code Values ..... 32  
127 Table 24 – DCIM\_JobService.CreateJob() Method: Parameters ..... 32  
128 Table 25 – DCIM\_JobService.CreateRebootJob() Method: Standard Messages ..... 32  
129 Table 26 – Privilege and License Requirements ..... 33

130

131

# Job Control Profile

## 132 1 Scope

133 The Dell Job Control Profile extends the management capabilities of referencing profiles by adding the  
134 capability to create, schedule, track, and manage jobs that represent platform management operations.

## 135 2 Normative References

136 Refer to the following documents for more information.

137 **NOTE:** For dated references, only the edition cited applies. For undated references, the latest edition of  
138 the referenced document (including any amendments) applies.

- 139 • DMTF DSP1033, *Profile Registration Profile 1.0.0*
- 140 • DMTF DSP0200, *CIM Operations over HTTP 1.2.0*
- 141 • DMTF DSP0004, *CIM Infrastructure Specification 2.3.0*
- 142 • DMTF DSP1000, *Management Profile Specification Template*
- 143 • DMTF DSP1001, *Management Profile Specification Usage Guide*
- 144 • DMTF DSP0226, *Web Services for Management (WS-Management) Specification 1.1.0*
- 145 • DMTF DSP0227, *WS-Management CIM Binding Specification 1.0.0*
- 146 • *Dell Lifecycle Controller Best Practices Guide 1.0*,  
147 [http://en.community.dell.com/techcenter/extras/m/white\\_papers/20066173.aspx](http://en.community.dell.com/techcenter/extras/m/white_papers/20066173.aspx)
- 148 • *Dell WSMAN Licenses and Privileges 1.0*
- 149 • ISO/IEC Directives, Part 2, *Rules for the structure and drafting of International Standards*,  
150 <http://isotc.iso.org/livelink/livelink.exe?func=ll&objId=4230456&objAction=browse&sort=subtype>
- 151 • Unified Modeling Language (UML) from the Open Management Group (OMG),  
152 <http://www.uml.org>
- 153 • Dell Tech Center MOF Library: <http://www.delltechcenter.com/page/DCIM.Library.MOF>
- 154 • Related Managed Object Format (MOF) files:
  - 155 ○ DCIM\_JobService.mof
  - 156 ○ DCIM\_LifeCycleJob.mof
  - 157 ○ DCIM\_LCElementConformsToProfile.mof
  - 158 ○ DCIM\_LCRegisteredProfile.mof

## 159 3 Terms and Definitions

160 For the purposes of this document, the following terms and definitions apply.

- 161 **3.1**  
162 **Conditional** – Indicates requirements to be followed strictly in order to conform to the document when the  
163 specified conditions are met.
- 164 **3.2**  
165 **Mandatory** – Indicates requirements to be followed strictly in order to conform to the document and from  
166 which no deviation is permitted.
- 167 **3.3**  
168 **May** – Indicates a course of action permissible within the limits of the document.
- 169 **3.4**  
170 **Optional** – Indicates a course of action permissible within the limits of the document.
- 171 **3.5**  
172 **can** – Used for statements of possibility and capability, whether material, physical, or causal.
- 173 **3.6**  
174 **cannot** – Used for statements of possibility and capability, whether material, physical, or causal.
- 175 **3.7**  
176 **need not** – Indicates a course of action permissible within the limits of the document.
- 177 **3.8**  
178 **referencing profile** – Indicates a profile that owns the definition of this class and can include a reference  
179 to this profile in its “Related Profiles” table.
- 180 **3.9**  
181 **shall** – Indicates requirements to be followed strictly in order to conform to the document and from which  
182 no deviation is permitted.

183 **3.10**  
184 **shall not** – Indicates requirements to be followed strictly in order to conform to the document and from  
185 which no deviation is permitted.

186 **3.11**  
187 **should** – Indicates that among several possibilities, one is recommended as particularly suitable, without  
188 mentioning or excluding others, or that a certain course of action is preferred but not necessarily required.

189 **3.12**  
190 **should not** – Indicates that a certain possibility or course of action is deprecated but not prohibited

191 **3.13**  
192 **FQDD** – Fully Qualified Device Descriptor is used to identify a particular component in a system.

193 **3.14**  
194 **Interop Namespace** – Interop Namespace is where instrumentation instantiates classes to advertise its  
195 capabilities for client discovery.

196 **3.15**  
197 **Implementation Namespace** – Implementation Namespace is where instrumentation instantiates  
198 classes relevant to executing core management tasks.

199 **3.16**  
200 **ENUMERATE** – Refers to WS-MAN `ENUMERATE` operation as described in Section 8.2 of  
201 DSP0226\_V1.1 and Section 9.1 of DSP0227\_V1.0

202 **3.17**  
203 **GET** – Refers to WS-MAN `GET` operation as defined in Section 7.3 of DSP00226\_V1.1 and Section 7.1  
204 of DSP0227\_V1.0

## 205 **4 Symbols and Abbreviated Terms**

206 **4.1**  
207 **CIM** – Common Information Model

208 **4.2**  
209 **iDRAC** – Integrated Dell Remote Access Controller is a management controller for blades and rack and  
210 tower servers

211 **4.3**  
212 **CMC** – Chassis Management Controller is a management controller for the modular chassis

213 **4.4**  
214 **iSCSI** – Internet Small Computer System Interface, an Internet Protocol (IP)-based storage networking  
215 standard for linking data storage facilities.

## 216 **5 Synopsis**

217 **Profile Name:** Job Control  
218 **Version:** 1.2.0  
219 **Organization:** Dell

220 **CIM Schema Version:** 2.26 Experimental

221 **Central Class:** DCIM\_JobService

222 **Scoping Class:** CIM\_ComputerSystem

223 The Job Control Profile extends the management capability of the referencing profiles by adding the  
224 capability to create, schedule, track, and otherwise manage system management tasks, hereafter  
225 referred to as “jobs”. In this profile, a job is represented by an instance of a Dell subclass of  
226 CIM\_ConcreteJob, DCIM\_LifecycleJob. DCIM\_JobService shall be the Central Class.  
227 CIM\_ComputerSystem shall be the Scoping Class. Table 1 identifies profiles that are related to this  
228 profile.

229

**Table 1 – Related Profiles**


<b>Profile Name</b>	<b>Organization</b>	<b>Version</b>	<b>Relationship</b>
Profile Registration	DCIM	1.0	Reference

230 **6 Description**

231 The Job Control Profile describes the job control service, the job types, their behavior, and state  
232 transitions and results representation. The profile also describes the relationship of the job service to the  
233 profile version information.

234 Figure 1 represents the class schema for the Job Control Profile. The job service in a managed system is  
235 represented by the instance of DCIM\_JobService class. The jobs names, status, and error messages are  
236 represented by the DCIM\_LifeCycleJob class.

237 The Job Control Profile information is represented with the instance of DCIM\_LCRegisteredProfile.

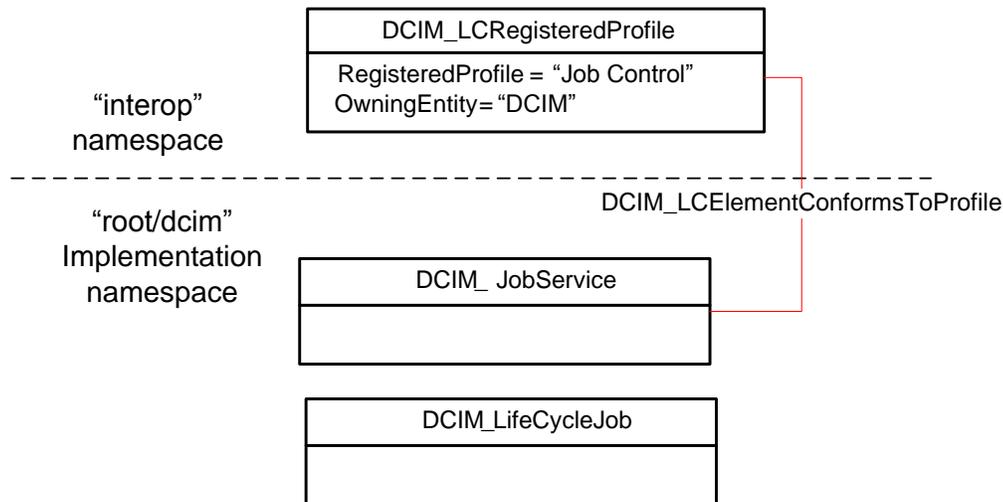

238

239

**Figure 1 – Job Control Profile: Class Diagram**

## 240 **6.1 Job Types**

241 Different kinds of system management tasks, such as firmware updates, reboots, configurations, and so  
 242 on often take a while to complete. In order to provide a means of performing and tracking tasks and task  
 243 results, individual tasks are defined as jobs that can be run immediately or at a scheduled time.

244 Tasks of different types typically have state sequences that are unique to the task performed and the  
 245 state is represented as the job status. For the purposes of managing these tasks as jobs, several job  
 246 types have been identified; these include firmware download, firmware update, and reboot. Each job type  
 247 has a different sequence of states it may pass through. The job may contain one action, or there may be  
 248 a series of actions taken as part of the job execution.

249 Refer to Table 7 for a list of job types.

## 250 **6.2 Creating Jobs**

251 Platform management jobs are created as the result of invoking an extrinsic method for performing a  
 252 specific task. Jobs that are created as the result of an extrinsic method invocation are initially created  
 253 without a start time defined and require a management client script or application to subsequently set the  
 254 scheduled start time by specifying job(s) and start time in a job queue. Note that the reset of the iDRAC  
 255 itself due to a requested reset or hard reboot does not cause the created jobs to be cancelled. The  
 256 created jobs will persist and could be executed.

## 257 **6.3 Grouping Jobs**

258 One or more jobs are be grouped together in job queues to define job order, start time, and to prepare the  
 259 job grouping for execution in another environment such as Unified Extensible Firmware Interface(UEFI). If

260 the Lifecycle Controller is to perform the system reboot needed to execute update jobs, a reboot job is  
261 included in the job queue definition.

## 262 **6.4 Scheduling Jobs**

263 Jobs, such as firmware updates, that are created as a result of extrinsic method invocations are initially  
264 unscheduled. One or more job can be scheduled to start immediately or at a specified start time by  
265 setting up a job queue. Job queues are setup by calling the SetupJobQueue() method on the job service.

## 266 **6.5 Canceling Jobs**

267 Jobs may be canceled by management application. Job can be cancelled either by calling delete instance  
268 method on a job instance or through invoking DeleteJobQueue() method but note that using the  
269 "JID\_CLEARALL" parameter value in the DeleteJobQueue() method will delete all the jobs including the  
270 completed or failed ones.

271 When a pending job is cancelled, all the tasks related to the job will be deleted. If the job is already  
272 running, then the instrumentation will delete all the job's pending tasks and will attempt to undo all the  
273 job's completed tasks. If the job was already completed, cancelling the job will not undo its tasks.

## 274 **6.6 Auto-Deleting Completed Jobs**

275 Completed jobs will be deleted as a result of the auto-delete policy. Management applications may  
276 specify the threshold for activating the auto-delete policy and the time criterion for auto-deleting  
277 completed jobs. Once the auto-delete policy is activated, it will delete the jobs that have been completed  
278 for more than the specified time criterion. The DCIM\_JobService.DeleteOnCompletionTimeout property  
279 represents the time criterion for the auto-delete policy with default value of 2880 minutes that can be  
280 modified through the SetDeleteOnCompletionTimeout() method. The  
281 DCIM\_JobService.StartAutoDeleteAtThreshold represents the auto-delete policy activation threshold and  
282 has a default value of 50% of the maximum number of jobs possible in the job queue.

## 283 **6.7 Maintenance Windows**

284 A client script or application that performs platform hardware management, may define specific  
285 maintenance time slots. Time slot specification includes being able to specify a scheduled job start time  
286 and a duration interval after which, if the job has not been executed, then the job has failed.. The time slot  
287 is defined using the StartTimeInterval and Untiltime parameters on the extrinsic method.


## 288 **6.8 Job Status Lifecycle**

289 LC jobs have a specific workflow associated with their lifecycle. These workflows are provided as a  
290 sample to clarify the job lifecycle and the changes to the job status as it progresses from creation to  
291 completion. Typically, LC jobs fall within two categories configuration jobs and update jobs.

### 292 **6.8.1 Configuration Job**

293 The workflow below details the configuration job workflow for setting RAID attributes. NIC and BIOS  
294 attribute configuration follows a similar workflow with an additional terminal state, "Completed with Errors".

295 Importantly, in all the configuration job workflows, the CreateTargetedConfigJob() method can schedule  
296 both the reboot and the created job at the same time. If the CreateTargetConfigJob() method is invoked  
297 with parameter values to schedule both the reboot and the created job, then the job state transitions  
298 directly from "No Job" to the "JobStatus=Scheduled."

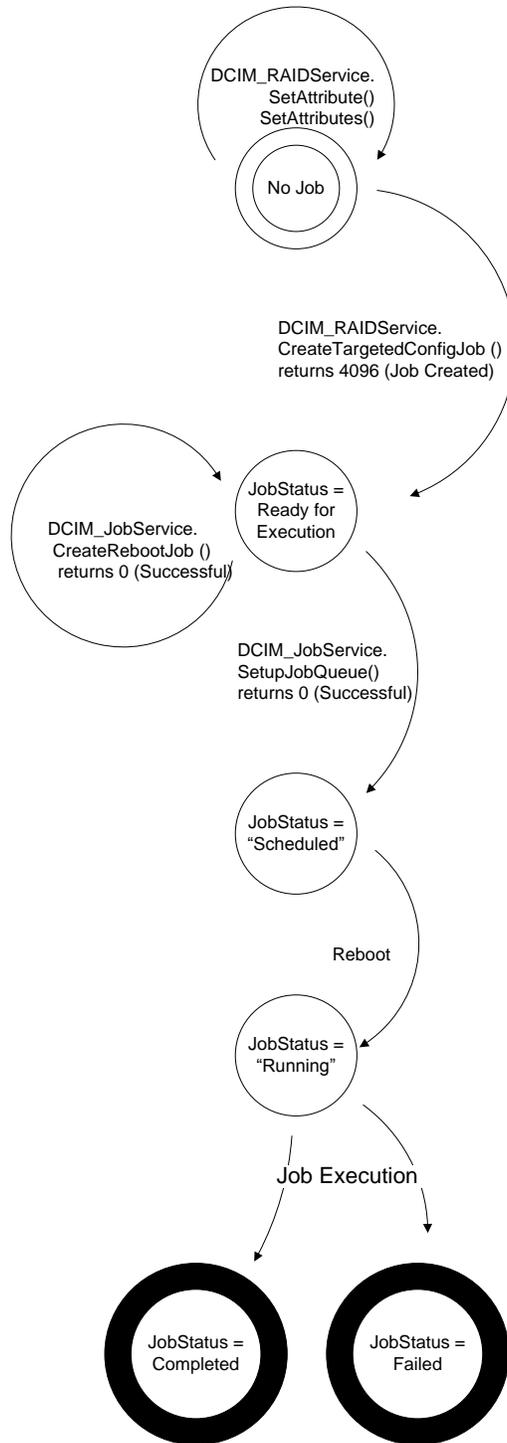


299

300

**Figure 2 – Job Workflow for RAID Attributes**

301 The workflow below details the configuration job workflow for setting IDRAC card attributes. System  
 302 attribute configuration follows a similar workflow.

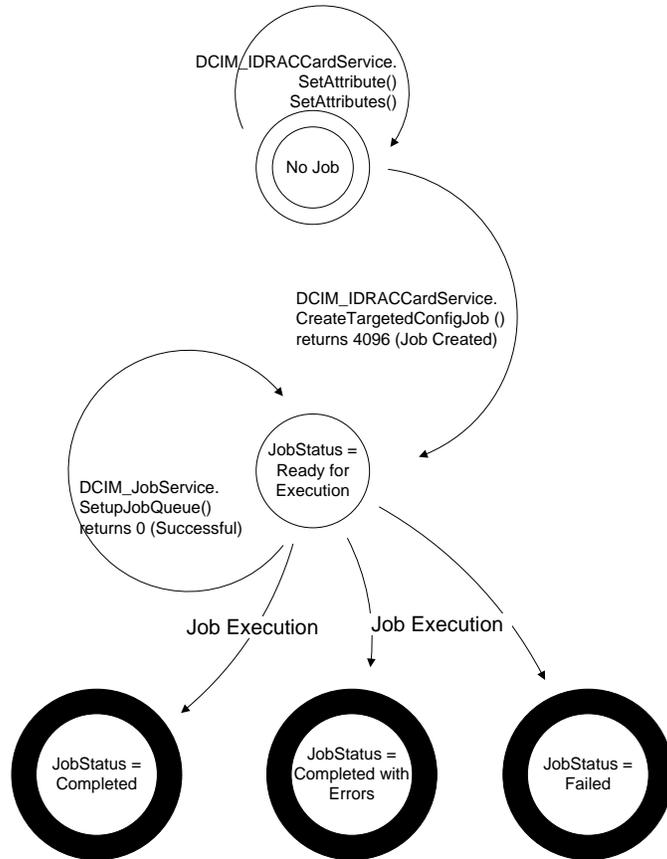

303

304

**Figure 3 – Job Workflow for IDRAC Card Attributes**

305 Figure 4 shows the timing diagram for configuration job executions. The upper diagram shows the state  
 306 transitions of a successful configuration job, while the bottom diagram shows the state transitions of the  
 307 Remote Services (Data Manager) state as affected by the job execution.

308 For 12G systems, management applications can query for the change (such as enumeration of affected  
 309 attributes) once the job is completed regardless the Remote Services (Data Manager) state.

310 **NOTE:** In 11G, the job completion does not indicate that management applications can query for the completed  
 311 job's changes but only indicates that all the pending tasks associated with the job have been completed. The Remote  
 312 Service (Data Manager) needs to reload for the LC interface to reflect new changes. Thus, the Remote Service (Data  
 313 Manager) status has to transition from "Reloading" to "Ready" to indicate that the LC interface has been updated, and  
 314 management applications have to check both the job completion as well as the Remote Service (Data Manager)  
 315 status transition.


316 **6.8.1.1 Lifecycle Log**

317 Configuration job results are also logged in the Lifecycle Log (LCL). Please refer to the Dell Record Log  
 318 Profile for in detail description on how to retrieve the LCL and its entries through the WSMAN interface.

319 **6.8.1.2 Remote Services Status**

320 The Remote Service (Data Manager) status can be queried using `DCIM_LCService.GetRSStatus()` and  
 321 `GetRemoteServicesAPIStatus()` methods (as described in the Lifecycle Controller (LC) Management  
 322 Profile). The `GetRemoteServicesAPIStatus()` method is more robust because it details not only the  
 323 Remote Service (Data Manager) status (as reflected in the `LCStatus` output parameter) but also the  
 324 system's status (as reflected in the `ServerStatus` output parameter) and overall API status (as reflected in  
 325 the `Status` output parameter).

326 **NOTE:** In 11G, management applications have to invoke `DCIM_LCService.GetRSStatus()` or  
 327 `GetRemoteServicesAPIStatus()` method (as described in the LC Management Profile) to determine that the  
 328 completed job changes have been successfully reflected in the LC instrumentation API interface.  
 329

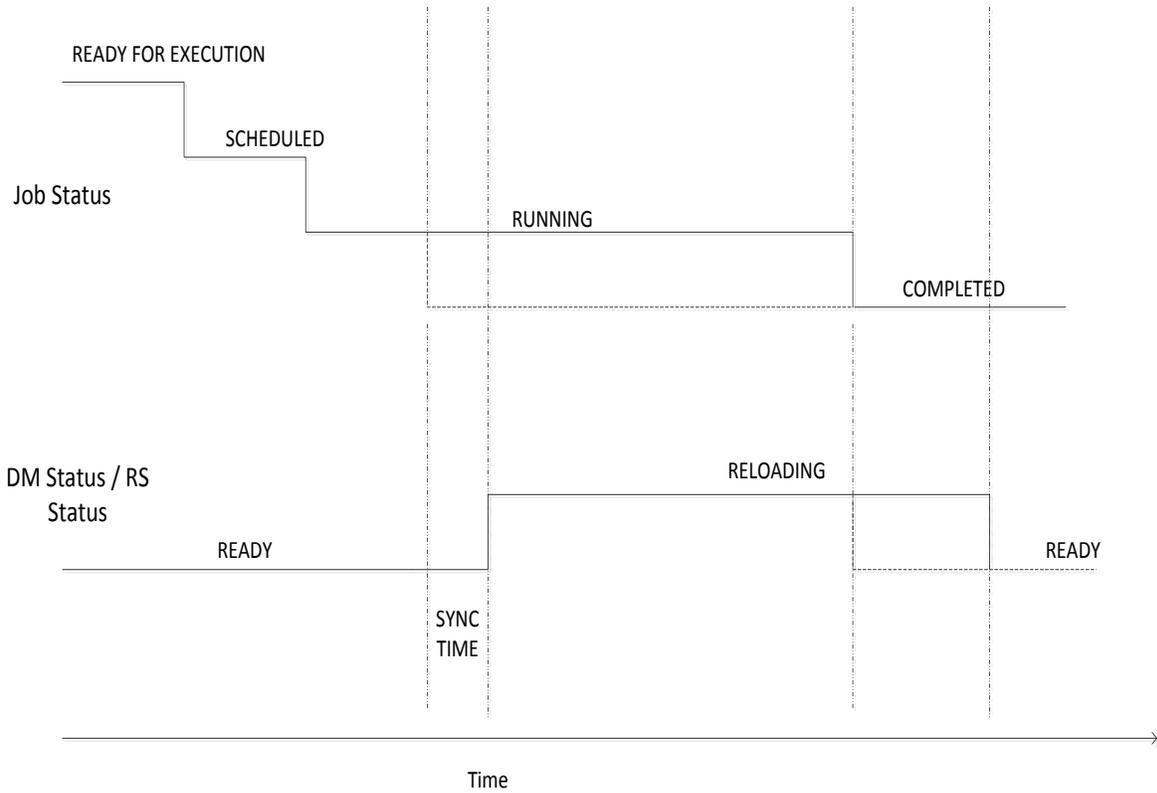


330

331

**Figure 4 – Configuration Job Timing Diagram**

332 **6.8.2 Update Job**

333 The workflow below details the update job lifecycle (`DCIM_SoftwareInstallationService.InstallFromURI()`  
 334 invocation). The direct update jobs that do not required reboot transition from “Downloading” state to a  
 335 terminal state of “Failed” or “Completed”. Update jobs that require a reboot will go from state of  
 336 “Downloading” to a state of “Downloaded” or “Failed”. Once in “Downloaded” state, the update job needs  
 337 to be scheduled using the `SetupJobQueue()` method in the LC Management Profile (similar to  
 338 configuration jobs).

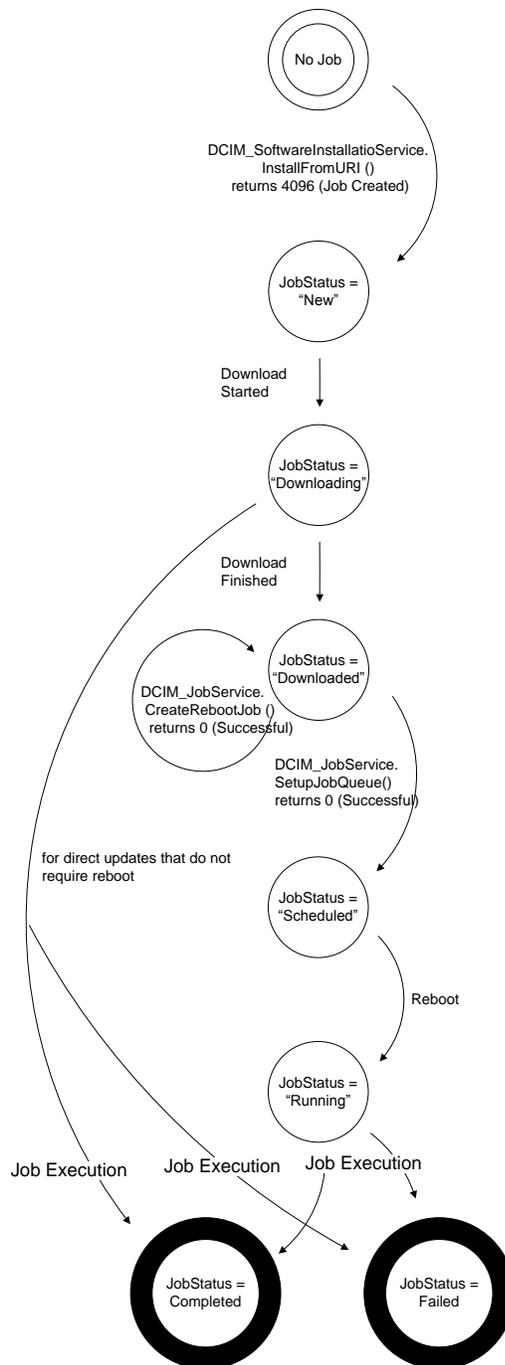

339

340

**Figure 5 – Update Job Workflow**

341 **6.9 Completed Jobs Auto-deletion**

342 Completed jobs will be deleted as a result of the auto-delete policy. Management applications may  
 343 specify the threshold for activating the auto-delete policy and the time criterion for auto-deleting  
 344 completed jobs (including failed jobs). Once the auto-delete policy is activated, it will delete the jobs that  
 345 have been completed for more than the specified time criterion. The  
 346 DCIM\_JobService.DeleteOnCompletionTimeout property represents the time criterion for the auto-delete  
 347 policy with default value of 2880 minutes that can be modified through the  
 348 SetDeleteOnCompletionTimeout() method. The DCIM\_JobService.StartAutoDeleteAtThreshold

349 represents the auto-delete policy activation threshold and has a default value of 128 jobs representing the  
 350 half of the maximum number of jobs possible in the job queue.

351

## 352 7 Implementation Requirements

353 This section describes the requirements and guidelines for implementing Dell Job Control Profile

354 **Table 2 – CIM Elements: Job Control Profile**

Element Name	Requirement	Description
<b>Classes</b>		
DCIM_JobService	Mandatory	The class shall be implemented in the <i>Implementation Namespace</i> . See section 7.1
DCIM_LifeCycleJob	Mandatory	The class shall be implemented in the <i>Implementation Namespace</i> . See section 7.2
DCIM_LCElementConformsToProfile	Mandatory	The class shall be implemented in the <i>Implementation Namespace</i> . See section 7.1 and 7.3
DCIM_LCElementConformsToProfile	Mandatory	The class shall be implemented in the <i>Interop Namespace</i> . See section 7.1 and 7.3
DCIM_LCRegisteredProfile	Mandatory	The class shall be implemented in the <i>Interop Namespace</i> . See section 7.3
<b>Indications</b>		
DCIM_LifecycleJobCreateAlertIndication	Mandatory	See section
DCIM_LifecycleJobUpdateAlertIndication	Mandatory	See section

### 355 7.1 DCIM\_JobService

356 The DCIM\_LCElementConformsToProfile association(s)' ManagedElement property shall reference the  
 357 DCIM\_JobService instance(s).

#### 358 7.1.1 Resource URIs for WinRM®

359 The class Resource URI shall be "http://schemas.dell.com/wbem/wscim/1/cim-  
 360 schema/2/DCIM\_JobService?\_\_cimnamespace=root/dcim"

361 The key properties shall be the SystemCreationClassName, CreationClassName, SystemName, and  
 362 Name.

363 The instance Resource URI for DCIM\_JobService instance shall be:  
 364 "http://schemas.dell.com/wbem/wscim/1/cim-  
 365 schema/2/DCIM\_JobService?\_\_cimnamespace=root/dcim+SystemCreationClassName=DCIM\_ComputerSyst  
 366 em+CreationClassName=DCIM\_JobService+ SystemName=Idrac+Name= JobService"

#### 367 7.1.2 Operations

368 The following table lists the operations implemented on DCIM\_JobService.

369

**Table 3 – DCIM\_JobService – Operations**

Operation Name	Requirements	Required Input
Get	Mandatory	Instance URI
Enumerate	Mandatory	Class URI
Invoke	Mandatory	Instance URI

370

371 **7.1.3 Class Properties**

372

**Table 4 – Class: DCIM\_JobService**

Properties	Type	Requirement	Additional Requirments
SystemCreationClassName	String	Mandatory	Key: Value shall be “DCIM_ComputerSystem”
SystemName	String	Mandatory	Key: Value shall be “Idrac”
CreationClassName	String	Mandatory	Key: Value shall be “DCIM_JobService”
Name	String	Mandatory	Key: Value shall be “JobService”
ElementName	String	Mandatory	Value shall be “Job Service”
CurrentNumberOfJobs	uint16	Mandatory	The property shall represent the current number of jobs in the job store.
MaximumNumberOfJobs	uint16	Mandatory	The property shall represent the maximum number of jobs that the job store supports.
DeleteOnCompletionTimeout	uint16	Mandatory	The property shall represent the timeout period in minutes for completed jobs to qualify for auto deletion. If the time taken to complete a job is more than the DeleteOnCompletionTimeout, the job shall be deleted during the auto-delete.
StartAutoDeleteAtThreshold	uint16	Mandatory	The property shall represent the percentage of the MaximumNumberOfJobs which, when reached, shall cause all jobs that have taken more time than the DeleteOnCompletionTimeout to be deleted.

373 **7.2 DCIM\_LifecycleJob**

374 **7.2.1 Resource URIs for WinRM®**

375 The class Resource URI shall be “http://schemas.dell.com/wbem/wscim/1/cim-  
376 schema/2/DCIM\_LifecycleJob?\_\_cimnamespace=root/dcim”

377 The key property shall be the InstanceID.

378 The instance Resource URI for DCIM\_LifecycleJob instance shall be:  
379 “http://schemas.dell.com/wbem/wscim/1/cim-  
380 schema/2/DCIM\_LifecycleJob?\_\_cimnamespace=root/dcim+InstanceID=<InstanceID>”

381 **7.2.2 Operations**

382 The following table details the implemented operations on DCIM\_LifecycleJob.

383

**Table 5 – DCIM\_LifecycleJob - Operations**

Operation Name	Requirements	Required Input
----------------	--------------	----------------

Get	Mandatory	Instance URI
Enumerate	Mandatory	Class URI

384 **7.2.3 Class Properties**

385 The following table lists the implemented properties for DCIM\_LifecycleJob instance representing a  
 386 system in a system. The “Requirements” column shall denote whether the property is implemented (for  
 387 requirement definitions, see section 3). The “Additional Requirements” column shall denote either  
 388 possible values for the property, or requirements on the value formulation.

389 **Table 6 – Class: DCIM\_LifecycleJob**

Properties and Methods	Type	Requirement	Additional Requirments
InstanceID	String	Mandatory	Dynamic value returned as an output parameter from the extrinsic operation that created the job.
Name	String	Mandatory	The property shall have value from the “Value” column of Table 7.
JobStatus	String	Mandatory	The property shall have value from the “Status Value” column of Table 8.
JobStartTime	String	Mandatory	The property shall represent the timestamp to start processing the job. JobStartTime shall be in the format: “yyymmddhhmmss” and the string “TIME_NOW” means immediate
JobUntilTime	String	Mandatory	The property shall represent the time interval after a job has started that it is permitted to run. If the job has not run when the time interval has passed, the job shall be canceled. Canceling a job causes the schedule start time properties to be set to NULL and the JobStatus to be set to Failed. The property value shall be in the following format: “YYYYMMDDHHMMSS”.
PercentComplete	String	Mandatory	The property shall represent the percentage of job completion.
ElapsedTimeSinceCompletion	String	Mandatory	The property shall represent the time interval in minutes since the job has been completed.
Message	String	Mandatory	If an error occurs during the processing of a job, more detailed error information is provided for subsequent inspection of the job completion status. The Message property of the job contains the error message describing the job failure detail.
MessageID	String	Mandatory	An identifier for the error message that can be used to index into Dell Lifecycle Controller Message Registry xml files. The Message Registry files are available in languages such as English, French, Spanish, German, Japanese and Chinese. They also contain more detailed descriptions of the error condition and recommended response actions.
MessageArguments	String	Mandatory	An error message may contain substitution variables that are filled in dynamically at runtime. To support localizing versions of the message, the values of the substitution variables are set in the MessageArguments array in the order they are defined in the Message Registry.

390 The management tasks requested by the management application shall be represented by instances of a  
391 subclass of the DCIM\_LifecycleJob class which is a subclass of the CIM\_ConcreteJob class. The  
392 DCIM\_LifecycleJob class is further subclassed as the DCIM\_SoftUpdateConcreteJob for BIOS, firmware,  
393 and embedded software update jobs. Software update related methods (see the Dell Software Update  
394 Profile) return references to the DCIM\_SoftUpdateConcreteJob class. Most of the system management  
395 tasks require a reboot of the system, which can be scheduled as a job or the reboot can be performed by  
396 other means after the job tasks have reached their scheduled start time.

397 To accomplish these offline platform management actions, several specific job types are defined to  
398 represent types of remote enablement actions:

- 399           • Image Update
- 400           • Image Rollback
- 401           • Reboot

#### 402 **7.2.3.1 Name**

403 The DCIM\_LifeCycleJob.Name property represents the job type and is formulated as follows:

Table 7 – Job Types

JobType	Description	Value
Update	The flashing of FW into the target device ,	Update:DCIM:InstanceID of SoftwareIdentity
Rollback	The flashing of Available FW into the device.	Rollback:DCIM:InstanceID of SoftwareIdentity
Reboot	Restart of system	<ul style="list-style-type: none"> <li>Reboot1 = "PowerCycle"</li> <li>Reboot2 = "Graceful Reboot without forced shutdown"</li> <li>Reboot3 = "Graceful Reboot with forced shutdown"</li> </ul>
vFlash	Initialize vFlash	VFlashInitialize:Media
vFlash	Create partition	VFlashCreate:Partition<n> Where n is equal to number of vFlash partition indices (1 to 16)
vFlash	Create partition using image	VFlashCreateUsingImage:Partition1<n> Where n is equal to number of vFlash partition indices (1 to 16)
vFlash	Format partition	VFlashFormat:Partition1<n> Where n is equal to number of vFlash partition indices (1 to 16)
vFlash	Attach partition	VFlashAttach:Partition1<n> Where n is equal to number of vFlash partition indices (1 to 16)
vFlash	Detach partition	VFlashDetach:Partition1<n> Where n is equal to number of vFlash partition indices (1 to 16)
vFlash	Export data from partition	VFlashExportData:Partition1<n> Where n is equal to number of vFlash partition indices (1 to 16)
LC Export	LCL log export	LC Export
HW Export	Hardware Inventory export	HW Export
Factory configuration export	Factory configuration export	FACTORY CONFIG Export
RAID configuration	Applying the pending RAID configuration	ConfigRAID:< RAID Controller FQDD> Each RAID controller has an FQDD and is part of the DCIM_ControllerView instance. (DCIM_ControllerView.FQDD) <ul style="list-style-type: none"> <li>For example, ConfigRAID:RAID.Integrated.1-1</li> <li>For example, DCIM_ControllerView.FQDD = RAID.Integrated.1-1</li> </ul>
BIOS configuration	Applying the pending BIOS configuration	ConfigBIOS: BIOS.Setup.1-1
NIC configuration	Applying the pending NIC configuration	ConfigNIC:< NIC FQDD> Each NIC has an FQDD and is part of the DCIM_NICView instance (DCIM_NICView.FQDD). <ul style="list-style-type: none"> <li>For example, DCIM_NICView.FQDD = NIC.Embedded.1-1</li> <li>For example, ConfigNIC: NIC.Embedded.1-1</li> </ul>
iDRAC Card Configuration	Applying the pending iDRAC configuration.	iDRACConfig:<FQDD> <ul style="list-style-type: none"> <li>For example, iDRACConfig: iDRAC.Embedded.1</li> </ul>

JobType	Description	Value
System Configuration	Applying the pending system configuration.	SYSConfig:<FQDD> <ul style="list-style-type: none"> <li>For example, SYSConfig: System.Embedded.1</li> </ul>

405 **7.2.3.2 JobStatus**

406 The value of DCIM\_LifeCycleJob.JobStatus represents the current state of the specific job. The following  
 407 table lists the different status values that are valid for different job types, see Table 2 for a list of job types:

408 **Table 8 – JobStatus Property Values**

Status Value	Description
<b>Job Type: Update</b>	
New	New Job has been created.
Downloading	Job is Downloading firmware image.
Downloaded	Job Downloaded the firmware image. Note this status is not applicable to the direct update jobs.
Scheduled	Job has been scheduled. Note this status is not applicable to the direct update jobs.
Running	Job is being executed. Note this status is not applicable to the direct update jobs.
Completed	Job has been completed.
Failed	Job failed.
Deleted	Job has been deleted.
<b>Job Type: Rollback</b>	
New	New Job has been created.
Scheduled	Job has been scheduled.
Running	Job is being executed.
Completed	Job has been completed.
Failed	Job has Failed.
<b>Job Type: Reboot</b>	
Pending Reboot	Reboot Pending for this job.
Reboot Completed	Reboot Job completed.
Reboot Failed	Reboot Job failed.
<b>Job Type: vFlash</b>	
New or NEW	New Job has been created.
Completed	Job has been completed.
Failed	Job failed.
<b>Job Type: LC Export, HW Export, FACTORY CONFIG Export</b>	
New	New Job has been created.
Completed	Job has been completed.
Failed	Job failed.
<b>Job Type: RAID Configuration</b>	
New	New Job has been created.
Ready For Execution	Job is ready for execution.
Scheduled	Job has been scheduled.
Running	Job is being executed.

Status Value	Description
Completed	Job has been completed.
Failed	Job failed.
<b>Job Type: NIC Configuration</b>	
New	New Job has been created.
Ready For Execution	Job is ready for execution.
Scheduled	Job has been scheduled.
Running	Job is being executed.
Completed	Job has been completed.
Completed with Errors	Job has been completed with one or more errors.
Failed	Job failed.
<b>Job Type: BIOS Configuration</b>	
New	New Job has been created.
Ready For Execution	Job is ready for execution.
Scheduled	Job has been scheduled.
Running	Job is being executed.
Completed	Job has been completed.
Completed with Errors	Job has been completed with one or more errors.
Failed	Job failed.
<b>Job Type: IDRAC Card Configuration</b>	
New	New Job has been created.
Ready For Execution	Job is ready for execution.
Completed	Job has been completed.
Completed with Errors	Job has been completed with one or more errors.
Failed	Job failed.
<b>Job Type: System Configuration</b>	
New	New Job has been created.
Ready For Execution	Job is ready for execution.
Completed	Job has been completed.
Completed with Errors	Job has been completed with one or more errors.
Failed	Job failed.

### 409 **7.3 DCIM\_LCRegisteredProfile**

410 The CIM\_RegisteredProfile class is defined by the Profile Registration Profile. The requirements denoted  
411 in this profile are in addition to those mandated by the Profile Registration Profile.

#### 412 **7.3.1 Resource URIs for WinRM®**

413 The class Resource URI shall be "http://schemas.dmtf.org/wbem/wscim/1/cim-  
414 schema/2/CIM\_RegisteredProfile?\_\_cimnamespace=root/interop"

415 The key property shall be the InstanceID property.

416 The instance Resource URI shall be: "http://schemas.dell.com/wbem/wscim/1/cim-  
417 schema/2/DCIM\_LCRegisteredProfile?\_\_cimnamespace=root/interop+InstanceID= DCIM:JobControl:1.0.0"

418 **7.3.2 Operations**

419 The following table lists the operations implemented on DCIM\_SystemView.

420 **Table 9 – DCIM\_LCRegisteredProfile - Operations**

Operation Name	Requirements	Required Input
Get	Mandatory	Instance URI
Enumerate	Mandatory	Class URI

421 **7.3.3 Class Properties**

422 The following table lists the implemented properties for DCIM\_LCRegisteredProfile instance representing  
 423 Job Control Profile implementation. The “Requirements” column shall denote whether the property is  
 424 implemented (for requirement definitions, see section 3). The “Additional Requirements” column shall  
 425 denote either possible values for the property, or requirements on the value formulation.

426 **Table 10 – Class: DCIM\_LCRegisteredProfile**

Properties	Type	Requirement	Additional Requirements
InstanceID	string	Mandatory	This property shall have a value of “DCIM:LCManagement:1.0.0”
RegisteredName	string	Mandatory	This property shall have a value of “Job Control”.
RegisteredVersion	string	Mandatory	This property shall have a value of “1.2.0”.
RegisteredOrganization	uint16	Mandatory	This property shall have a value of 1 (Other).
OtherRegisteredOrganization	string	Mandatory	This property shall match “DCIM”
AdvertiseTypes[]	uint16	Mandatory	This property array shall have values “1(Other)” and “1(Other)”
AdvertiseTypeDescriptions[]	string	Mandatory	This property array shall have values “WS-Identify” and “Interop Namespace”
ProfileRequireLicense[]	string	Mandatory	This property array shall describe the required licenses for this profile.  If no license is required for the profile, the property shall have value NULL.
ProfileRequireLicenseStatus[]	string	Mandatory	This property array shall contain the status for the corresponding license in the same element index of the ProfileRequireLicense array property. Each array element shall contain: <ul style="list-style-type: none"> <li>• “LICENSED”</li> <li>• “NOT_LICENSED”</li> </ul> If no license is required for the profile, the property shall have value NULL.

427 **7.4 DCIM\_LifecycleJobCreateAlertIndication – Alert Indication for Job Creation**

428 This class represents the alert indication for job creation. The implementation shall send an instance of  
 429 DCIM\_LifecycleJobCreateAlertIndication instance to each subscribed client, when a job has been created  
 430 and the indication matches the subscribed filter.

431 **7.4.1 General Filter Query**

432 The general indication filter query for this class shall be "SELECT \* FROM  
 433 DCIM\_LifecycleJobCreateAlertIndication." The client subscribed using the general filter query shall  
 434 receive instances of DCIM\_LifecycleJobCreateAlertIndication, when jobs are created.

435 **7.4.2 Operations**

436 The following table lists the operations implemented on DCIM\_SystemView.

437 **Table 11 – DCIM\_LCRegisteredProfile - Operations**

Operation Name	Requirements	Required Input
Subscribe	Mandatory	Filter query

438 **7.4.3 Class Properties**

439 The following table lists the implemented properties for DCIM\_LifecycleJobCreateAlertIndication instance  
 440 representing Job Control Profile implementation. The "Requirements" column shall denote whether the  
 441 property is implemented (for requirement definitions, see section 3). The "Additional Requirements"  
 442 column shall denote either possible values for the property, or requirements on the value formulation.

443 **Table 12 – Class: DCIM\_LifecycleJobCreateAlertIndication**

Properties	Type	Requirement	Additional Requirements
AlertType	uint16	Mandatory	This property shall have the value 1 (Other).
Description	string	Mandatory	This property shall have the value "New Lifecycle Controller job created"
IndicationFilterName	string	Mandatory	This property shall have the value of the subscription identifier GUID.
IndicationTime	datetime	Mandatory	This property shall be the indication creation timestamp.
JobID	string	Mandatory	This property shall have the DCIM_LifecycleJob.JobID value of the newly created job, for which this indication has been created.
JobName	string	Mandatory	This property shall have the DCIM_LifecycleJob.JobName value of the newly created job, for which this indication has been created.
JobStatus	string	Mandatory	This property shall have the DCIM_LifecycleJob.JobStatus value of the newly created job, for which this indication has been created.
JobType	uint16	Mandatory	This property shall have the DCIM_LifecycleJob.JobType value of the newly created job, for which this indication has been created.
Message	string	Mandatory	This property shall have the DCIM_LifecycleJob.Message value of the newly created job, for which this indication has been created.
MessageArguments	string[]	Mandatory	This property shall have the DCIM_LifecycleJob.MessageArguments value of the newly created job, for which this indication has been created.

Properties	Type	Requirement	Additional Requirements
MessageID	string	Mandatory	This property shall have the DCIM_LifecycleJob.MessageID value of the newly created job, for which this indication has been created.
OtherAlertType	string	Mandatory	This property shall have the value "Job Execution Alert"
PerceivedSeverity	uint16	Mandatory	This property shall have the value 2 (Informational).
ProbableCause	uint16	Mandatory	This property shall have the value 1 (Other).
ProbableCauseDescription	string	Mandatory	This property shall have the value "Job Operation"

444 **7.5 DCIM\_LifecycleJobUpdateAlertIndication – Alert Indication for Job Status**  
445 **Update**

446 This class represents the alert indication for job status update. The implementation shall send an instance  
447 of DCIM\_LifecycleJobUpdateAlertIndication instance to each subscribed client, when a job status has  
448 been updated and the indication matches the subscribed filter.

449 **7.5.1 General Filter Query**

450 The general indication filter query for this class shall be "SELECT \* FROM  
451 DCIM\_LifecycleJobUpdateAlertIndication." The client subscribed using the general filter query shall  
452 receive instances of DCIM\_LifecycleJobUpdateAlertIndication, when a job status is updated.

453 **7.5.2 Operations**

454 The following table lists the operations implemented on DCIM\_SystemView.

455 **Table 13 – DCIM\_LCRegisteredProfile - Operations**

Operation Name	Requirements	Required Input
Subscribe	Mandatory	Filter query

456 **7.5.3 Class Properties**

457 The following table lists the implemented properties for DCIM\_LifecycleJobUpdateAlertIndication instance  
458 representing Job Control Profile implementation. The "Requirements" column shall denote whether the  
459 property is implemented (for requirement definitions, see section 3). The "Additional Requirements"  
460 column shall denote either possible values for the property, or requirements on the value formulation.

461 **Table 14 – Class: DCIM\_LifecycleJobUpdateAlertIndication**

Properties	Type	Requirement	Additional Requirements
AlertType	uint16	Mandatory	This property shall have the value 1 (Other).
Description	string	Mandatory	This property shall have the value "Lifecycle Controller job status updated"
IndicationFilterName	string	Mandatory	This property shall have the value of the subscription identifier GUID.
IndicationTime	datetime	Mandatory	This property shall be the indication creation timestamp.
JobID	string	Mandatory	This property shall have the DCIM_LifecycleJob.JobID value for the job with the update, for which this indication has been created.

Properties	Type	Requirement	Additional Requirements
JobName	string	Mandatory	This property shall have the DCIM_LifecycleJob.JobName value for the job with the update, for which this indication has been created.
JobStatus	string	Mandatory	This property shall have the DCIM_LifecycleJob.JobStatus value for the job with the update, for which this indication has been created.
JobType	uint16	Mandatory	This property shall have the DCIM_LifecycleJob.JobType value for the job with the update, for which this indication has been created.
Message	string	Mandatory	This property shall have the DCIM_LifecycleJob.Message value for the job with the update, for which this indication has been created.
MessageArguments	string[]	Mandatory	This property shall have the DCIM_LifecycleJob.MessageArguments value for the job with the update, for which this indication has been created.
MessageID	string	Mandatory	This property shall have the DCIM_LifecycleJob.MessageID value for the job with the update, for which this indication has been created.
OtherAlertType	string	Mandatory	This property shall have the value "Job Execution Alert"
PerceivedSeverity	uint16	Mandatory	This property shall have the value 2 (Informational).
ProbableCause	uint16	Mandatory	This property shall have the value 1 (Other).
ProbableCauseDescription	string	Mandatory	This property shall have the value "Job Operation"

462

## 463 **8 Methods**

464 This section details the requirements for supporting intrinsic operations and extrinsic methods for the CIM  
 465 elements defined by this profile.

### 466 **8.1 DCIM\_JobService.SetupJobQueue()**

467 The SetupJobQueue() method is used for creating a job queue that shall contain one or more  
 468 DCIM\_LifecycleJobs with a specified order of execution within the queue.

469

**Table 15 – DCIM\_JobService.SetupJobQueue() Method: Return Code Values**

Value	Description
0	Request was successfully executed.
1	Method is unsupported.
2	Error occurred

470

**Table 16 – DCIM\_JobService.SetupJobQueue() Method: Parameters**

Qualifiers	Name	Type	Description/Values
IN	JobArray	string[]	Array containing the value of the InstanceID property of the instances of DCIM_LifeCycleJob that represent the set of jobs to add to the job queue. This is an ordered array that represents the sequence in which the jobs are run.
IN	StartTimeInterval	string	Start time for the job execution in format: yyymmddhhmmss. The string "TIME_NOW" means immediate.
IN	UntilTime	string	End time for the job execution in format: yyymmddhhmmss. If this parameter is not NULL, then StartTimeInterval parameter shall also be specified..
OUT	Message	string	Error Message
OUT	MessageID	string	Error Message ID- can be used to index into Dell Message registry files.
OUT	MessageArguments	string[]	Substitution variables for dynamic error messages.

471

**Table 17 – DCIM\_JobService.SetupJobQueue() Method: Standard Messages**

MessageID (OUT parameter)	Message	MessageArguments[]
JCP010	The command was successful	
JCP011	Invalid parameter value	
JCP012	Resource allocation failure	
JCP013	Required parameter not found	
JCP014	Maximum number of jobs per queue exceeded	
JCP015	The job cannot be deleted as it is currently in process	
JCP016	The scheduled time window must be at least 1 hour	
SUP011	Invalid Job ID	
SUP017	Invalid Start Time	
SUP018	Invalid Until Time	
SUP022	JobQueue Exceeds the size limit. Delete unwanted JobID(s)	
SUP023	Duplicate JobID Entries	

472 **8.2 DCIM\_JobService.DeleteJobQueue()**

473 The DeleteJobQueue() method is used for deleting one or all jobs from the JobQueue (or job store).

474 Clearing all the jobs may be accomplished using the keyword JID\_CLEARALL for the JobID. Note that  
 475 the successful execution of this method with the JID\_CLEARALL parameter value shall clear all the  
 476 pending attribute values as well.

477 When the number of jobs in the JobQueue reaches the maximum limit, jobs in the “Completed” state shall  
 478 be automatically deleted.

479 NOTE: In 11G, jobs in the “Failed” state shall not be automatically deleted and shall be manually removed one at a  
 480 time, or using the keyword JID\_CLEARALL as mentioned above.

481 **Table 18 – DCIM\_JobService.DeleteJobQueue() Method: Return Code Values**

Value	Description
0	Request was successfully executed.
1	Method is unsupported.
2	Error occurred

482

483 **Table 19 – DCIM\_JobService.DeleteJobQueue() Method: Parameters**

Qualifiers	Name	Type	Description/Values
IN	JobID	string	The InstanceID property of the instances of DCIM_LifeCycleJob that represent the job to be deleted. The value “JID_CLEARALL” for the JobID will clear all the jobs.
OUT	Message	string	Error Message
OUT	MessageID	string	Error Message ID- can be used to index into Dell Message registry files
OUT	MessageArguments	string[]	Substitution variables for dynamic error messages

484

485

**Table 20 – DCIM\_JobService.DeleteJobQueue() Method: Standard Messages**

MessageID (OUT parameter)	Message	MessageArguments[]
JCP012	Resource allocation failure	
JCP013	Required parameter not found	
JCP015	The job cannot be deleted as it is currently in process	
SUP011	Invalid Job ID	
SUP020	The specified job was deleted	

486

**487 8.3 DCIM\_JobService.SetDeleteOnCompletionTimeout ()**

488 This method will set the job store auto-delete policy. After successful execution, the jobs that have been  
 489 completed for longer than the DeleteOnCompletionTimeout parameter specifies shall be deleted when  
 490 the auto-delete threshold is reached. The auto-delete threshold is specified in the  
 491 DCIM\_JobService.StartAutoDeleteAtThreshold property and represents percentage of maximum jobs.

492

**Table 21 – DCIM\_JobService.CreateRebootJob() Method: Return Code Values**

Value	Description
0	Request was successfully executed.
1	Method is unsupported.
2	Error occurred

493

**Table 22 – DCIM\_JobService.CreateRebootJob() Method: Parameters**

Qualifiers	Name	Type	Description/Values
IN, REQ	DeleteOnCompletionTimeout	uint16	Specifies wait time for auto job deletion in minutes.
OUT	Message	string	Error Message
OUT	MessageID	string	Error Message ID- can be used to index into Dell Message registry files
OUT	MessageArguments	string[]	Substitution variables for dynamic error messages

494

495

**Table 23 – DCIM\_JobService.CreateRebootJob() Method: Standard Messages**

MessageID (OUT parameter)	Message	MessageArguments[]
JCP010	The command was successful	
JCP011	Invalid parameter value	
JCP012	Resoure allocation failure	
JCP013	Required parameter not found	
SUP022	JobQueue Exceeds the size limit. Delete unwanted JobID(s)	

496

### 497 **8.4 DCIM\_JobService.CreateRebootJob ()**

498 The CreateRebootJob() method is used for creating a reboot job.

499

**Table 24 – DCIM\_JobService.CreateRebootJob() Method: Return Code Values**

Value	Description
0	Request was successfully executed.
1	Method is unsupported.
2	Error occurred

500

**Table 25 – DCIM\_JobService.CreateRebootJob() Method: Parameters**

Qualifiers	Name	Type	Description/Values
IN	RebootJobType	uint16	Input Parameter represents the type of Reboot : <ul style="list-style-type: none"> <li>• 1 = "PowerCycle"</li> <li>• 2 = "Graceful Reboot without forced shutdown"</li> <li>• 3 = "Graceful Reboot with forced shutdown"</li> </ul>
OUT	Message	string	Error Message
OUT	MessageID	string	Error Message ID- can be used to index into Dell Message registry files
OUT	MessageArguments	string[]	Substitution variables for dynamic error messages
OUT	Job	DCIM_LifecycleJob REF	Returns the created reboot job.

501

502

**Table 26 – DCIM\_JobService.CreateRebootJob() Method: Standard Messages**

MessageID (OUT parameter)	Message	MessageArguments[]
JCP010	The command was successful	
JCP011	Invalid parameter value	
JCP012	Resource allocation failure	
JCP013	Required parameter not found	
SUP022	JobQueue Exceeds the size limit. Delete unwanted JobID(s)	

503 **8.5 DCIM\_JobService.CreateJob**

504 To create a host shutdown job specify a Jobtype of Shutdown. The JobParameterNames and  
505 JobParameterValues parameters are not specified for the Shutdown JobType. Only one shutdown job  
506 can be allowed if the status is other than completed or failed.

507

**Table 27 – DCIM\_JobService.CreateJob() Method: Return Code Values**

Value	Description
0	Request was successfully executed.
1	Method is unsupported.
2	Error occurred
3	Error Job of this type already exists. Only one job of this type can have a status of new or scheduled.

508

**Table 24 – DCIM\_JobService.CreateJob() Method: Parameters**

Qualifiers	Name	Type	Description/Values
IN	JobType	Int16	Input parameter identifies the type of job to be created.. 0 – Shutdown
IN	JobParameterNames[]	String	This parameter specifies any job type specific parameters required to create the job Ex: FQDD
IN	JobParameterValues[]	String	This parameter specifies any job type specific parameter required to create the job Ex: RAID.Integrated.1
OUT	Message	string	Error Message
OUT	MessageID	string	Error Message ID- can be used to index into Dell Message registry files
OUT	MessageArguments	string[]	Substitution variables for dynamic error messages
OUT	Job	DCIM_LifecycleJob REF	Returns the created job.

509

**Table 28 – DCIM\_JobService.CreateRebootJob() Method: Standard Messages**

MessageID (OUT parameter)	Message	MessageArguments[]
JCP010	The command was successful	
JCP011	Invalid parameter value	
JCP012	Resource allocation failure	
JCP013	Required parameter not found	
JCP029	Only one job for JobType <JobType> is allowed at a time.	Shutdown
SUP022	JobQueue Exceeds the size limit. Delete unwanted JobID(s)	

510

511

## 512 9 Use Cases

513 See *Lifecycle Controller (LC) Integration Best Practices Guide*

## 514 10 CIM Elements

515 No additional details specified.

## 516 11 Privilege and License Requirement

517 The following table describes the privilege and license requirements for the listed operations . For the  
518 detailed explanation of the privileges and licenses, refer to the Dell WSMAN Licenses and Privileges  
519 specification.

520 **Table 29 – Privilege and License Requirements**

Class and Method	Operation	User Privilege Required	License Required
DCIM_LifecycleJob	ENUMERATE, GET	Login	None.
DCIM_JobService	ENUMERATE, GET	Login	None.
DCIM_JobService.SetupJobQueue()	INVOKE	Login, Configure	LM_REMOTE_CONFIGURAT ION
DCIM_JobService.DeleteJobQueue()	INVOKE	Login, Configure	LM_REMOTE_CONFIGURAT ION
DCIM_JobService.CreateRebootJob()	INVOKE	Login	LM_REMOTE_CONFIGURAT ION
DCIM_JobService.DeleteJobs()	INVOKE	Login	LM_REMOTE_CONFIGURAT ION
DCIM_JobService.SetDeleteOnCompletionTimeout()	INVOKE	Login	LM_REMOTE_CONFIGURAT ION
DCIM_JobService.CreateJob()	INVOKE	Login	LM_REMOTE_CONFIGURAT ION
DCIM_LCRegisteredProfile	ENUMERATE, GET	Login	None.
DCIM_LCElementConformsToProfile	ENUMERATE, GET	Login	None.

521